

Solutions for : How To Specify Default Copy Settings

Solution : Specify Default Copy Settings

1. Login to System Administrator mode from the Control Panel. See the [Related Items](#) below for additional information.
2. Select **Service Settings**.
3. Select **Copy Service**.
4. Select **Feature Defaults**.
5. Make the desired changes to the settings on the following tabs:
 - o **Copy:**
 - o Output Color
 - o Reduce/Enlarge settings
 - o Paper Supply
 - o 2-Sided Copying
 - o Copy Output settings
 - o **Image Quality:**
 - o Original Type
 - o Image Options
 - o Image Enhancement
 - o Color Balance
 - o **Layout Adjustment:**
 - o Original Orientation
 - o Original Size
 - o Image Shift
 - o Edge Erase
 - o **Output Options:** Set Annotations for copy jobs.
 - o **Job Assembly:** Set Build Job options.
6. Select **Save Defaults** or the **Check Mark**.

NOTE: Not all options listed are supported on all printers. Some options apply only to a specific printer model, configuration, operating system, or driver type.

7. Logout of System Administrator mode. See the [Related Items](#) below for additional information.

