


HP Color LaserJet MFP E87660: Customize the Home Screen

Customize the home screen to display only the icons used on this copier/printer.

<p>1. Open a web browser and enter the IP address of the HP LaserJet.</p>	
<p>2. Select the General tab and navigate to the Home Screen Customization page.</p>	
<p>3. Arrange the items on the Home Screen by moving the icons in the screens below. Select which screen to customize by selecting one of the buttons at the bottom of the Home Screen.</p> <p>4. In these screens you may:</p> <ol style="list-style-type: none"> Search for Hidden Items in the search field to bring them to the Hidden Items screen. Drag and drop the items to a new location on the same page or to a different page. Create folders to store similar items. Drag apps and Quick Sets into folders. To remove items from the Home Screen, drag them to the Hidden Items screen. 	
	
<p>5. Select Apply at the top of the page.</p>	

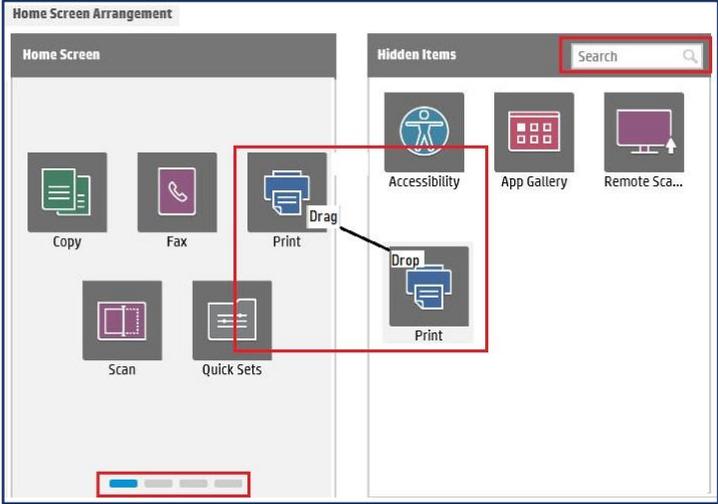