
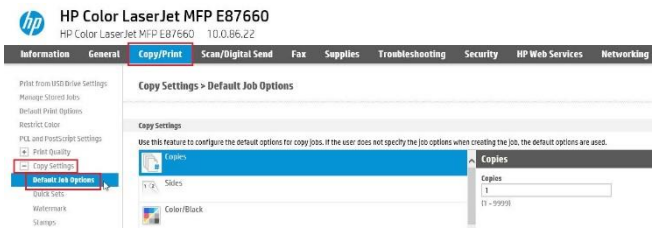
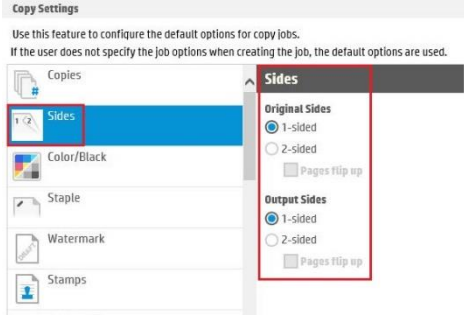


HP E Series: Setting Copy Defaults

<p>1. Open a web browser and enter the IP address of the HP LaserJet.</p>	
<p>2. Navigate to the Default Job Options page. Copy/Print, +Copy Settings, +Default Job Options.</p>	
<p>3. Select the feature on the left column, the right-side column displays the options for that feature.</p> <p>4. Set the defaults for that feature.</p> <p>5. Continue through all the features until all have been set with the necessary defaults.</p>	
<p>6. Select the Apply button located at the lower right-hand corner of the screen to save and close the default window.</p>	