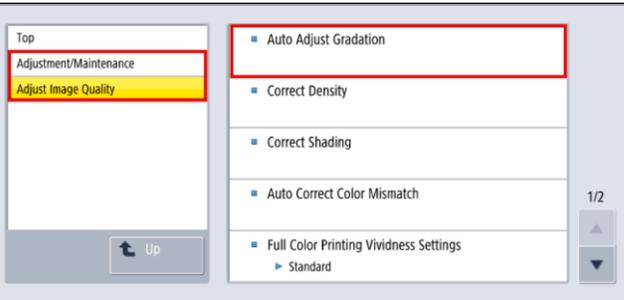
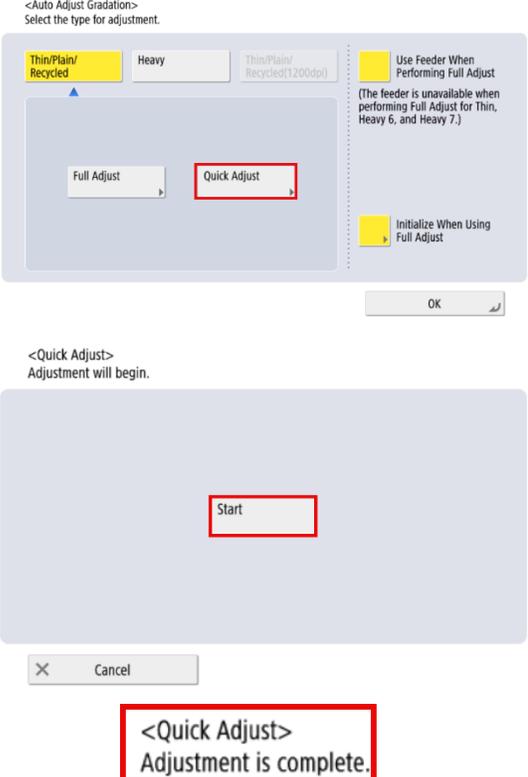


Canon ImageRUNNER Advance DX: Auto Gradation Adjustment


This function is an important initial step in improving color quality for copying and printing. It works by adjusting the toner density applied to the paper, helping to achieve more accurate and vibrant colors. A gradation adjustment may be necessary when working with heavy paper or media, as different thicknesses can affect toner application.

<p>1. From the home screen, select the Settings/Registration button.</p> <ul style="list-style-type: none"> • Log in if necessary. 	
<p>2. Select Adjustment/Maintenance → Adjust Image Quality → Auto Adjust Gradation.</p>	
<p>3. Choose the thickness of paper to adjust for: Thin/Plain/Recycled or Heavy.</p> <p>4. There are two types of Auto Gradation Adjustments:</p> <ul style="list-style-type: none"> • Quick Adjust: A convenient option for a short adjustment. Use this when: <ul style="list-style-type: none"> ▪ The machine receives frequent calibrations as part of routine maintenance. ▪ A color-specific job is approaching. ▪ Preparing the machine for linearization before calibrating the Fiery/Controller. • Full Adjust <ul style="list-style-type: none"> ▪ Best for significant adjustments when color or image quality needs correction (e.g., when blue appears green). <p>5. If performing a Quick Adjust: Select Quick Adjust → Start. When completed, you will see <Quick Adjust> Adjustment is complete.</p>	


6. If performing a Full Adjust: Ensure **Initialize When Using Full Adjust** is turned on.

7. Select **Full Adjust**.


- The Full Adjust performs precise linearization by printing and scanning test pages.

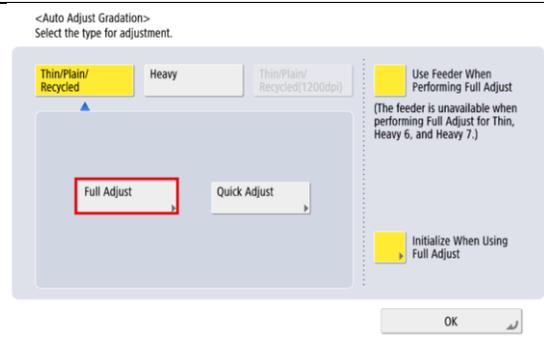

8. Select the drawer that contains the paper type to adjust → Select **OK**.

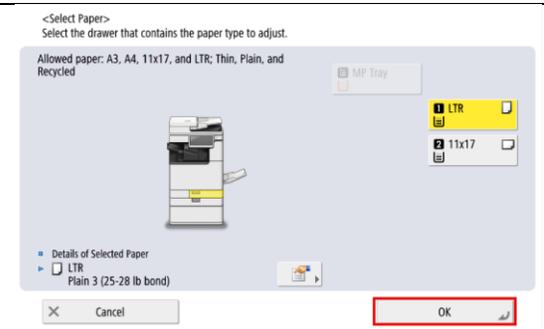


9. Select **Start Printing** to print the 3 test pages.

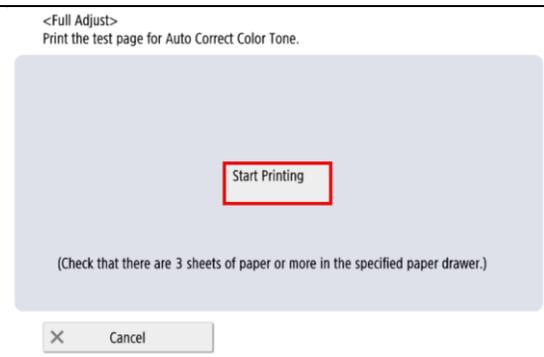

10. Place all 3 test pages in order in the feeder and select **Start Scanning**.

- If adjusting **Thin, Heavy 6, or Heavy 7**: Only 1 test page will print. Place the test page face down on the platen glass. Make sure the black bar is at the top edge of the glass.

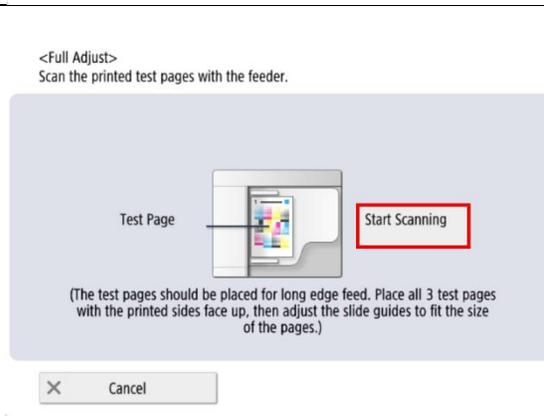

11. The adjustment may take a few minutes, when completed the machine says **<Full Adjust> Adjustment is complete**.

12. Close out of Settings/Registration once completed.

