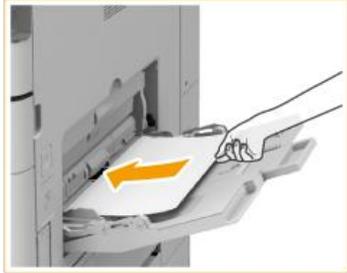
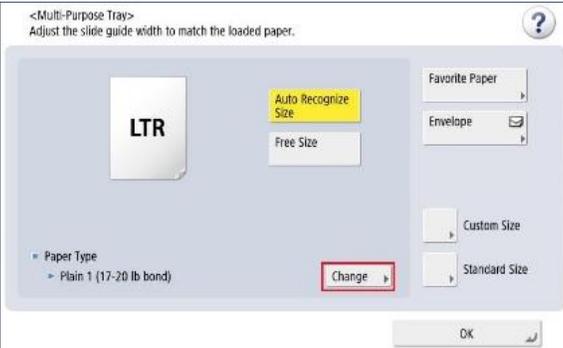


Canon ImageRUNNER Advance DX: Setting Paper Type in the Multipurpose Tray


This guide will go over how to use the Multipurpose Tray

At the Copier	
<p>1. Insert the paper into the multipurpose tray to open the multipurpose tray's Custom Size display window.</p>	
<p>2. Select Change to change the paper type.</p>	
<p>3. Select the corresponding paper type closest to the paper package information.</p> <ul style="list-style-type: none"> When determining which "Heavy" is the weight of the cardstock being used, open the Display Setting button to view a chart with the paper weights listed. <p>4. Select OK.</p>	

From the Computer

Access the Print Driver

1. Open the document.
2. Select **File>> Print**.
3. Select the **Canon** copier.

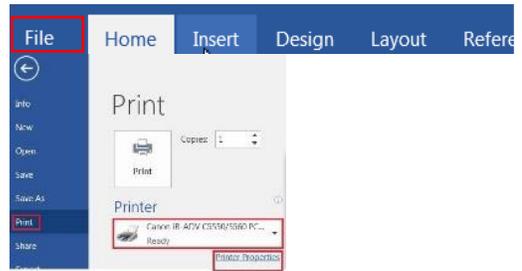

4. Select the **Paper Source** tab.
5. Choose the **Multipurpose tray**.
6. Select the paper type from the Settings button.
7. Click **OK**.

