
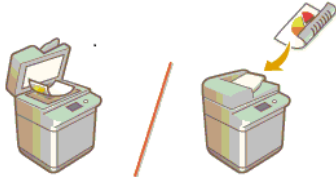
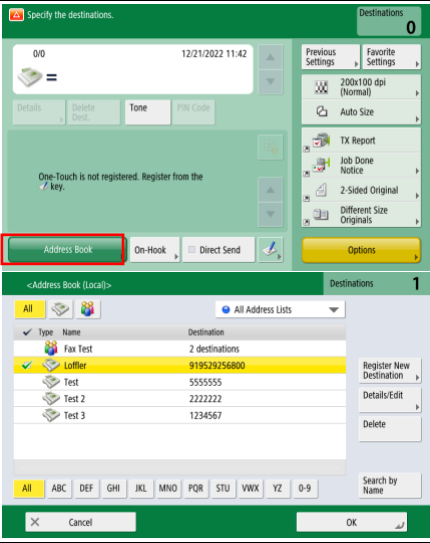
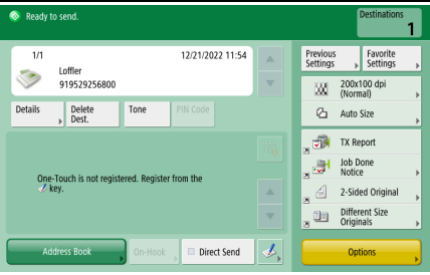
 


## Canon ImageRUNNER Advance DX: Faxing

This document will go over how to use the Fax feature.

<p>1. Select the Fax icon from the Main Menu screen</p>	
<p>2. Place the document in document feeder or on the glass platen.</p>	
<p>3. Enter a destination by one of two ways:</p> <ul style="list-style-type: none"> <li>• <b>Using the number pad:</b> If an outside line is accessed with a number, enter that number first <i>Example: 919529256800</i></li> <li>• <b>Using the Address Book:</b> Select Address Book and choose from the registered fax numbers.</li> </ul>	
<p>4. Select additional options as needed</p> <ul style="list-style-type: none"> <li>• 2-sided original, mixed sizes, resolution, etc</li> <li>• For more advanced features such as job build, select the <b>Options</b> button.</li> </ul>	
<p>5. Press the green <b>START</b> button to begin copying.</p>	
<p>6. To stop the job running, either press the <b>Cancel</b> button or if the status window is closed, press the <b>Stop</b> button.</p>	