 



Canon ImageRUNNER Advance DX: Memory Media – Using a Flash Drive at the Machine

This document will go over how to use the USB functions on the machine.

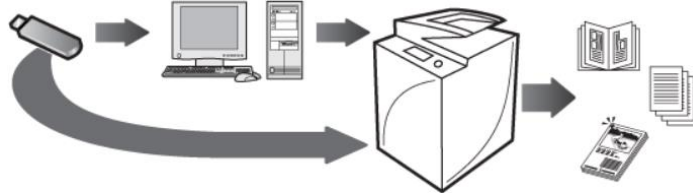


Scan & Store to USB Memory Media

 1. Select **Scan and Store**

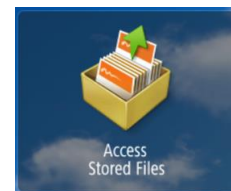


2. Insert USB Memory Media into side of machine

 
3. Select **USB Memory Media**

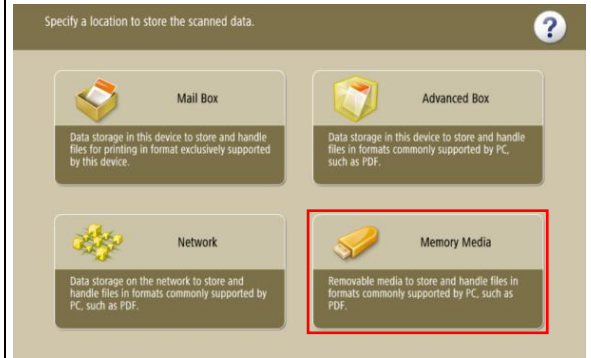

 
4. Select **Memory Media (A:)** to save a scan to your USB

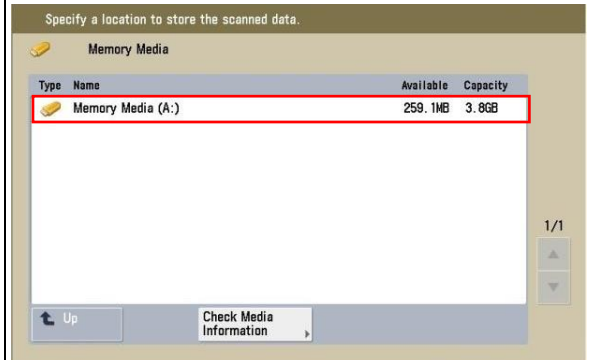

 
5. Select a folder or location to store scanned document(s)
- Folders can be created by selecting the **Create Folder** button

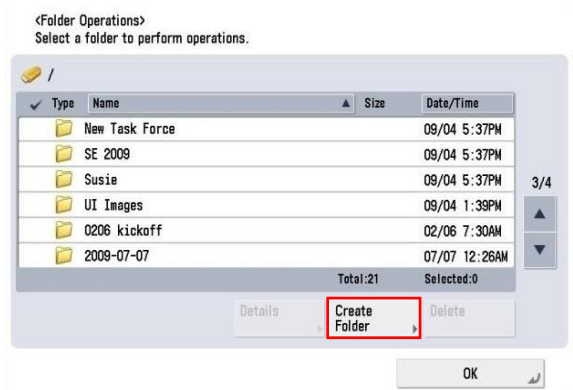

 6. Place the originals in the document feeder or platen glass
7. Press **Scan**

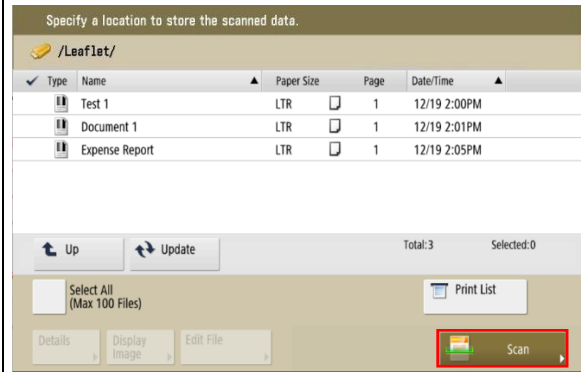

 8. Select **File Name** to name the document
- Scan settings can also be changed here

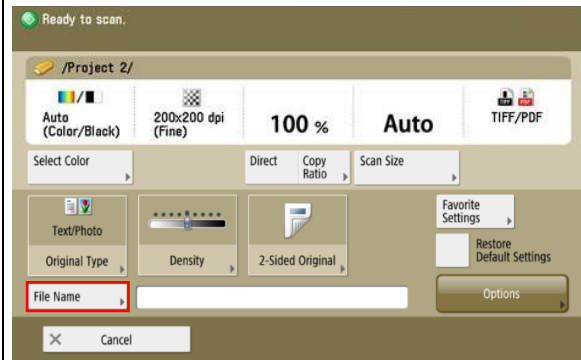


9. Name the document
10. Select **OK**

Note:


- The following character cannot be used in a file name \ | / : , * ? " < >
- The first or last characters of the file name cannot use a period or space
- If the document is not named, the machine automatically assigns the file a name use the Year, Month, Day and Time the file was created




- 11. Press the **Start** button
- 12. Select  to safely remove USB Memory Media




 - 13. Click **Remove**
- 14. Select **OK**
- 15. Remove USB Memory Media

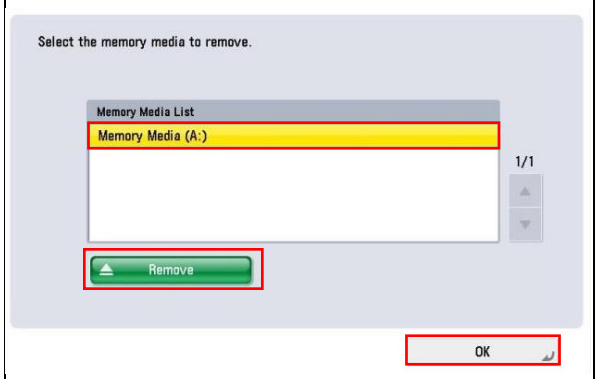


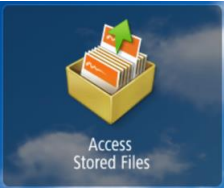
Access Stored Files & Print from USB Memory Media																										
<p>1. Select Access Stored Files</p>																										
<p>2. Insert USB Memory Media 3. Select USB Memory Media</p>	<p>Specify a location to store the scanned data.</p> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid #ccc; padding: 5px; width: 45%;"> <p>Mail Box</p> <p>Data storage in this device to store and handle files for printing in format exclusively supported by this device.</p> </div> <div style="border: 1px solid #ccc; padding: 5px; width: 45%;"> <p>Advanced Box</p> <p>Data storage in this device to store and handle files in formats commonly supported by PC, such as PDF.</p> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="border: 1px solid #ccc; padding: 5px; width: 45%;"> <p>Network</p> <p>Data storage on the network to store and handle files in formats commonly supported by PC, such as PDF.</p> </div> <div style="border: 2px solid red; padding: 5px; width: 45%;"> <p>Memory Media</p> <p>Removable media to store and handle files in formats commonly supported by PC, such as PDF.</p> </div> </div>																									
<p>4. Select Memory Media (A:) to view the files</p>	<p>Specify a location to store the scanned data.</p> <p>Memory Media</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Name</th> <th>Available</th> <th>Capacity</th> </tr> </thead> <tbody> <tr style="border: 2px solid red;"> <td></td> <td>Memory Media (A:)</td> <td>259.1MB</td> <td>3.8GB</td> </tr> </tbody> </table> <p style="text-align: right;">1/1</p> <p>Up Check Media Information</p>	Type	Name	Available	Capacity		Memory Media (A:)	259.1MB	3.8GB																	
Type	Name	Available	Capacity																							
	Memory Media (A:)	259.1MB	3.8GB																							
<p>5. Open the folder to locate the file you want to print 6. Select Print</p>	<p>Access Stored Files Copy Fax/I-Fax Inbox</p> <p>Select a file and specify the purpose.</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Name</th> <th>Paper Size</th> <th>Page</th> <th>Date/Time</th> </tr> </thead> <tbody> <tr> <td></td> <td>Test 1</td> <td>LTR</td> <td>1</td> <td>12/19 2:00PM</td> </tr> <tr> <td></td> <td>Document 1</td> <td>LTR</td> <td>1</td> <td>12/19 2:01PM</td> </tr> <tr> <td></td> <td>Expense Report</td> <td>LTR</td> <td>1</td> <td>12/19 2:05PM</td> </tr> <tr style="border: 2px solid red;"> <td></td> <td>Test 2</td> <td>LTR</td> <td>4</td> <td>12/19 2:26PM</td> </tr> </tbody> </table> <p>Up Update Total:4 Selected:1</p> <p>Clear Selection Print List</p> <p>Details Display Image Edit File Send Print</p>	Type	Name	Paper Size	Page	Date/Time		Test 1	LTR	1	12/19 2:00PM		Document 1	LTR	1	12/19 2:01PM		Expense Report	LTR	1	12/19 2:05PM		Test 2	LTR	4	12/19 2:26PM
Type	Name	Paper Size	Page	Date/Time																						
	Test 1	LTR	1	12/19 2:00PM																						
	Document 1	LTR	1	12/19 2:01PM																						
	Expense Report	LTR	1	12/19 2:05PM																						
	Test 2	LTR	4	12/19 2:26PM																						

 
- 7. To print as is, select **Start Printing**
- 8. Click **Change Print Settings** to adjust print settings

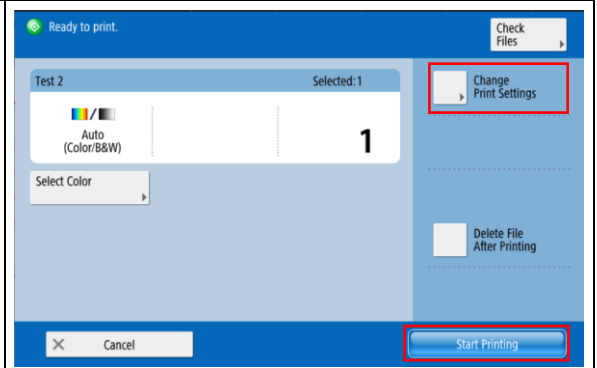

 - 9. Once settings are chosen, select **Start Printing**

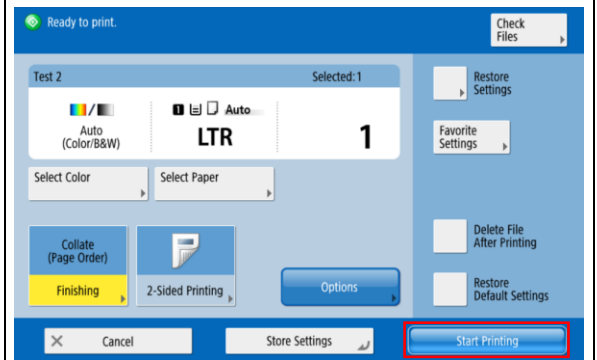

 - 10. Select  to safely remove USB Memory Media
- 11. Click **Remove**
- 12. Select **OK**
- 13. Remove USB Memory Media

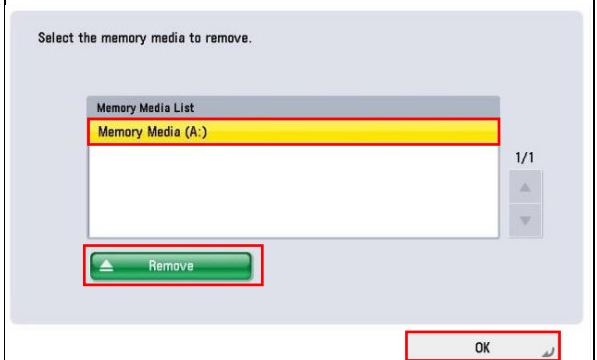


Troubleshooting

The following settings are required to use USB Memory


1. Log In as Administrator
2. Press **Settings/Registration** → **Preferences** → **Display Settings** → **Store Location Display settings**



 3. Select **ON** for **Memory Media** → Press **OK**

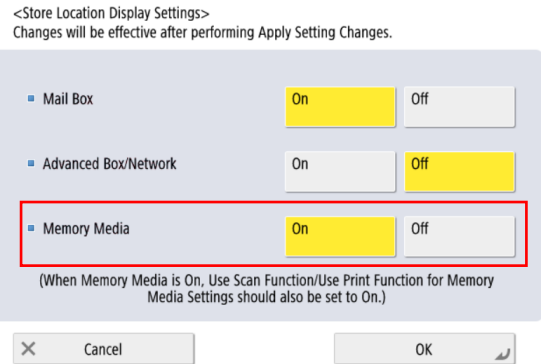

 4. Press **Settings/Registration** → **Preferences** → **External Interface** → **USB Settings** → **Use MEAP Driver for USB Input Device**
5. Select **Off** → Press **OK**

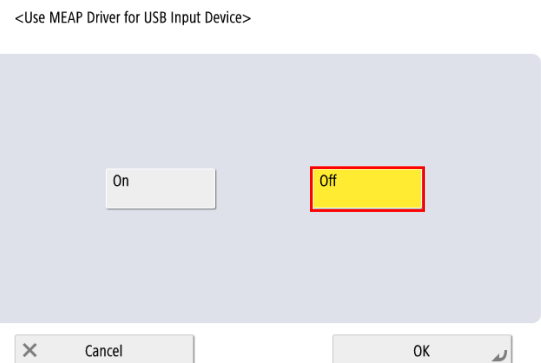

6. The copier will need to restart, select **Yes** for it to apply the changes
7. It will restart shortly

