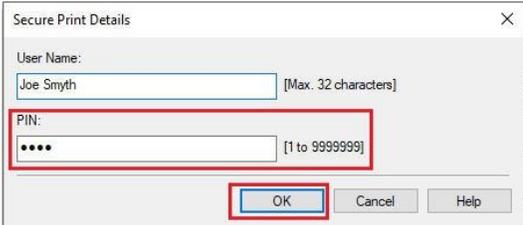
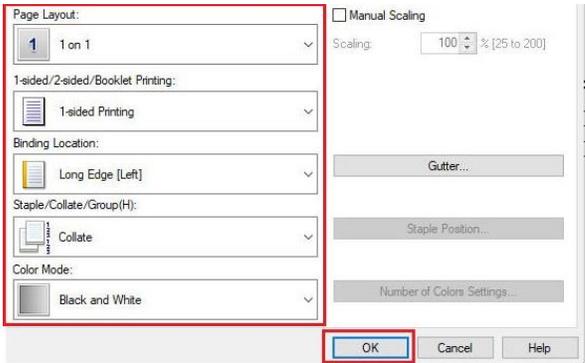
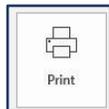
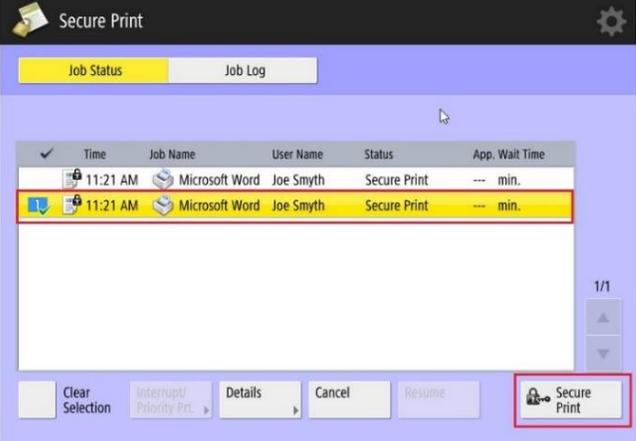
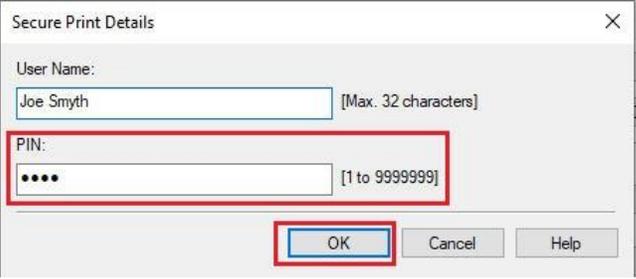


Canon ImageRUNNER Advance DX: Secure Printing

Confidential Printing using the Secure Print feature.

Sending a Document from the Secure Print Queue	
<p>1. From an open document: Select File → Print → Printer Properties.</p>	
<p>2. Under the Basic Settings tab: Select the Output Method drop-down menu and select Secure Print.</p>	
<p>3. Select Yes to confirm switching the Output Method.</p>	
<p>4. Enter a numerical PIN number.</p> <ul style="list-style-type: none"> PIN Code can be up to 7 digits. <p>5. Select OK to save and close the Secure Print Details window.</p>	
<p>6. Select print options as necessary (ex: color, 2-sided, staple, etc.).</p> <p>7. Select OK.</p>	
<p>8. Select the Print button to send the document to the Secure Print queue.</p>	

Releasing a Document from the Secure Print Queue

<p>1. Select the Secure Print icon from the Main Menu screen.</p> <p>Note: If Secure Print isn't visible on the Main Menu, swipe a finger to the right across the screen to access more pages (similar to a phone or tablet).</p>	
<p>2. Select one or multiple document(s) in the queue.</p> <p>3. Select the Secure Print icon.</p> <p>Note: Print jobs will automatically delete out of the Secure Print queue by a specific timeframe. (The manufacturer default is 1 hour.)</p>	
<p>4. At the prompt, enter the PIN number chosen in the print driver.</p> <p>5. Select OK to print the document.</p>	
<p>6. A message will appear to confirm the PIN code is authentic and the document has released to print.</p>	