

6 Operator Maintenance

Maintenance



Disconnect the mains power supply before performing any maintenance.

The user must not attempt to service the system beyond that described in this operator manual. All other servicing must be carried out by qualified service personnel only. Please contact your authorized distributor.

Maintenance Frequency	Maintenance
Daily	<ul style="list-style-type: none">• Check the system functions• Keep the system in proper condition by removing dust, paper remains, etc.• When dirty, clean the sealing table and rollers with a slightly wetted cloth, soaked in warm water.
Weekly	<ul style="list-style-type: none">• When dirty or saturated, clean the brushes of the envelope sealing (see Cleaning or Replacing Moistening Brushes).• Clean rollers (see Clean the System).

Cleaning or Replacing Moistening Brushes

See ["Filling the Sealing Liquid Reservoir"](#) on page 31 for the location of the brushes.

1. Open the system.
 2. Lift the sealing liquid reservoir with the blue handles carefully out of the system.
 3. Remove the three brushes.
 4. Clean the brushes with a small amount of water. If the brushes are worn, replace them with new ones.
 5. Install the brushes.
 6. Fill the tray with sealing liquid.
 7. Make sure the brushes are moistened sufficiently.
 8. Replace the liquid reservoir.
 9. Close the system.
-

Clean the system

1. Open the system.
 2. Clean the rollers. Use a cleaning product recommended by your authorized distributor and apply it with a lint-free cloth. Wipe each rubber roller while turning it manually.
 3. Clean the casing of the system with a damp cloth and a slightly soapy solution.
-