



PostBase Mini

Franking machine



Operator Manual Reference Guide

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,
download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

About this Manual

This Operator Manual is directed at the users of the PostBase Mini franking machine.

This Operator Manual contains all relevant information on handling the PostBase Mini. Functions that are described here but are not available for each PostBase Mini (among other things because of postal requirements in the individual countries) are identified as *(not available in all countries)*.

Further documents

The **Installation instructions** (flyer) and the **First steps** manual which were supplied with your PostBase Mini contain all relevant information on installing, commissioning and handling the PostBase Mini.

Information on country-specific features and particularities can be found in the **Addendum to the Operator Manual** *(if available in your country)*.

Safety tips

The following keywords and signs identify the safety tips in this manual:



Warning! indicates a potential hazard that may result in injury.



Caution! indicates a potential hazard that may result in damage to the machine or impair the franking process.

PostBase Mini

In this manual, the product name appears in its plain form 'PostBase Mini'.

Text features and symbols

The following symbols and text features are used in this manual:

- Bullets precede instructions.
- Dashes precede list items.

Menu names and options from the operating menu are written in small capitals, e.g. MENU.



A tip offers advice or additional suggestions for improving the operation.

Illustrations

The display figures in this manual are generic examples that may differ from the actual display on your PostBase Mini. As currency, Euro is used exemplarily.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

About this Manual	2
1 Safety tips	6
2 A short description of the PostBase Mini	8
3 Installation and commissioning	11
Step 1: Unpacking and checking the contents of the package	11
Step 2: Assembling PostBase Mini	12
Step 3: Removing the transport fixture	13
Step 4: Connecting PostBase Mini	14
Step 5: Turning the PostBase Mini on	15
Step 6: Installing PostBase Mini	15
4 The basics of operation	21
4.1 Turning the PostBase Mini on / off	21
4.2 Standby	22
4.3 Screen elements and operation philosophy	23
4.3.1 The touch screen	23
4.3.2 The Home screen	25
4.3.3 The Product calculation menu	26
4.3.4 The Menu	28
4.3.5 Lists	28
4.3.6 Adjustment menus	29
4.3.7 Pop-up windows	30
4.3.8 Procedures (wizards)	31
5 Setting the franking imprint	32
5.1 Product / postage	33
5.1.1 Setting a product via shortcut	33
5.1.2 Setting mailing data	34
5.1.3 Setting the weight – Weighing the mail piece	35
5.1.4 Setting the weight manually (<i>not in all countries</i>)	36
5.1.5 Setting the postage manually (<i>not in all countries</i>)	36
5.2 Advertising imprint	37
5.3 Date (<i>not changeable in all countries</i>)	38
6 Franking	39
6.1 Changing the user (<i>optional</i>)	39
6.2 Selecting / changing an account	40
6.3 Positioning and franking a letter	41
6.4 Displaying and resetting the piece counter	42
6.5 Using PostBase Mini in 'PC Mode' (<i>optional</i>)	43

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

7	Displaying and printing registers	44
8	Download postage (<i>subject to country-specific regulations / not available in all countries</i>)	46
9	Special functions	47
9.1	Print advert only	47
9.2	Print Numbers	48
10	Account administration	50
10.1	Switch account function on / off	50
10.2	Display account information	51
10.3	Set one account to zero	51
10.4	Set all accounts to zero	51
11	Advanced settings & system information	52
11.1	System information	52
11.2	Display brightness	52
11.3	Sound signals	53
11.4	User interface language	54
11.5	Standby time	54
11.6	Auto Off	55
11.7	Meter type (<i>not in all countries</i>)	55
11.8	Connection to data centre	56
11.9	View contact information	59
11.10	Access control / PIN	60
11.11	Auto Postage Download (<i>not in all countries</i>)	61
11.12	Remote Services	63
11.13	Change Postal Code (ZIP) / Re-authorisation (<i>not in all countries</i>)	63
12	Maintenance and care	64
12.1	Cleaning the PostBase Mini	64
12.2	Checking the ink level	65
12.3	Changing the ink cartridge	65
12.4	Aligning the ink cartridge	69
12.5	Cleaning the print system	71
12.5.1	Starting automatic print system cleaning	71
12.5.2	Cleaning ink cartridge by hand	72
12.6	Checking the print function	73
12.7	Move the motor of the print system to reference position	74
12.8	Calibrating the touch screen	74
12.9	Replacing the battery	75

13 Tips for troubleshooting	77
13.1 Error messages	77
13.2 Problems and remedies	77
14 Withdrawal and disposal of the PostBase Mini	83
Appendix	
Overview of symbols	85
Technical Data	89
Declaration of conformity	91
License	92
Security Declaration for data usage	94
United States Patents	94
Index	95
Customer Support / Warranty	103

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

1 Safety tips

PostBase Mini is a digital franking machine with ink-jet print technology for franking mail. PostBase Mini complies with the pertinent safety regulations for office information equipment.

Please observe the following tips for your own safety:

Prevention of electrical hazards

- Operate the PostBase Mini only on a grounded single-phase power socket. Make sure your office power supply conforms to the power requirements indicated on the power supply unit's serial number plate.
- Use only with specified power supply unit: XP POWER LTD. - VEH40US24.
- Make sure the socket for connecting the PostBase Mini is close by and easily accessible at all times.
- Unplug the mains plug in case of an emergency. Call the Customer Support.
- Take special care that no foreign objects or liquids penetrate the interior of the PostBase Mini.
- Unplug the mains plug prior to cleaning the PostBase Mini.

Prevention of mechanical hazards

- Do not remove any equipment related to safety or protection. Do not make them inoperative or unable to function.
- Do not remove any parts of the housing.

Accessories and consumables

- We recommend to use only approved FP equipment and FP original parts. The manufacturer FP has established reliability, safety and applicability. The manufacturer cannot assess the reliability, safety and applicability for products not approved by FP, and therefore not vouch for such products. The full functioning of the PostBase Mini franking machine at the time of delivery can only be guaranteed when using original Francotyp-Postalia ink cartridges.
- Use only the power supply unit provided with the PostBase Mini or approved by Francotyp-Postalia. Make sure that the power supply unit is not damaged.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

- Use the supplied cables or cables that have been approved by Francotyp-Postalia. Make sure that cables are not damaged.
- Ingestion of the ink can be hazardous to health. Avoid contact with the eyes. Keep the ink cartridges away from children. Further instructions for use are enclosed with the ink cartridge.
- We recommend to use only the batteries provided by Francotyp-Postalia. The manufacturer FP has established reliability, safety and applicability. Observe the instructions enclosed with the battery for correct use and disposal.


General safety tips

- Install the PostBase Mini according to the instructions.
- When you move the PostBase Mini from a cold environment (i.e. below 10 °C / 50 °F): Unpack the PostBase Mini and wait at least two hours before connecting the PostBase Mini. The PostBase Mini requires this period to adapt to the ambient conditions. Any condensation evaporates.
- Have maintenance and repair work done only by qualified personnel authorised by Francotyp-Postalia. Otherwise, your warranty may become void.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

2 A short description of the PostBase Mini

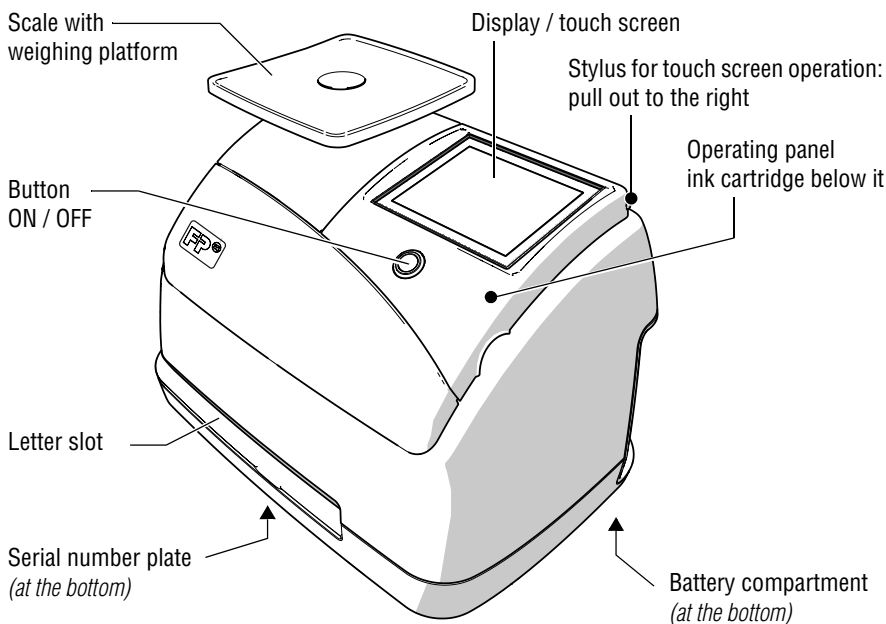

Connections (view from the right)

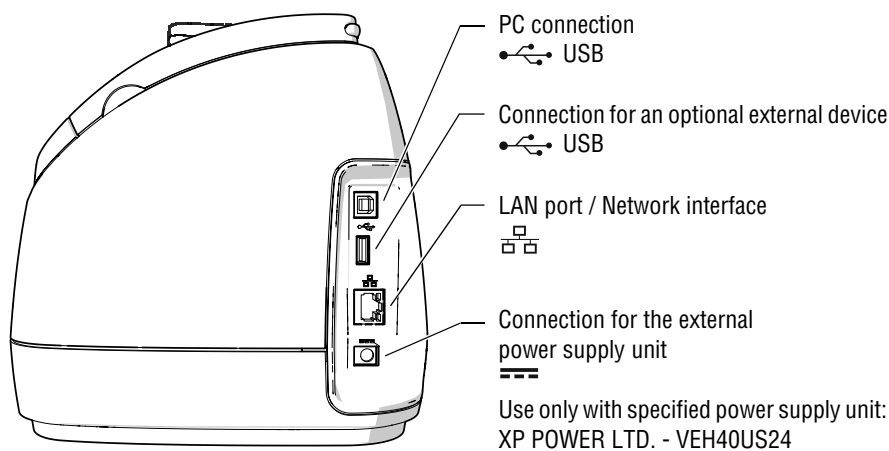

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Things worth knowing about PostBase Mini

PostBase Mini is a digital franking machine for small mail volumes featuring a touch screen. It stands out due to its compact design and intuitive handling. The reliable ink-jet technology delivers clean franking imprints.

Intuitive handling

PostBase Mini makes do with only a single button, arranged in the centre: for switching on and off. For all other operations, the clearly designed user interface in the 3.5 inch colour display guides you fast and easy to the desired destination.

Franking

Simply switch on the PostBase Mini, select a postal product, position a letter – done!

Franking is possible on mail pieces made of ink-absorbing material – postcards to 6 mm (0.23") thick letters in ISO B4 format – and special self-adhesive labels.

Letters as advertising medium

In addition to printing postage, you can print an advertisement of your choice on every mail piece you send.

When using the optional PC control software, this can also be a text message (*if available in your country*).

Download postage

You conveniently download the postage for franking online from the data centre into your franking machine. If desired, PostBase Mini can also, by itself, make sure there is always sufficient postage available and prompt you automatically to download postage.

(Availability and handling of features relating to postage accounting depend on the respective countries.)

Remote Services: flexible and up to date

The PostBase Mini ensures you are always using the current postal rates. Whether new postage rates, new adverts or a software update – the franking machine downloads current data from the data centre.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Additional functions

Weighing – the space saving, integrated scale quickly and reliably determines the weight of letters and parcels. The determined weight directly affects the product settings.

Account function – PostBase Mini allows for registration and billing of postage costs to accounts.

Access control – PostBase Mini can be protected against unauthorised use via a PIN (Personal Identification Number).

Controlling PostBase Mini via PC software *(optional)*.

Francotyp-Postalia offers software for controlling and administration of the PostBase Mini franking machine via PC, e.g. NavigatorBasic, NavigatorPlus, RemoteOne, ReportOne *(not available in all countries)*.

3 Installation and commissioning


Step 1: Unpacking and checking the contents of the package



Warning! Do not start operating PostBase Mini if parts are damaged or missing. Please contact the Customer Support.



Caution! Carry out the steps exactly in the given order. Also, consult the installation instructions (fold-out).

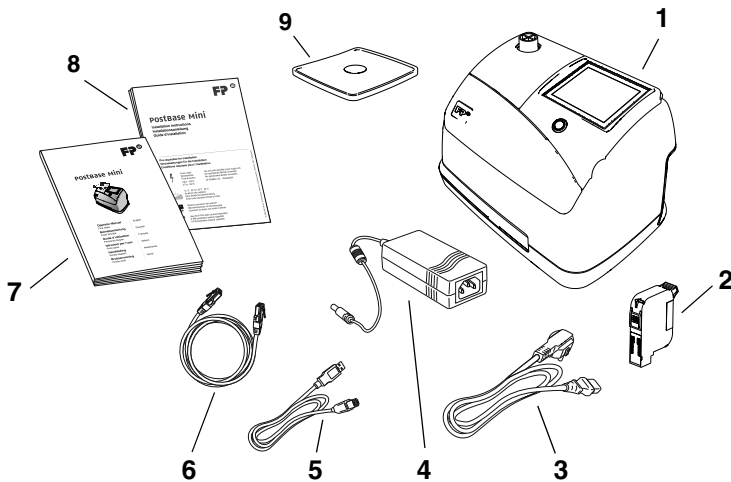

- 1 PostBase Mini franking machine
- 2 Ink cartridge
- 3 Power cable
- 4 Power supply unit
- 5 USB cable
- 6 Ethernet cable
- 7 'First steps' manual
- 8 Installation instructions (flyer)
- 9 Weighing platform (*version as ordered*)

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

- Unpack the packages.
- Check that the contents of the packages are complete and free from any damage.




Keep the packing and the transport fixture for the print system. Use it again when you need to transport PostBase Mini or send it in to service.


Step 2: Assembling PostBase Mini



Caution! When you move PostBase Mini from a cold environment (i.e. below 10 °C / 50 °F): Unpack the PostBase Mini and wait at least 2 hours before connecting PostBase Mini. PostBase Mini requires this period to adapt to the ambient conditions.

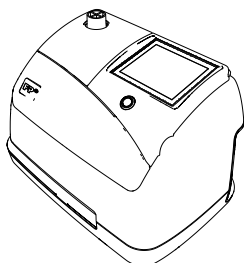

- Choose an installation site with the following ambient conditions:
 - room temperature: 15 °C to 35 °C (59 °F to 95 °F)
 - no direct sunlight
 - power socket in the immediate vicinity
 - network connection with internet access.
- Place PostBase Mini on a firm, level, low vibration and horizontal base.
- Remove the protective foil from the display.

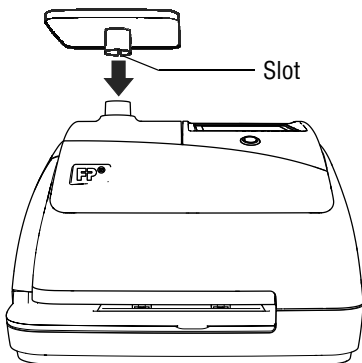

Mounting the weighing platform

- Hold the weighing platform such that the slot in the weighing platform foot points to the back.
- Place the weighing platform onto the scale receptacle from above. The slot of the weighing platform must slide in the counterpart on the scale receptacle.
- Press down slightly on the weighing platform with your flat hand.

Works Cited:



FP. "Operator Manual." PostBase Mini Support, June 2015,

Step 3: Removing the transport fixture

A transport fixture (cardboard) is inserted in the ink cartridge holder as a transport protection for the print system.

Remove the transport fixture:


- Lift up the operating panel as far as it goes. It snaps in this position.

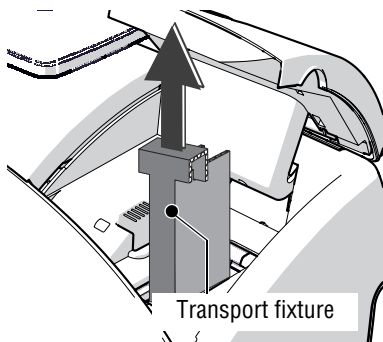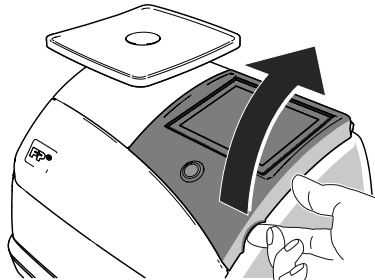

- Pull the cardboard (transport fixture) up out of the cartridge holder.

Note: Do not insert the ink cartridge until later in the installation process (step 6)!

- Lower the operating panel back into position.

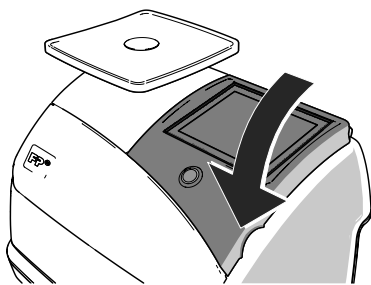

Keep the transport fixture (cardboard). use it again whenever you need to transport your PostBase Mini, or when sending it to the customer support.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Step 4: Connecting PostBase Mini




Warning! Use only the power supply unit provided with the PostBase Mini or approved by Francotyp-Postalia. Make sure that the power supply unit is not damaged.

Use the cables provided with the PostBase Mini or approved by Francotyp-Postalia. Make sure that cables are not damaged.

Connect PostBase Mini only to a grounded single-phase power socket. Make sure your office power supply conforms to the power requirements indicated on the power supply unit's serial number plate.

Make sure the socket for connecting PostBase Mini is close by and easily accessible at all times.

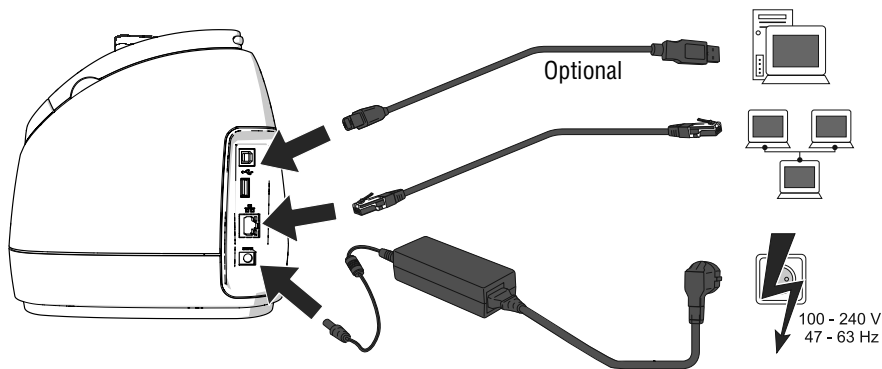


- Connect the franking machine to a local area network (LAN).
- Connect the franking machine to a PC (optional).
- Plug the mains plug of the power supply unit into the power connection of the franking machine. Connect the power cable to the power connection of the power supply unit. Only then, plug the power cable into the power socket.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Step 5: Turning the PostBase Mini on

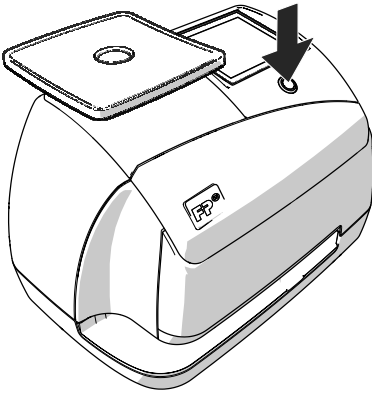

- Press the button on the operating panel.

The display lighting and button illumination switch on. PostBase Mini performs a self test and then starts the installation procedure.


Step 6: Installing PostBase Mini

PostBase Mini will guide you step by step through the installation procedure. This chapter covers a selection of the most important steps. Follow the instructions on the display.



For information on handling the touch screen and an overview of screen elements, please read chapter 4.3.


- Have the R-PIN ready (received separately).
- Touch the button with the desired **language**.
- Confirm with the ➤ button and continue the installation procedure.

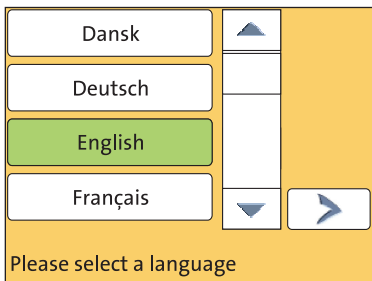


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,


download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

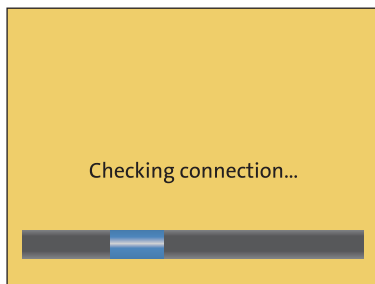

PostBase Mini comes with pre-set connection settings that should work in most cases.

- Press the  button to use these settings.

PostBase Mini tests the connection to the FP Infrastructure.

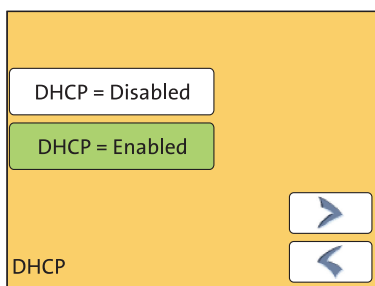

If no connection can be established, the wizard for entering connection parameters is opened.


- If necessary: Enter the connection parameters. If need be, ask your network administrator for details.




For details on possible settings, please read the appendix "Connection settings (Overview)" in the "First steps" Operator Manual.



Caution! *PostBase Mini may reboot several times during installation. Do not unplug the machine!*

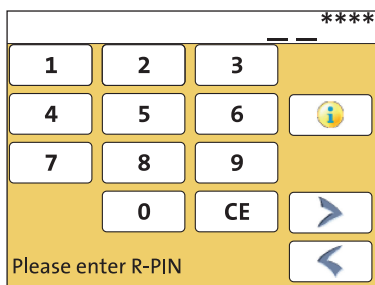


- Enter the **Repository-PIN** (R-PIN).
- Confirm with the  button.

PostBase Mini now downloads the software and data, then reboots.

- Follow the instructions on the display.

Works Cited:


FP. "Operator Manual." PostBase Mini Support, June 2015,

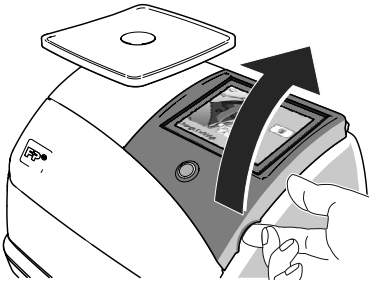


PostBase Mini then asks you to **insert the ink cartridge**.

- Lift up the operating panel as far as it goes. You can feel it engage.
- Remove the ink cartridge from the packing.
- Remove the nozzle protection.

For details, please refer to the instruction leaflet that comes with every cartridge.

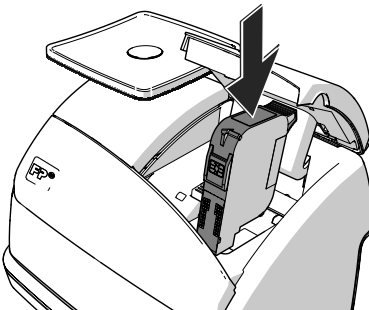

- Hold the ink cartridge so the contacts are facing to the front of the franking machine.
- Insert the ink cartridge into the socket.
- Push the ink cartridge all the way down. You can feel the ink cartridge engage. A little green latch locks the ink cartridge into position in the cartridge holder.

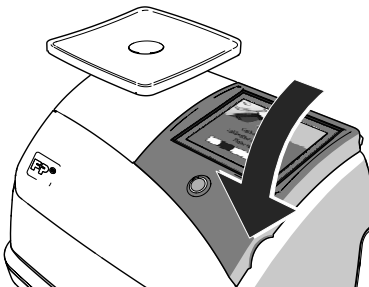


- Lower the operating panel back into position.

PostBase Mini calibrates the cartridge ...



Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

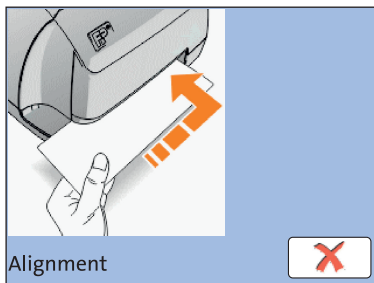

Test print (example)

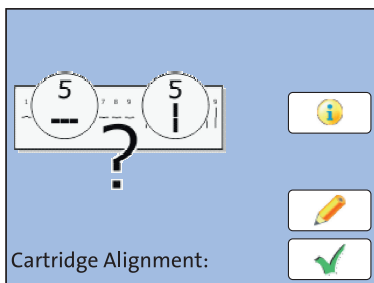 

... and prompts you to perform a **test print**.

- Place an empty envelope at the right hand edge of the letter slot and push in as far as it goes.

As soon as the sensor (in the back right hand corner of the letter slot) detects the envelope, the PostBase Mini grips the envelope tightly and prints the test print.



- On the test print, determine the numbers where
 - the horizontal lines are as exactly next to each other as possible and
 - the vertical partial lines are as exactly above each other as possible.

The ink cartridge is correctly aligned when horizontal and vertical partial lines form one line each at number 5.

- Confirm with the button.

When horizontal and / or vertical partial lines do not form one line each at number 5:

- Press to continue the procedure of ink cartridge alignment.

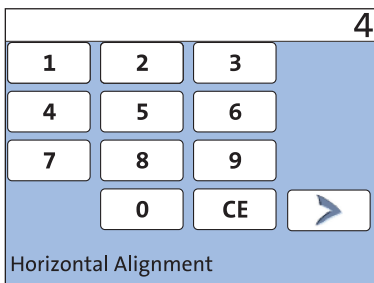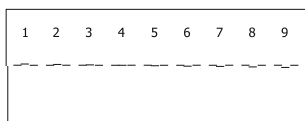


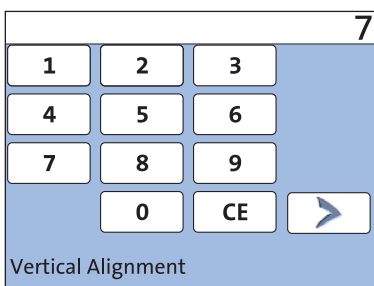
 
Adjust cartridge: horizontal line

- Type the number where the horizontal partial lines are as exactly next to each other as possible.

In the example, this is number '4'.

(If necessary: Press CE to clear the displayed number.)

- Confirm and continue with .




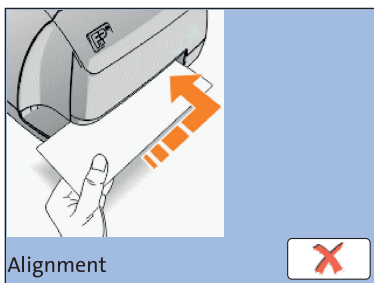
Adjust cartridge: vertical line

- Type the number where the vertical partial lines are as exactly above each other as possible.

In the example, this is number '7'.

(If necessary: Press CE to clear the displayed number.)

- Confirm and continue with .




- Place an empty envelope for another test print.
- Assess the test print. If necessary, repeat the alignment procedure until a correct alignment has been obtained.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,


download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

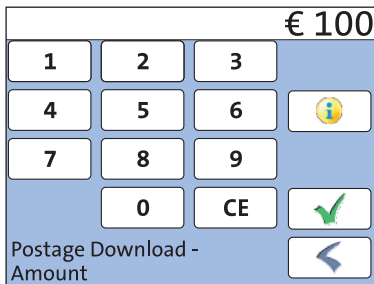

- Contact to the data centre / load postage.

To be able to frank with your PostBase Mini, the PostBase Mini must have the corresponding **postage credit** available. For this, a connection to the data centre is necessary. The exact process, permissible loading amounts, as well as postage accounting depend on postal regulations of the respective countries.

Home screen (example)

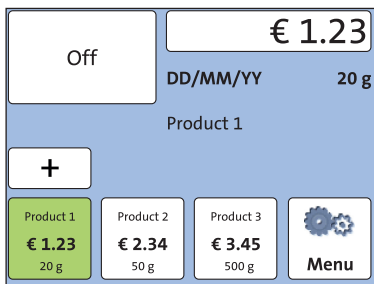

PostBase Mini shows the Home screen.

Installation is complete.



In the MENU, you can configure the system settings of your PostBase Mini to your liking (display brightness, tone signals, standby time, access control via PIN ...). You also have access to the account function of the PostBase Mini in the MENU.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

4 The basics of operation

In this chapter, you will learn about the basic functions of the PostBase Mini and how to handle the touch screen.

4.1 Turning the PostBase Mini on / off

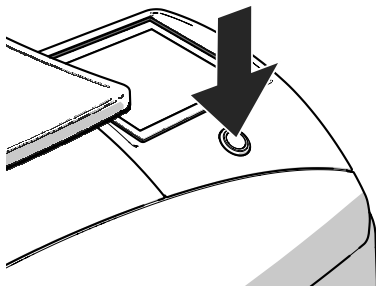


Turning on

- Press the button on the operating panel.

The display lighting and button illumination switch on. The PostBase Mini performs a self test and then displays the Home screen.

When access control is active, PostBase Mini prompts you to enter the PIN during the start routine.

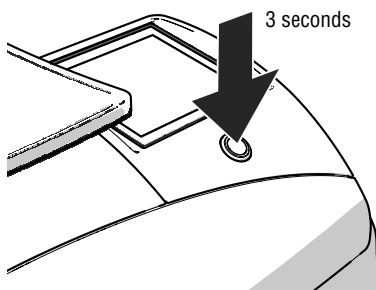

Turning off

- Press the button for **three seconds**.

The PostBase Mini will complete any current actions and then switches off. The display light and button illumination go out and the touch screen is deactivated.

Disconnecting from mains



Caution! Make sure to always turn the PostBase Mini off before disconnecting the PostBase Mini from mains. Never pull the mains plug or separate the power supply in any other way before the printing system has reached its sealed position. This is the only way to prevent drying up and to ensure a permanently high print quality

- Press the button ON/OFF for **three seconds** to turn the franking machine off.

The display light and button illumination go out.

- Unplug the mains plug of the power supply unit from the socket.

4.2 Standby

The PostBase Mini franking machine will go to standby automatically if it is not used for some time.

The display is dark and the button is illuminated in standby. The touch function is inactive.


You can 'wake up' PostBase Mini by briefly pressing the button.

4.3 Screen elements and operation philosophy

This chapter covers the user interface of the PostBase Mini franking machine. You will learn how to operate the touch screen, the screen elements and the menus, window types and symbols.


4.3.1 The touch screen

The touch screen is active when the display is lit. To operate the PostBase Mini, simply touch the screen elements with your finger.

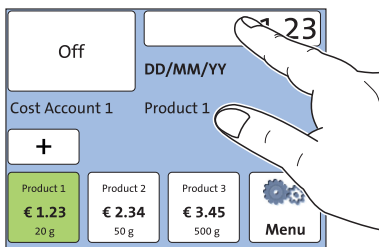


General operation philosophy

You briefly touch the desired screen element (in the example: the postage button) with your finger. PostBase Mini performs the corresponding action.

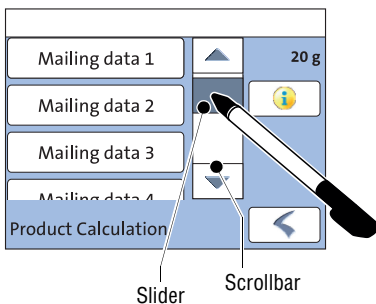

You can operate scrollbars with the arrows or by touching the slider and moving it. The setting is updated when you lift your finger off.

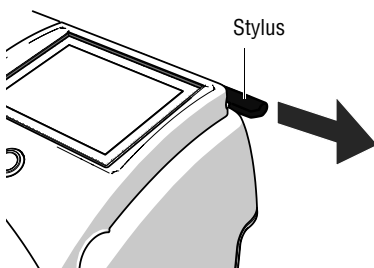

Stylus

You can also use the supplied stylus instead of your finger. The stylus is located behind the operating panel. You can pull it out to the right.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Buttons

You distinguish buttons from the screen background by a frame. They can have various states, depending on the function:



Button can be pressed / is active.



Button is selected.



Button is being pressed.



Button cannot be pressed / is deactivated.

Standard buttons

The term 'standard button' refers to common functions like:



OK / Save – confirm an entry, a message, a security prompt.
Save the displayed setting.



Cancel – abort entry / function.



Back – to the previous window / higher-level menu. Go back one step / level.



Continue – acknowledge a message, accept the current setting and proceed to the next step.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

4.3.2 The Home screen

The Home screen appears after the machine was turned on and the start routine has been successfully completed. It shows the current franking settings at a glance.

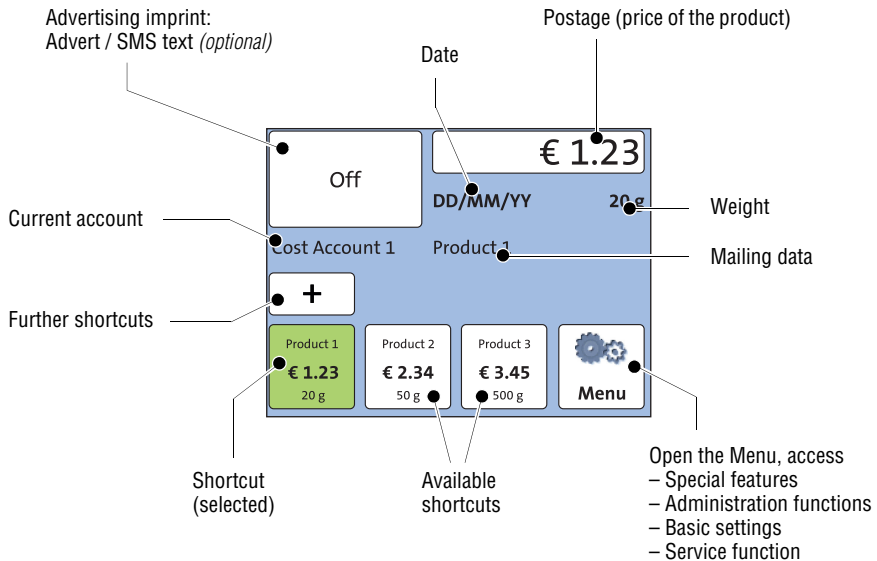

- Functions* In the Home screen
- you have access to all franking imprint settings
 - you frank your mail pieces
 - you can weigh your mail pieces
 - you can open the Menu
 - current settings are displayed.

- Operation philosophy* A function can be edited or selected by simply touching its button. Depending on the respective function, the PostBase Mini opens a list, an adjustment menu or a menu offering further options. In the chapters to follow, you will be introduced to each of the menu and window types and their operation.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.


4.3.3 The Product calculation menu

In the Product calculation menu, you set the product for franking.

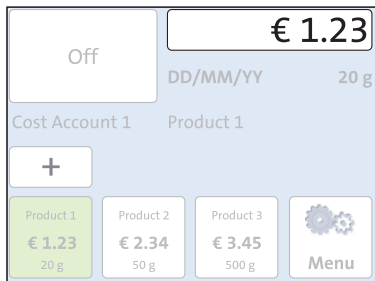

Calling up the Product calculation menu

You open the Product calculation menu by pressing the button showing the postage value.

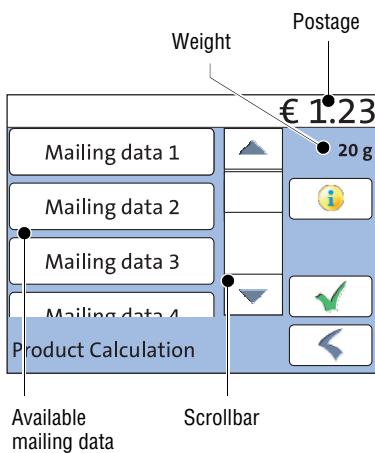



The left area of the display shows the available mailing data.

You can scroll the list with the scroll bar if more than three options are available.

The set weight for product calculation appears to the right in the display.

The postage and the ✓ button only appear if all necessary mailing data were selected.

You can view the selected mailing data with the ⓘ button.

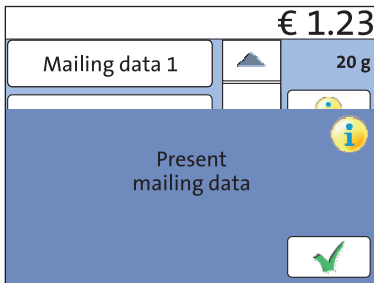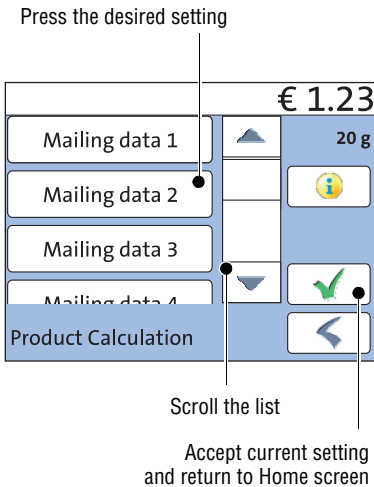

Set product for franking

Cancel Product calculation menu

Selecting mailing data

You select the mailing data for a product by pressing the button with the desired setting.

PostBase Mini applies your selection and shows the next available mailing data to the left in the display. PostBase Mini guides you through the postage calculation process step by step.

Press the button to accept the current setting and to return to the Home screen.

Deselecting mailing data

You can erase the mailing data step by step with the button.

Display current mailing data

To view the selected mailing data, press the button.

PostBase Mini displays the current mailing data in a pop-up window.

Close the pop-up window with the button.

Returning to the Home screen

With the button, you set the selected product for franking and return to the Home screen.


Deselect all mailing data and cancel the Product calculation menu with the button. The product set last remains set in the Home screen.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.


4.3.4 The Menu

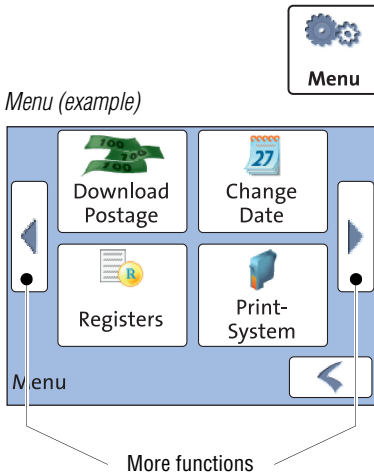

Use the MENU button to open the Menu. From this Menu, you can access the basic settings, administration, and service functions.

Use the arrow buttons to scroll to the next page and back in the Menu.

4.3.5 Lists

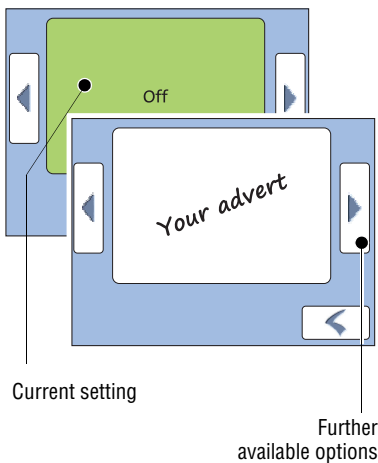

Lists (e.g. for adverts) offer all available settings. The current setting is shown with a green background.

Use the arrow buttons to scroll forward or backward.

Press the respective button to select one of the provided settings.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

4.3.6 Adjustment menus

A separate menu each opens for editing and selecting settings. There are different types of adjustment menus, for example lists where you select a setting or menus with a keypad for entering figures or letters.

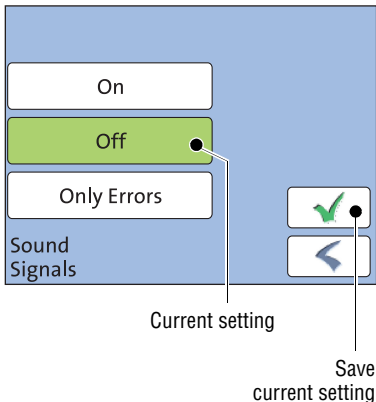


Lists

The left area of the display shows the available settings. The current setting is shown with a green background.

You can scroll the list with a scroll bar if more than four options are available.

Press the button to save the current setting and to quit the adjustment menu.

Press the button to leave the adjustment menu without saving any changes.

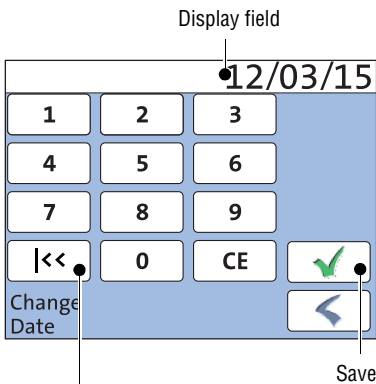

Button assigned according to function (here: reset to current date)

Input via keypad

Use the keypad to input values. The display field indicates your input.

The keypad is always matched to the respective situation: The button labels change accordingly, depending on whether you must type figures or figures and letters.

The bottom left button is assigned a special function matched to the current operation. In the adjustment menu for setting the franking date, for example, this is 'reset to current date'.


Press CE to clear input.

Press the button to save the current setting and to quit the adjustment menu.

Press the button to leave the adjustment menu without saving any changes.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

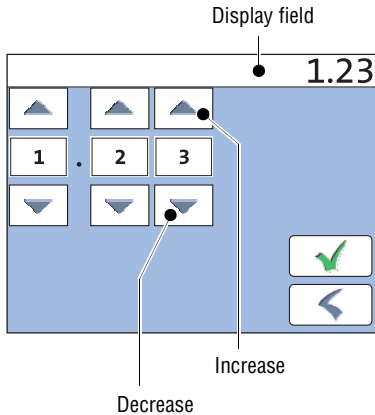



Input using the counter principle

(not in all countries)


For some particular settings, PostBase Mini may require you to enter values via a counter principle.

Mode of operation: Use the arrow buttons to increase or decrease the figure in each digit until the desired amount is displayed in the top of the display.

Press the  button to save the displayed amount.

Press the  button to leave the adjustment menu without saving any changes.


4.3.7 Pop-up windows

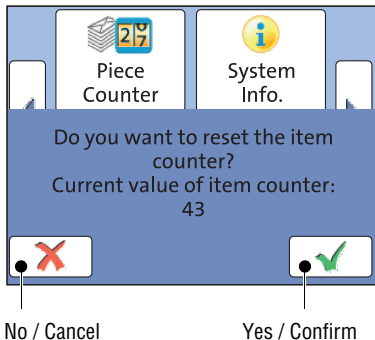


For some settings, a window covering parts of the current window opens (pop-up window). The pop-up prompts you for an action. Messages and the 'PC Mode' (using the PC control software for PostBase Mini) also appear as a pop-up.

Some pop-up messages feature auto-confirmation, i.e. they automatically close after some time.


4.3.8 Procedures (wizards)

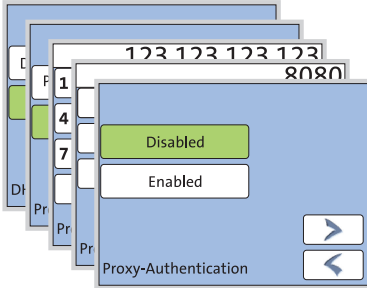


For more complex settings, e.g. when setting up connection data, PostBase Mini guides you through all necessary actions step by step. Different window types are used, depending on requirements.

Press the  button to accept the current settings and to go to the next step.

You can press the  button to return to previous steps.

Pressing the  button in the first screen of the procedure will discard all settings and close the procedure.

5 Setting the franking imprint

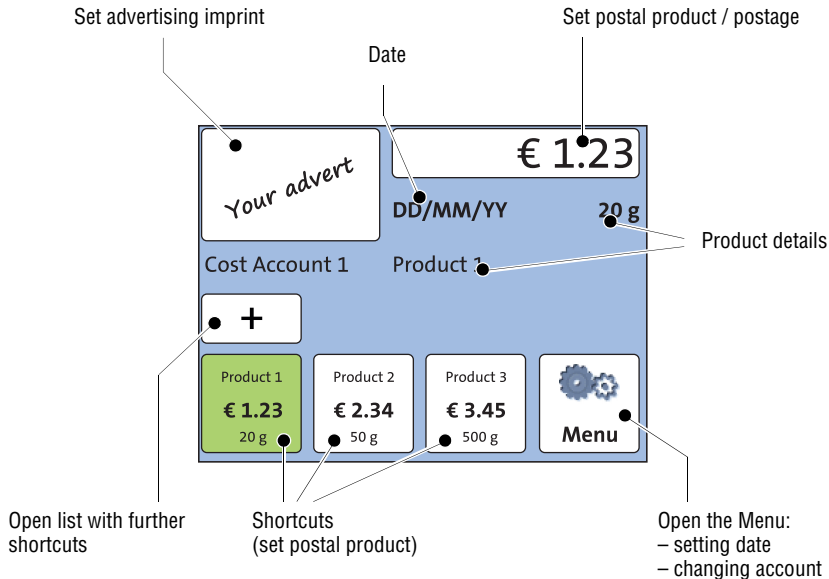

This chapter describes the required settings for franking and the additional possible advertising imprint:

- Postage / postal product (see chapter 5.1)
- Advertising imprint (see chapter 5.2)
- Date (see chapter 5.3).

Detailed information on the franking imprint of your postal service can be found in the country-specific addendum.



For information on how to use the optional PC control software from Francotyp-Postalia (e.g. Navigator, RemoteOne) to set the franking imprint, please refer to the manual provided with the software.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.


5.1 Product / postage

PostBase Mini sets the postage, i.e. the price for the postal product using the chosen mailing data (destination, type, mail piece dimensions and additional services if applicable), in conjunction with the displayed weight.

Use the shortcuts to fast and easily set up a product.

5.1.1 Setting a product via shortcut

The franking machine comes ex factory with typical postal products stored as shortcuts. You can directly view and retrieve three products in the Home screen at the touch of a button. Via the **+** button, you can display and call up further shortcuts. There are up to 10 shortcuts available. Upon activation of a new rate table, the shortcuts will be erased and re-programmed.

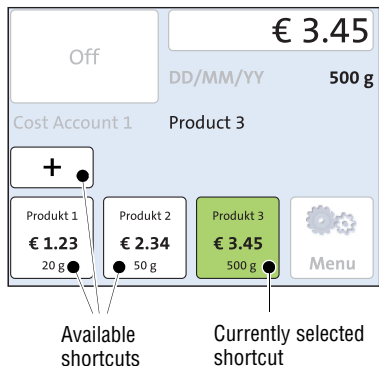

- In the Home screen, press the desired shortcut button.
- If necessary: weigh the mail piece.

The product with the related postage is set for franking.

Further shortcuts

- In the Home screen, press the **+** button.

PostBase Mini opens a list with further shortcuts.


- Press the desired shortcut button.

PostBase Mini sets the product with the related postage and returns to the Home screen.



For details on how to save products as shortcuts via the optional PC control software from Francotyp-Postalia (e.g. Navigator, RemoteOne), please refer to the manual provided with the software.


5.1.2 Setting mailing data

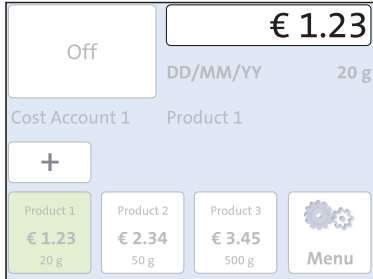

In the Home screen:

- Press the postage button.

PostBase Mini opens the Product calculation menu.

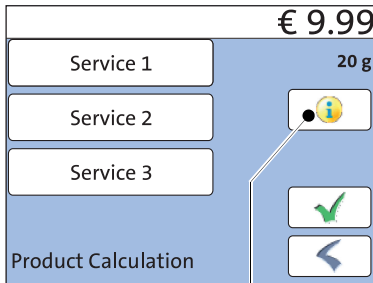


Display selected mailing data

PostBase Mini prompts you for all required details regarding the mail piece.

- Select the respective desired setting by pressing the button.

The postage appears as soon as all necessary mailing data have been selected.

If the desired mailing data have been set:

- Press the  button to accept the current setting and to return to the Home screen.

Works Cited:


FP. "Operator Manual." PostBase Mini Support, June 2015,

5.1.3 Setting the weight – Weighing the mail piece



Caution! Please observe the following notes on handling the scale:

- Please heed the maximum weight of 2 kg (5 lb).
 - Place large mail pieces on the scale so that these are not touching the housing of the PostBase Mini. This prevents you getting false weighing results.
 - The scale only determines a new weight if it was emptied before. Therefore, always empty the weighing platform prior to putting on a mail piece for weighing.
-

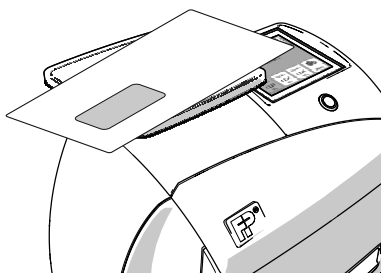

- In the Home screen, place the mail piece on the weighing platform.


Note:

When the sound signals of the PostBase Mini are ON a beep indicates that the scale has determined the weight.

The weight determined by the scale is now set. PostBase Mini sets the postage based on the displayed weight and the selected mailing data.


5.1.4 Setting the weight manually *(not in all countries)*

For certain products, the PostBase Mini offers the possibility to enter the weight manually. This feature is necessary for mail pieces that exceed the scale's weighing range (>2 kg / >5 lb).

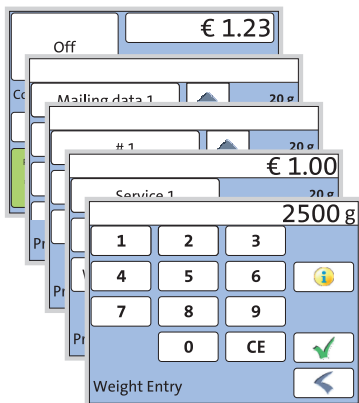

- Call up the Product calculation menu.
- Select the desired mailing data as usual.
- Press the button which offers the 'Weight Entry' option.


PostBase Mini opens an adjustment menu where you can set the weight.

- Enter the weight.
- Confirm with .

PostBase Mini uses the set weight to calculate the postage.


5.1.5 Setting the postage manually *(not in all countries)*

There may be particular cases where PostBase Mini does not offer the desired mailing data and thus cannot calculate the postage. In such a case, PostBase Mini offers the possibility to enter the postage value manually.

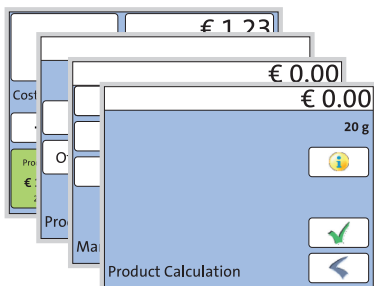

- Call up the Product calculation menu.
- Select appropriate option(s) from the list *(country-specific)*.
It may be called 'Other' for example.

PostBase Mini opens an adjustment menu where you can set the postage.

- Enter the desired postage and confirm.
- Press the  button to accept the displayed product setting and to return to the Home screen.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

5.2 Advertising imprint

With the franking imprint, PostBase Mini can print an advertising imprint of your choice on your mail piece. Advertising imprints may be:

- Graphical advertisements
- Text messages / SMS texts (*optional, not in all countries*).

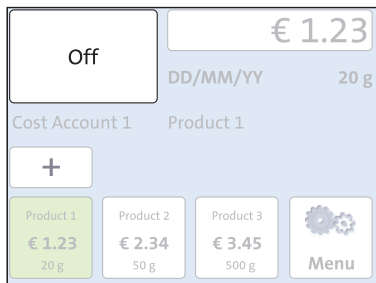

Setting the advertising imprint

In the Home screen:

- Press the advertising imprint button.

You see a list with all available advertising imprints.



- Touch the desired advertising imprint.

The PostBase Mini returns to the Home screen. The advertising imprint is set for franking.



You can only create and save SMS texts as advertising imprints in the PostBase Mini with the optional PC control software from Francotyp-Postalia (e.g. NavigatorBasic, RemoteOne). For details on how to enter text and manage adverts on the PC, please read the manual provided with the software.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

5.3 Date *(not changeable in all countries)*

The date for the franking imprint is set automatically to the current date by the built-in clock. You can forward the date for the franking imprint. The PostBase Mini rejects invalid input, e.g. a franking date too far in the future or backward dating.

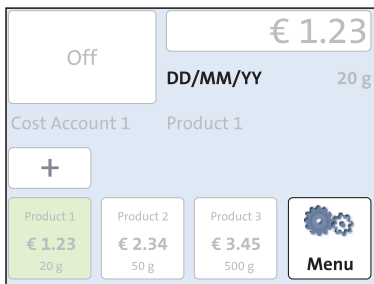

Setting the franking date

In the Home screen:

- Press the MENU button.



- Select CHANGE DATE.


PostBase Mini opens the CHANGE DATE adjustment menu.

- Type the date.

You can press the |<< button to reset the franking date to the current date.

- Press the ✓ button to save the displayed date.

The Home screen shows the currently set date.

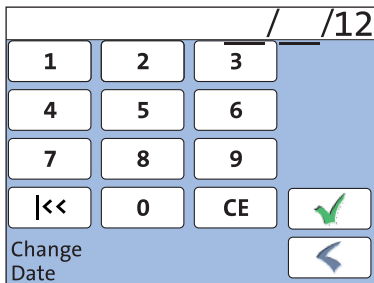

Franking without date *(not in all countries)*

In the CHANGE DATE adjustment menu:

- Clear the displayed date with CE.
- Press the ✓ button to save the setting.

6 Franking

In this chapter, you can read how to frank your mail pieces with the PostBase Mini. You will learn how to set the account to register the postage used and how to insert letters correctly. Also, the counter function available for franking is described.

Please refer to chapter 5 on page 32 for detailed information on how to set franking imprint parameters.


6.1 Changing the user *(optional)*

A user-specific access control for the PostBase Mini can be set up via the optional PC control software from Francotyp-Postalia (e.g. NavigatorBasic, RemoteOne).

In this case, you are prompted to select a user and enter the corresponding PIN during startup. PostBase Mini loads the corresponding user profile. Among other things, the following settings are stored in the user profile:

- name
- PIN
- budgets
- allocated account(s) and the standard account
- allow / block postage download.

On how to set up and manage users, please refer to the manual of the PC software.

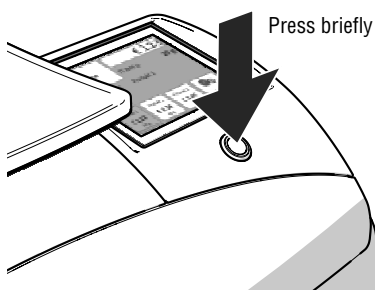

Changing the user

- **Briefly** press the button on the operating panel.

You see the list of users.

- In the list, press the button of the desired user.
- Enter the PIN.

PostBase Mini loads the user profile and then shows the Home screen.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

6.2 Selecting / changing an account

When the account function is active, PostBase Mini books all frankings to the currently set account. The currently set account is displayed in the Home screen.

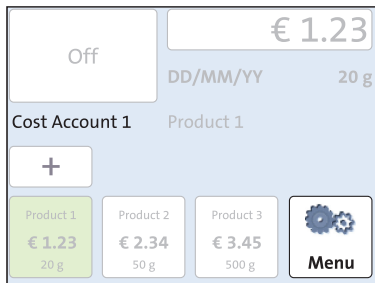


Changing the account

- Open the MENU.



- Press the SELECT ACCOUNT button.

The PostBase Mini opens the SELECT COST ACCOUNT adjustment menu. You see the account names and numbers of the available accounts. The currently set account is shown with a green background.

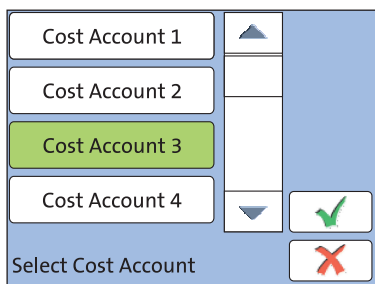

- Press the button of the desired account.

The selected account is shown with a green background. (In the example, this is COST ACCOUNT 3.)

- Confirm with .
- In the MENU, press  to return to the Home screen.

The selected account is set for franking.



If users are enabled on your PostBase Mini, only those accounts allocated to the currently set user are available.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.


6.3 Positioning and franking a letter

You can use the PostBase Mini to frank postcards and letters up to a thickness of 6 mm (0.23"). For thicker mail pieces, frank the empty envelope or use the special franking labels of at least 140 mm (5.5") length. You can order suitable labels for the PostBase Mini from Francotyp-Postalia.

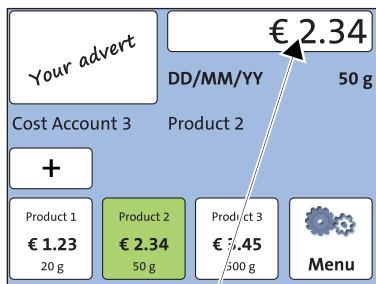

PostBase Mini is ready for franking

You can feed mail pieces to frank when the Home screen displays the desired settings for franking.

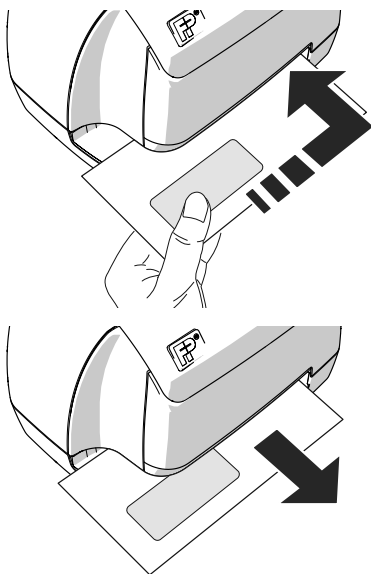

- Insert the letter:
 - side to be printed face up
 - top edge first.
- Place the letter at the right hand edge of the letter slot and push in as far as it goes.

As soon as the sensor (in the back right hand corner of the letter slot) detects the letter, the PostBase Mini grips the letter tightly and prints (franks) it.

During franking, a message informs you about the printing process.

Do not remove the letter until the Home screen reappears and the PostBase Mini releases the letter.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

6.4 Displaying and resetting the piece counter


Apart from the counter for franking imprints in the register and the account counters, the PostBase Mini features a piece counter for franking imprints you can use as you like. The piece counter counts all franking imprints. You can reset this piece counter to zero or use it as a daily or job counter.




Displaying current counter value


- Open the MENU.
- Select PIECE COUNTER.

The PostBase Mini opens a pop-up displaying the number of franked mail pieces since last resetting the piece counter.

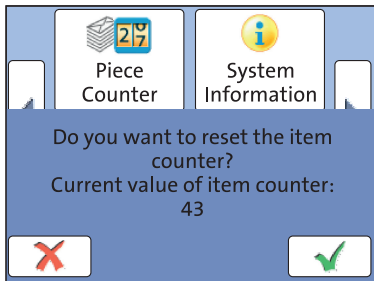

- Press the  button to return to the MENU without clearing the counter.

Resetting the piece counter to zero

- In the pop-up, acknowledge the query with the  button.


The piece counter is reset to zero.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

6.5 Using PostBase Mini in ‘PC Mode’ *(optional)*

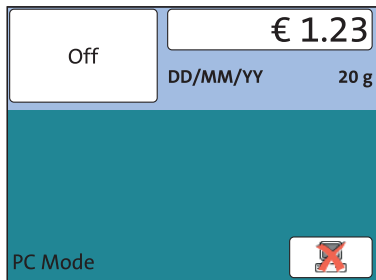

When PostBase Mini is connected to a PC via the optional FP software (e.g. Navigator, RemoteOne), a corresponding pop-up is shown (similar the example shown left). Access to the imprint settings and menu functions is blocked on the PostBase Mini while in ‘PC Mode’.

All imprint settings are done on the PC. The current settings (postage, advertising imprint and date) are shown on the PC and in the display of the PostBase Mini.

Position a letter on the PostBase Mini as usual to frank it.

Quit ‘PC Mode’

- In the pop-up, press the  button.

The connection between PostBase Mini and the PC is disconnected. Menu and imprint settings are accessible via the PostBase Mini touch screen again.




For information on how to use the PC control software from Francotyp-Postalia, please refer to the manual (integrated help feature) provided with the software.

7 Displaying and printing registers

PostBase Mini saves important parameters and information on used postage in registers. You can view and print the register states.



- Open the MENU.
- Select REGISTERS.

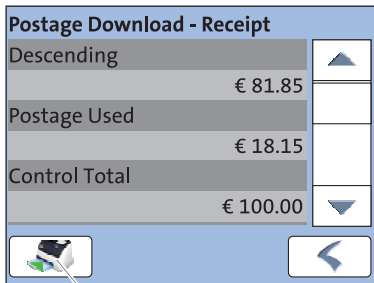

PostBase Mini displays the current register states.

Print receipt

The registers store the following information:

DESCENDING	Available postage (= credit)
POSTAGE USED	Total value of all franking imprints performed
CONTROL TOTAL	Sum total of all loaded sums
TOTAL ITEMS	Number of all franking imprints performed
LAST AMOUNT	Last amount loaded
LAST DATE	Date and time of last postage loading


Note: Depending on country-specific regulations, the contents of the registers may vary from the information shown in the list above.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Printing register report

- In the POSTAGE DOWNLOAD - RECEIPT screen, press the  button.
- Place a label or a folded sheet (folded edge first) in the letter slot.

PostBase Mini prints the register report.



For further information on 'Positioning and printing' refer to chapter 6.3 on page 41.

8 Download postage

(subject to country-specific regulations / not available in all countries)

To load postage, you connect to the data centre with your franking machine and call the desired amount. Billing occurs according to your contract with the postal service. Refer also to the country-specific addendum in case there is further information on the loading process.

If users are enabled, postage download might not be available. In that case, please contact the administrator.



Loading postage

- Make sure PostBase Mini is ready to connect to the data centre (network cable is connected, correct connectivity settings).
- Open the MENU.
- Select DOWNLOAD POSTAGE.
- Accept the amount to be loaded.

Or

Type the desired amount.

- Confirm the amount displayed with ✓.

To load the displayed amount:

- Confirm the security prompt with ✓.

PostBase Mini will then establish a connection to the data centre. Loading continues automatically. Please stand by. Data exchange may take some time.

The new residual amount is indicated when loading ends.

- Use the ⓘ button to view and print the 'Postage Download - Receipt'.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,


9 Special functions

9.1 Print advert only

With the special function 'Advert Only', you can print advertising imprints (graphical adverts and text messages) that are stored in your PostBase Mini.



- Open the MENU.
- Select SPECIAL FUNCTIONS.
- Select ADVERT ONLY.

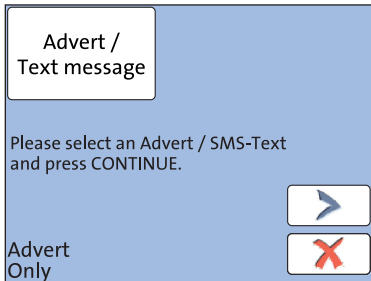

PostBase Mini opens the ADVERT ONLY menu.

The advertising imprint button on the upper left shows the set print image for this special function.

Selecting the advertising imprint

- Press the advertising imprint button.


PostBase Mini opens the list of all available advertising imprints.

- Touch the desired advertising imprint.

The PostBase Mini returns to the ADVERT ONLY menu. The selected advertising imprint is set for printing.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

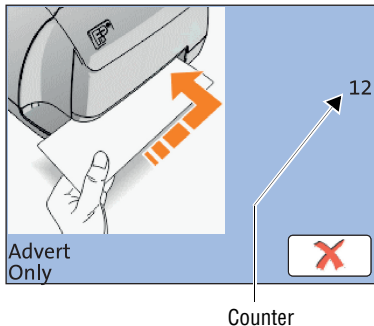

Printing the advert

To print the displayed advert / text message:

- Press the  button to continue.
 - Insert an envelope, a label or a folded sheet (folded edge first) into the letter slot.
- For further information on 'Positioning and printing' refer to chapter 6.3 on page 41.

The 'Advert Only' special function has its own counter. PostBase Mini shows the number of imprints on the right side of the display. When quitting this function, the counter is reset to '0'.


9.2 Print Numbers

With the special function 'Print Numbers', you can print a 6-digit consecutive number vertically on your mail. You can set any start number and choose the direction of counting (ascending or descending).



- Open the MENU.
- Select SPECIAL FUNCTIONS.
- Select PRINT NUMBERS.

PostBase Mini opens the adjustment menu for the 'Print Numbers' function.

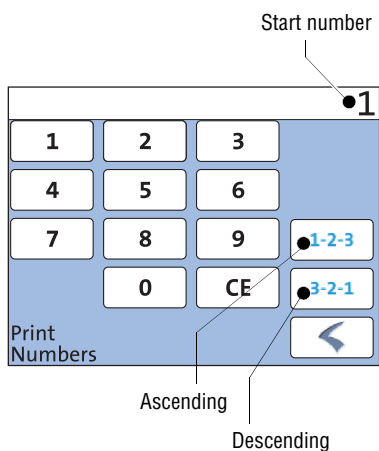


Setting the start number

- Enter the desired start number. You can choose any number between 1 and 999999.

Setting the direction of counting

When the desired start number is displayed:

- Press the button for the desired direction of counting (Ascending or Descending).

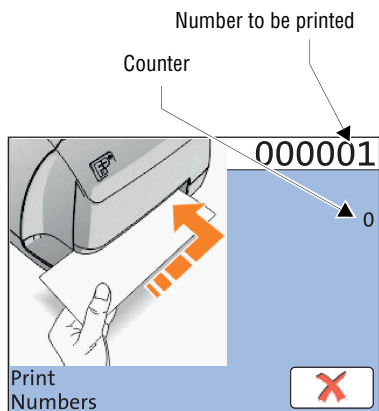

PostBase Mini applies start number and direction of counting. You can start printing numbers.

- Insert an envelope or a label into the letter slot.

For further information on 'Positioning and printing' refer to chapter 6.3 on page 41.

The 'Print Numbers' special function has its own counter. PostBase Mini shows the number of imprints below the number to be printed. When quitting the 'Print Numbers' function, the counter is reset to '0'.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

10 Account administration


The account function of the PostBase Mini offers you the possibility of registering and evaluating frankings separately according to accounts, i.e. according to the sending persons or departments of a company.

If user management is enabled via the optional PC control software, the account administration features are only available to the administrator.

10.1 Switch account function on / off



Switching on

- Open the MENU.
- Select MANAGE ACCOUNTS.
- Press the  button to switch on the account function.

The account function of the PostBase Mini is enabled.




Switching off

- Open the MENU.
- Select MANAGE ACCOUNTS.
- Select DEACTIVATE.



Caution! When switching the account function off, any data stored in the accounts will be lost.

To switch off the account function:

- Confirm the security prompt with .

The account function of the PostBase Mini is disabled.



While the account function is disabled, the settings stored in the user profiles lie idle.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

10.2 Display account information



- Open the MENU.
- Select MANAGE ACCOUNTS.
- Select SHOW LIST.

PostBase Mini displays the list of accounts containing the respective number and value of franked letters.

10.3 Set one account to zero



- Open the MENU.
- Select MANAGE ACCOUNTS.
- Select CLEAR ONE ACCOUNT.
- Select the account you want to set to zero.
- Press the ➤ button to continue.
- Confirm the security prompt with ✓.

All account information (postage and number of franking imprints) of the selected account is deleted.

10.4 Set all accounts to zero



- Open the MENU.
- Select MANAGE ACCOUNTS.
- Select CLEAR ALL ACCOUNTS.
- Confirm the security prompt with ✓.

All account information (postage and number of franking imprints) is deleted.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

11 Advanced settings & system information

11.1 System information

You can view a list of all major system parameters (e.g. software version, rate table).



- Open the MENU.
- Select SYSTEM INFO.

PostBase Mini displays the system information.

11.2 Display brightness

You can adapt the display brightness to fine-tune the gray scales and increase the legibility of the displayed texts.



- Open the MENU.
- Select DISPLAY BRIGHTNESS.


PostBase Mini opens the adjustment menu for display brightness.

- Use the BRIGHTER / DARKER buttons to achieve the desired setting. You can press the buttons multiple times to increase / decrease display brightness further.

Or

- Select DEFAULT to reset display brightness to the factory setting.

You can monitor the changes immediately in the display. Alter the settings until you can easily read the display.

- Press  to save the current setting.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,


11.3 Sound signals

PostBase Mini confirms certain actions with a beep. A series of sound signals indicates an error. You can restrict the scope of audible signals to warnings or turn off the audible signals altogether.



- Open the MENU.
- Select SOUND SIGNALS.

PostBase Mini opens the adjustment menu for sound signals. The current setting is shown on a green background.

- Select the desired setting.
- Save the setting shown with .

Sound signals – possible settings and their meaning:

ON	Audible signals in case of errors. Confirmation beep of the scale when weighing is finished.
OFF	No audible signals.
ONLY ERRORS	Audible signals in case of errors.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

11.4 User interface language

The PostBase Mini user interface supports multiple languages.




- Open the MENU.
- Select LANGUAGE.

PostBase Mini opens the language adjustment menu. The current setting is shown on a green background.

- Select the desired setting.

The user interface language changes immediately.

- Save the setting shown with .

The set language will be kept until you change it again.


11.5 Standby time

The PostBase Mini franking machine will go to standby automatically if it is not used for some time. The standby time is the time between your last operation and the time PostBase Mini automatically goes to standby.



- Open the MENU.
- Select STANDBY TIME.

PostBase Mini opens the standby adjustment menu.

- Type the desired time.
- Save the specified standby time with .

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,


11.6 Auto Off

The PostBase Mini franking machine switches off automatically if it is not used for some time. The Auto Off time is the time between your last operation and the time PostBase Mini automatically switches off.



- Open the MENU.
- Select AUTO OFF.

PostBase Mini opens the adjustment menu for the Auto Off feature.

- Type the desired time.
- Save the specified Auto Off time with .



Enter '0' for the time to switch off the Auto Off feature.


11.7 Meter type *(not in all countries)*

The meter type setting defines whether PostBase Mini displays and prints the postage in the 00.00 or 00.000 format.



- Open the MENU.
- Select METER MODE.

PostBase Mini opens the adjustment menu. The current setting is shown on a green background.

- Select the desired setting.
- Save the setting shown with .

Decimal Meter Mode – possible settings and their meaning:

0.00	Displays and prints the postage in integer cents.
0.000	Displays and prints the postage in tenths of cents.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

11.8 Connection to data centre

The PostBase Mini franking machine needs a connection to the data centre (Francotyp-Postalia Infrastructure) in order that it can download funds and data. The connection configuration is part of the installation procedure during commissioning. You should verify and, if necessary, correct the settings if changes were made to your system environment. In case of problems, please contact your network administrator.




- Open the MENU.
- Select MANAGE CONNECTION.

PostBase Mini shows the current connectivity settings.

Changing the connectivity settings

- Press the  button to open the 'Connectivity Wizard'.
- Simply follow the instructions on the display. The PostBase Mini successively prompts you to specify all necessary details.

When finished, PostBase Mini displays the selected connection configuration.

- Press the  button to accept the connectivity settings and to check the connection.



The chart on the following pages gives an overview of the possible connection settings and parameters.



For further details, you may also refer to the Connectivity Guide for PostBase on the FP homepage.

Connectivity Settings and their meaning:

Connection Type	
ETHERNET	<p>LAN connection. PostBase Mini connects to the Francotyp-Postalia Infrastructure (FPI) via the internet.</p> <p><i>(default setting, not changeable)</i></p>
DHCP	
DHCP = ENABLED	<p>Select this setting if your network supports DHCP.</p> <p><i>(default setting)</i></p>
DHCP = DISABLED	<p>Select this setting if your network does not support DHCP.</p> <p>During manual configuration, you will need to enter the following parameters:</p> <ul style="list-style-type: none"> – Static IP address for your PostBase Mini – Subnet mask – Default gateway – IP address of the DNS server. <p>Please contact you network administrator for details.</p> <p><u>Note:</u> When entering IP addresses, you have to enter the dots, too.</p>

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Connectivity Settings and their meaning:

Proxy-Server	Intermediary server that facilitates access to the internet.
PROXY = DISABLED	Select this setting if your network does not use a proxy server. <i>(default setting)</i>
PROXY = ENABLED	Select this setting if your network uses a proxy server. You will need to enter the following parameters: – IP address of the proxy or its alias – Port number Please contact you network administrator for details.
Proxy-Authentication <i>(only when Proxy = Enabled)</i>	Access control to the proxy server (user name and password).
DISABLED	Select this setting if your proxy server does not require authentication (user name and password). <i>(default setting)</i>
ENABLED	Select this setting if your proxy server does require authentication. You will need to enter the following parameters: – User name for proxy access – Password. Please contact you network administrator for details.



In case your network only supports explicitly authorised devices, your network administrator will require the MAC address of your PostBase Mini. You can find it in the Connectivity Settings menu.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,



Reference Information for Network Administrators

The PostBase Mini requires an Ethernet connection, with a minimum of 10 Mbit/sec, in order to be able to download postal funds from a Francotyp-Postalia server. Ethernet cables of class CAT5E are recommended.

For this it normally uses TCP/IP (v4 only) through an https connection using TLS v1.2 over **port 443**. In certain cases it may also use an http connection over **port 80**.

These two ports must therefore be enabled in any firewall. It will attempt to make a connection to *.francotyp.com.

11.9 View contact information

Important contact information (Phone / Internet) is stored in your franking machine at the factory. You can view the contact information.



- Open the MENU.
- Select CONTACT INFORMATION.

PostBase Mini displays the stored phone numbers and URLs.

11.10 Access control / PIN

The PostBase Mini can be protected against unauthorised use via a PIN.

With the optional PC control software, you can set up a user-specific access control for the PostBase Mini. Please refer to the manual of the PC software.

The menu function 'Manage PIN' is then only accessible with the administrator PIN.



Enable access control

- Open the MENU.
- Select MANAGE PIN.
- Press the > button to switch on the access control.
- Type the desired PIN and continue with >.
- For checking purposes, enter the PIN a second time and confirm with ✓.

The PIN is stored. The access control is enabled.



If the entered PIN and the second PIN entry do not match, PostBase Mini will ask you to re-enter the PIN. Repeat the PIN entry and the second entry.

Disable access control



Caution! If you disable access control, all users will be deleted without prior warning.



- Open the MENU.
- Select MANAGE PIN.
- Press the > button to switch off the access control.

The access control is disabled.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

11.11 Auto Postage Download *(not in all countries)*

The 'Auto Postage Download' feature facilitates keeping track of the remaining postage. When enabled, PostBase Mini will warn you once the remaining postage reaches the preset threshold and will give you the opportunity to load postage.



Enable 'Auto Postage Download' feature

- Open the MENU.
- Select AUTO POSTAGE.
- Press the ➤ button to switch on the monitoring feature.
- Type the desired threshold.
- Save the displayed threshold with ✓.

Auto Postage Download is enabled.


Performing Auto Postage Download

When the remaining postage reaches the threshold, PostBase Mini opens an appropriate screen with the following options:

- Use ✓ to load the displayed amount directly.
- Or
- Use ✎ to change the displayed amount, then load postage.

Or

- Use ✖ to quit Auto Postage Download and load postage later.

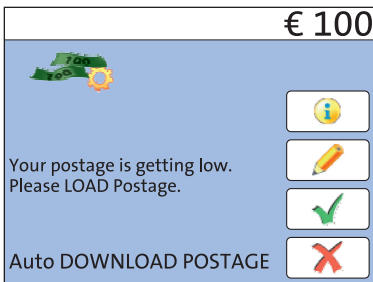

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.



Change threshold

- Open the MENU.
- Select AUTO POSTAGE.
- To CHANGE the threshold (option is already selected), continue with ➤.
- Type the new threshold.
- Save the setting shown with ✓.



Disable 'Auto Postage Download' feature

- Open the MENU.
- Select AUTO POSTAGE.
- Select the TURN OFF option.
- Continue with ➤.
- Confirm the security prompt with ✓.

Auto Postage Download is disabled.

11.12 Remote Services

With the 'Remote Services' function, PostBase Mini connects to the FP Infrastructure and checks for updates (e.g. a new rate table, new machine software). Diagnostic data is also exchanged with the FP server.



- Open the MENU.
- Select REMOTE SERVICES.

PostBase Mini starts the update procedure. It takes some time to establish the connection and to exchange data. Please stand by.

11.13 Change Postal Code (ZIP) / Re-authorisation

(not in all countries)

You must inform Francotyp-Postalia of the new location of your PostBase Mini if you wish to operate the PostBase Mini at another location (e.g. after a relocation).



- Open the MENU.
- Select CHANGE ZIP.
- Follow the instructions in the display.

Re-authorization starts. It takes some time to establish the connection and to exchange data. Please stand by.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

12 Maintenance and care

Have your PostBase Mini cleaned and serviced regularly by an authorised service staff. This guarantees long-term, trouble-free operation. Ask about our low-cost care and maintenance agreement.

You can do the following work yourself:

- Cleaning housing exterior
- Changing / aligning the ink cartridge
- Cleaning the print system
- Replacing the battery.

Only when prompted by Francotyp-Postalia: start the 'Temp. Calibration' service function.

12.1 Cleaning the PostBase Mini




Warning! Unplug the mains plug prior to cleaning the PostBase Mini franking machine.



Warning! Handle liquids with care. Make sure that no foreign objects can reach the interior of the franking machine. If this happens nevertheless: Have the franking machine checked by the after-sales service before using it again.

How to clean the franking machine

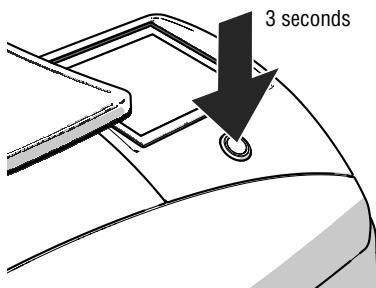

- Turn off the franking machine.
- Unplug the mains plug of the power supply unit from the socket.
- Clean dirt from the housing with a slightly damp cloth. You can also use a commercially available dishwashing detergent.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

12.2 Checking the ink level



- Open the MENU.
- Select PRINT SYSTEM.
- Select INFORMATION.

The PostBase Mini displays the filling level of the ink cartridge.

12.3 Changing the ink cartridge

The PostBase Mini franking machine monitors the ink level and issues a message when the ink cartridge must be replaced.

We recommend that you always have a new FP ink cartridge in stock.

We recommend also cleaning the contacts in the cartridge holder each time you replace the cartridge. For this purpose, use the special 'clean & renew' cleaning kit for ink-jet print systems from Francotyp-Postalia.



Warning! Ingestion of the ink can be hazardous to health. Avoid contact with the eyes. Keep ink cartridges out of the reach of children. Further instructions for use are enclosed with the ink cartridge.



Caution! Heed the following hints to avoid damage to the print system:

- We recommend to use only approved FP equipment and FP original parts. The manufacturer FP has established reliability, safety and applicability. The manufacturer cannot assess the reliability, safety and applicability for products not approved by FP, and therefore not vouch for such products.
- Always use a brand new ink cartridge.



Caution! There are ink residues on the used cartridge.

- Take care not to soil yourself, your clothes or any objects.
- Use a mat to deposit the ink cartridge.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,



Changing the ink cartridge



The PostBase Mini will prompt you to replace the cartridge when it is depleted.

- Acknowledge the message.
- Open the MENU.
- Select PRINT SYSTEM.
- Select CHANGE CARTRIDGE.

The PostBase Mini moves the ink cartridge to the exchange position. The exchange procedure starts.

Removing the ink cartridge


- Lift up the operating panel as far as it goes. You can feel it engage.

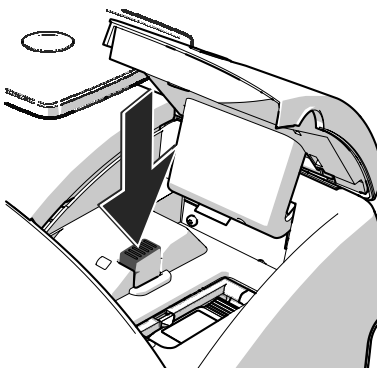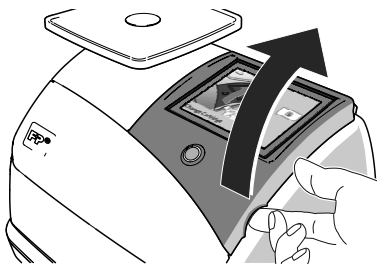

- Unlock the ink cartridge:
Press the green release key.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015, download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

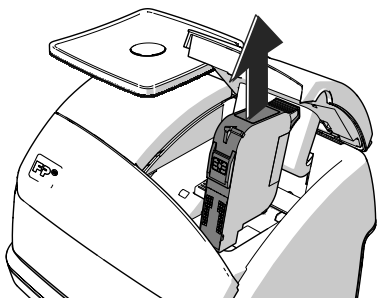

- Pull the ink cartridge upward out of the cartridge holder.

Inserting the new ink cartridge

The full functioning of the PostBase Mini franking machine at the time of delivery can only be guaranteed when using original Francotyp-Postalia ink cartridges.



Caution! Insert the ink cartridge only when it has adapted to the ambient temperature of the franking machine (e.g. after storage in the basement or transport in a cold car). Otherwise, correct calibration will be impossible.


- Take the new ink cartridge out of the packing.
- Remove the nozzle protection from the ink cartridge.

For details, please refer to the instruction leaflet that comes with every cartridge.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

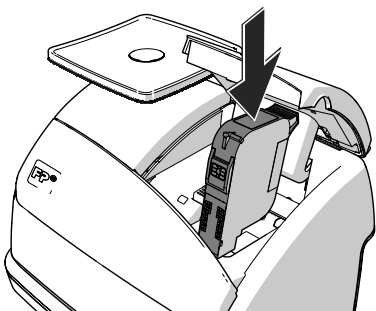

- Hold the ink cartridge so the contacts are facing to the front of the franking machine.
- Insert the ink cartridge into the cartridge holder.
- Push the ink cartridge all the way down. You can feel the ink cartridge engage. A little green latch locks the ink cartridge into position in the cartridge holder.

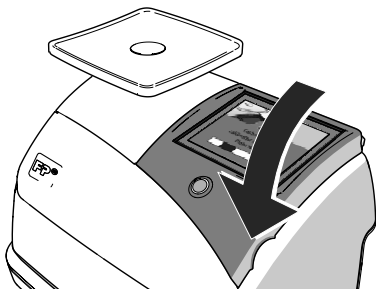

- Lower the operating panel back into position.

Calibration / Cleaning

After cartridge exchange, PostBase Mini will calibrate the cartridge and clean the print system. Please be patient until this process is complete.

Aligning

The PostBase Mini continues by aligning the ink cartridge and prompts you to perform a test print.

For details on how to align the cartridge, please read chapter 12.4.


 
Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

12.4 Aligning the ink cartridge

You must align the ink cartridge when there are shifts in the franking imprints. Alignment will ensure your imprints are free of shifts.

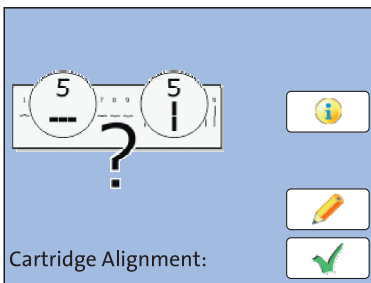

Starting the alignment procedure


- Open the MENU.
- Select PRINT SYSTEM.
- Select ALIGNMENT.
- Insert an empty envelope or a folded sheet (folded edge first) into the letter slot.

The PostBase Mini prints a test print.

- On the test print, determine the numbers where
 - the horizontal lines are as exactly next to each other as possible and
 - the vertical partial lines are as exactly above each other as possible.


Correctly aligned

The ink cartridge is correctly aligned when horizontal and vertical partial lines form one line each at number 5.

- Press  to quit the procedure.

 
Not aligned correctly

When horizontal and / or vertical partial lines do not form one line each at number 5:


- Press  to continue the procedure of ink cartridge alignment.


Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,




Horizontal line

 - Type the number where the horizontal partial lines are as exactly next to each other as possible.
In the example, this is number '4'.
(If necessary: Press CE to clear the displayed number.)
- Confirm with .



Vertical line

- Type the number where the vertical partial lines are as exactly above each other as possible.
In the example, this is number '7'.
(If necessary: Press CE to clear the displayed number.)
- Confirm with .
- Place an empty envelope / a folded sheet for another test print.
- Assess the test print. If necessary, repeat the alignment procedure until a correct alignment has been obtained.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

12.5 Cleaning the print system

12.5.1 Starting automatic print system cleaning

You should start automatic print system cleaning only if the print quality is not good enough (e.g. blank spots in the imprint after longer periods out of use).



Cleaning

- Open the MENU.
- Select PRINT SYSTEM.
- Select CLEANING.

A message informs you about the cleaning process in progress.

- Check the print quality with a test print.



Intensive cleaning

- Open the MENU.
- Select PRINT SYSTEM.
- Select INTENSIVE CLEANING.

A message informs you about the cleaning process in progress.

- Check the print quality with a test print.



In case of stubborn soiling, even intensive cleaning may be unable to improve the print quality as desired. In such cases, you can manually clean the cartridge (see page 72).

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

12.5.2 Cleaning ink cartridge by hand



Caution! Inexpert cleaning can damage the ink cartridge and render it useless. Heed the following hints to avoid damage to the print system:

- In case of print quality issues, always run the cleaning functions of the franking machine accessible from the MENU first. Read chapter 12.5.1 on page 71.
- You should manually clean the ink cartridge in exceptional cases only when intensive cleaning fails to restore the normal print quality.
- For cleaning, make sure to use a soft, lint free cloth moistened with demineralised water. Small fibres could clog the nozzles. Too hard or dry cloths could scratch the nozzle plate. Such scratches make the ink cartridge useless because they prevent the ink-jet from being correctly positioned during printing.
- Never use any chemical cleansers either.



Removing the ink cartridge

- Open the MENU.
- Select PRINT SYSTEM.
- Select CHANGE CARTRIDGE.

The PostBase Mini moves the ink cartridge to the exchange position.

- Lift up the operating panel as far as it goes. You can feel it engage.
- Unlock the ink cartridge and remove it (see page 66).

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Cleaning


- Moisten a lint free cloth with demineralised water.



You can also use distilled water or normal tap water if demineralised water is not at hand. The minerals contained in tap water could, however, leave residues in the print head.



For best cleaning results, use FP contact cleaner and cleaning cloths contained in the 'clean & renew' cleaning kit offered by Francotyp-Postalia.

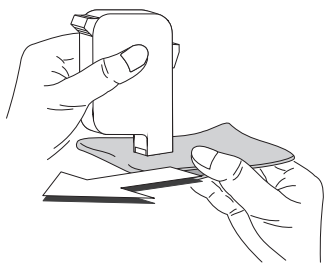

- Hold the cartridge as shown in the picture. The nozzles must point downwards!
- Slowly and carefully wipe the print head with the cloth in the direction of the arrow. Repeat this action several times.

The water will blend with ink residues and clean the nozzles.

- Reinsert the ink cartridge (see page 68).
- Lower the operating panel back into position.
- Align the ink cartridge (see chapter 12.4, page 69).

12.6 Checking the print function

The 'Test Imprint' function is for checking the print function and is primarily intended for service purposes.



- Open the MENU.
- Select PRINT SYSTEM.
- Select TEST IMPRINT.
- Insert an empty envelope or a folded sheet (folded edge first) into the letter slot.

The PostBase Mini prints the test imprint.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

12.7 Move the motor of the print system to reference position

In case the ink cartridge does not move to the expected exchange position, you can move the motor of the print system to the reference position with this menu function.




- Open the MENU.
- Select PRINT SYSTEM.
- Select RESET.

The motor moves to the reference position.

12.8 Calibrating the touch screen


You have to calibrate the touch screen when operating the screen with your finger or with the stylus does not work correctly.

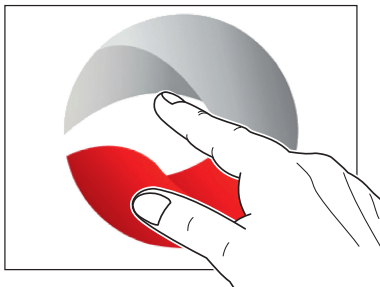

- Turn on the PostBase Mini.

As soon as the screen displays the PostBase logo:

- **Touch and hold your finger in the middle of the display** until the calibration procedure starts.

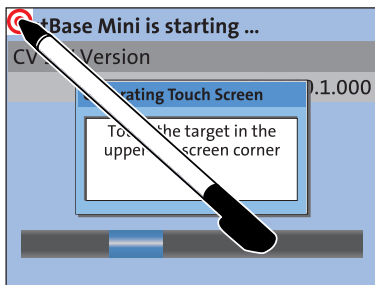

A red circle (the first calibration circle) appears in the upper left corner.

- Touch the red circle with the stylus.
- Follow the further instructions on the display: Touch each of the displayed calibration circles with the stylus.

The PostBase Mini will continue its start routine. The touch screen is now calibrated.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

12.9 Replacing the battery


The PostBase Mini monitors the charging state of the battery. An appropriate message appears in the display when it is time to replace the battery.



Caution! *The used battery has a special rated voltage of 3.6 V. There is a risk of severely damaging the machine when inserting the wrong battery. We recommend to use only a battery 90.4701.8004.00 provided by Franco-tyt-Postalia. The manufacturer FP has established reliability, safety and applicability.*



Warning! *Observe the instructions enclosed with the battery for correct use and disposal.*

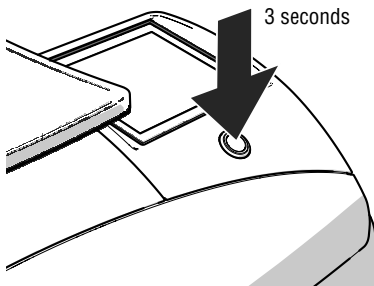


- Turn off the PostBase Mini.
- Unplug the mains plug of the power supply unit from the socket.

Remove all cables from the PostBase Mini:

- Remove the mains plug.
- On the network connector, press the spring and remove the Ethernet cable.
- If present: Remove the USB cable.
- Turn the PostBase Mini on its back.


You now have access to the battery compartment on the bottom of the PostBase Mini.

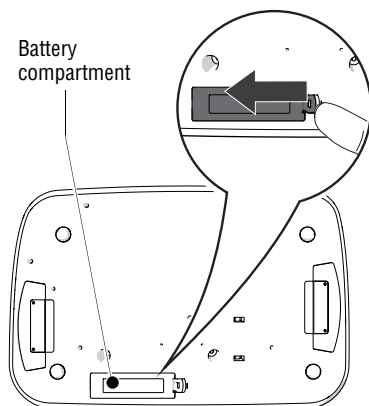

- Press the clip catch in the direction of the arrow and remove the battery compartment cover.
- Remove the empty battery.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

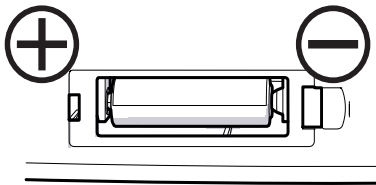


- Insert the new battery (90.4701.8004.00) in the specified position. Symbols in the battery compartment depict the correct polarity.
- Close the battery compartment.
- Turn the PostBase Mini back to the upright position.
- Reconnect the PostBase Mini (see page 14).
- Dispose of the old battery as prescribed.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

13 Tips for troubleshooting

13.1 Error messages

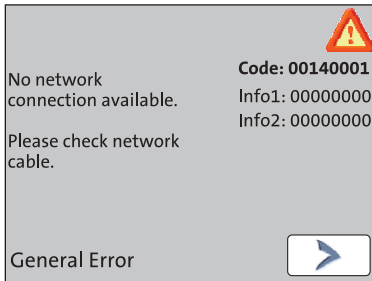

An error message appears on the display in case of an error or handling error. An additional beep may also indicate an error.

Make sure to carefully read the error message. You will be given hints on the error cause and what you can do to remedy it.

A symbol indicates the error group (e.g. ‘Communication error’). For an overview of error group symbols, refer to page 88.

You can correct many minor errors and issues occurring during PostBase Mini operation yourself.



Please contact the Customer Support if you cannot remedy an error by means of the display information and the hints given in the present Operator Manual.

13.2 Problems and remedies


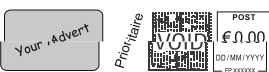

Problem	Possible cause and remedy
... during installation	
Blank display	Check whether the power supply unit and the power cable are connected correctly and the PostBase Mini is turned on.
Delivery is incomplete / damaged	Do not start operating the PostBase Mini. Call the Customer Support.

Works Cited:

FP. “Operator Manual.” PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Problem	Possible cause and remedy
Error during installation procedure	<p>An error message with troubleshooting information appears.</p> <p>If necessary:</p> <ul style="list-style-type: none"> • Turn off the PostBase Mini (<i>see chapter 4.1</i>). • Wait one minute. • Turn the PostBase Mini on again. <p>The installation procedure restarts.</p> <p>Make sure the connectivity settings are correct (<i>see chapter 11.8</i>).</p>
Ink cartridge cannot be inserted	<p>The cartridge holder has not moved to the correct position.</p> <p>Lower the operating panel back into position. Confirm error messages.</p> <p>You have to insert an ink cartridge before being able to use the PostBase Mini. Proceed as follows:</p> <p>Use the RESET function to move the motor of the print system to the reference position: <i>See chapter 12.7 on page 74</i>.</p> <p>To insert the cartridge, run the CHANGE CARTRIDGE function (<i>see chapter 12.3 on page 65</i>).</p>
R-PIN missing	<p>Call the Customer Support. You cannot install the PostBase Mini without the R-PIN.</p>
... when franking	
Franking not possible	<p>No product / postage set because</p> <ul style="list-style-type: none"> – mailing data are incomplete or – weight value is missing. <p>Check product settings (<i>see chapter 5.1</i>).</p> <hr/> <p>No credit left in franking machine. Please load postage (<i>see chapter 8</i>).</p> <hr/> <p>Data synchronisation is due. PostBase Mini has to contact the data centre (e.g. run download postage, amount of '0' is sufficient).</p>

Problem	Possible cause and remedy
<p><i>(continued)</i> Franking not possible</p>	<p>Maximum postage value for franking exceeded. Please contact the administrator.</p> <hr/> <p>Credit of the current user is too low. Have the administrator assign new credit.</p>
<p>PostBase Mini does not print</p>	<p>Sensor does not recognise the letter. Place a letter at the right hand edge of the letter slot and push in as far as it goes. (The sensor is in the back right hand corner of the letter slot.)</p> <hr/> <p>Sensor does not recognise the sheet (e.g. for a test print). Fold the sheet down the middle and place it in the letter slot folded edge first.</p> <hr/> <p>Sensor does not recognise the label. Place a sheet or empty envelope under the label to be printed and try again.</p> <hr/> <p>The letter was already in the letter slot when you made settings in the menu. Remove letter and re-insert.</p>
<p>Print quality: gaps / blanks</p> 	<p>Clean print system (<i>see chapter 12.5</i>).</p>
<p>Print quality: offsets / shifts in the imprint</p> 	<p>Align the ink cartridge (<i>see chapter 12.4</i>).</p>
<p>Print quality: the printing image is distorted</p> 	<p>Letter has been moved during printing. Let go of the letter during printing. Give large envelopes just a little support.</p>

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,


download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Problem	Possible cause and remedy
... when weighing	
No confirmation beep	Adjust sound signals (<i>see chapter 11.3</i>).
No weight is determined for the letter on the scale	The weighing platform was still occupied when another letter was placed on it. The scale only determines a new weight if it was emptied before. Empty the weighing platform. Place the letter.
	The weight is too low or the scale is overloaded. Use scale for mail pieces of the permitted weight range only.
	Either PostBase Mini does not recognise the scale, or the scale is defective. Call the Customer Support.
... with postage loading	
Desired amount cannot be loaded	Impermissible amount. Change amount and repeat loading.
Function not available	The current user is not authorised to access this function. Please contact the administrator.
Postage download procedure aborts	PostBase Mini fails to establish connection to the data centre. Check connection configuration (<i>see chapter 11.8</i>).
	Data centre issue. Try again later.

Problem	Possible cause and remedy
... general errors	
Accounts are missing	The current user is not allowed to frank on the desired account. Please contact the administrator.
Blank display	Check whether the power supply unit and the power cable are connected correctly and the PostBase Mini is turned on. PostBase Mini is in standby. Press the button on the operating panel <u>briefly</u> .
Functions are missing in the display (e.g. advertising imprint)	Unavailable functions are blanked out (e.g. because the currently set product may not allow an advertising imprint).
Ink cartridge cannot be removed / inserted	The cartridge holder has not moved to the correct position. Lower the operating panel back into position. If necessary: Cancel the procedure. Use the RESET function to move the motor of the print system to the reference position: <i>See chapter 12.7 on page 74.</i> Restart the exchange procedure. The print system should correctly move to the exchange position now.
Ink cartridge is not detected	Ink cartridge is not fitted correctly. Remove and re-insert the ink cartridge. Wrong ink cartridge inserted. Observe the specifications (<i>see page 90</i>). Contacts of the print system are dirty. Use the 'clean and renew' FP cleaning kit to clean the contacts. Ink cartridge is defective. Call the Customer Support.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Problem	Possible cause and remedy
Lost PIN (administrator PIN)	In the 'Enter PIN' menu, press the  button. Follow the prompts in the display.
Lost PIN (user PIN)	Please contact the administrator.
No users available	When deactivating access control, all users are deleted. Create new users with the PC control software.
Print system cleaning fails to improve the print quality	Ink cartridge heavily soiled or dried up. Repeat cleaning: Function 'Intensive Cleaning'. If you cannot solve the problem: Clean ink cartridge by hand (<i>see chapter 12.5.2</i>).
Touch screen fails to react when touched	Turn off the PostBase Mini. Calibrate touch screen (<i>see chapter 12.8</i>).
User PIN is not accepted	Did you select the correct user? Cancel the 'Enter PIN' menu, and repeat: select the user and enter the PIN. Contact the administrator.
Other errors ...	If you cannot remedy an error yourself, please call the Customer Support.

14 Withdrawal and disposal of the PostBase Mini

To ultimately decommission the PostBase Mini franking machine, you must correctly unsubscribe all postal services. PostBase Mini will guide you through all required decommissioning steps in a dialogue. We are pleased to assist if required. Please contact the Customer Support.

In case of a rented or leased franking machine, please make sure to always contact the Customer Support.



Caution! Run the 'Withdraw Machine' function only if you really want to decommission the PostBase Mini. Commissioning the franking machine after decommissioning is only possible by calling a service technician at extra costs.



- Make sure PostBase Mini is ready to connect to the data centre (network cable is connected, correct connectivity settings).
- Open the MENU.
- Select WITHDRAW MACHINE.
- Follow the instructions in the display. Make sure to carefully read the information!
- For disposal of the franking machine, please contact the Customer Support.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,










Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,





download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Overview of symbols

Standard buttons






 








-  OK / Finished / Confirm / Save / Yes
-  Cancel / No
-  Continue
-  Back
-  Scroll left / right (in lists)
-  Scroll up / down
-  Edit / Change
-  Display information
-  Call up the print function

Menu functions

-  Open the menu
(access basic settings, special features, administration functions)
-  Postage download / Synchronise data between PostBase Mini and the data centre *(subject to country-specific regulations)*
-  Display register report (with print function)
-  Set franking date (forward dating) *(not in all countries)*

Works Cited:


















FP. "Operator Manual." PostBase Mini Support, June 2015,

-  Print system
-  Display filling level of the ink cartridge
-  Clean print system
-  Align cartridge
-  Replace cartridge
-  Calibrate cartridge
-  Test Imprint, service function for checking the print system
-  Move the motor of the print system to reference position
-  Switch account function on / off,
Account administration (show list, set accounts to zero)
-  Change account
-  Run remote services / synchronise with data centre
-  Special functions
-  Print advertising imprint only
-  **1-2-3** Print Numbers
3-2-1
- 1-2-3** Direction of counting: ascending
- 3-2-1** Direction of counting: descending

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

-  Auto postage download / set threshold
-  Display / clear down piece counter
-  Adjust display brightness
-  Brighter
-  Default
-  Darker
-  Display system information (postal serial number, software version, rate table version, ...)
-  Change language
-  Display / edit connectivity settings (network connection)
-  Withdraw machine (*not in all countries*)
-  Set sound signals
-  Adjust standby times
-  Configure 'Auto Off' feature / adjust 'Auto Off' time
-  Configure access control / set PIN
-  Display contact information
-  Set meter type (*not in all countries*):
0.00 (postage in integer cents) or 0.000 (postage in tenths of cents.)
-  Change Postal Code (ZIP) / place of posting (*not in all countries*)

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Error categories



General error



Printing plate error



Account error



Print system error



Scale error



Security device error



Communication error with FP infrastructure



Postage calculation error



Communication error with the PC *(only when using the optional PC control software)*



Postage warning, threshold is reached

Technical Data

Dimensions

– Length	310 mm (12.2")
– Width / Depth	205 mm (8.1")
– Height	230 mm (9.1")

Weight 3,0 kg (6.6 lbs)

Power supply 24 VDC / 0.7 A (using an external power supply unit)
Protection class III

Power connection External Power Supply Unit:
XP POWER LTD. - VEH40US24
100 - 240 V / 0,93 A / 47 - 63 Hz

Power consumption 40 W, Energy Star
<1 W (switched off)
<7 W (standby)

Battery 3,6 V / 2 Ah / 20 mA (order no. 90.4701.8004.00)

Display TFT, 320 x 240 pixels, with touch panel, backlit

Print system

– Print technology	Ink-jet, 1 ink cartridge
– Printing area	133 mm x 25 mm (5.2" x 1")
– Print resolution	300 dpi

Weighing area 3 g to 2.000 g / 0.1 oz to 5 lb

Performance Up to 15 letters/minute

Noise emission 54.5 dB(A)

Operating conditions +15 °C to +35 °C (59 °F to 95 °F)
Only use in closed rooms
Do not expose to direct sunlight
Rel. humidity 15 % to 80 %, non-condensing

Subject to short-term modification.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Ink cartridge

Ink cartridge FP ink cartridge for PostBase Mini
(ink colour depending on country)

Operating and storage conditions +15 °C to +35 °C (59 °F to 95 °F)
Only use in closed rooms
Do not expose to direct sunlight
Rel. humidity 20 % to 70 %, non-condensing



Safety data sheet for users available at <http://www.francotyp.com/en/mail-management/material-safety-data-sheets-msds.html>.

Mail piece specifications

Format Postcard to ISO B4 envelope

Thickness Up to 6 mm (up to 0.23")

Material Ink-absorbent material (suitable for ink-jet printing)
No dark paper
No glossy coating on the surface to frank
No corrugated board
No extremely fibrous paper on which the franking imprint could smear

Labels Self-adhesive labels for PostBase Mini,
minimum label size 140 mm x 85 mm (5.5" x 3.4")

Subject to short-term modification.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

EC DECLARATION OF CONFORMITY FOR ELECTRICAL PRODUCTS

(According to Annex III B of the Low Voltage Directive)

Manufacturer: Francotyp-Postalia GmbH

Address: Prenzlauer Promenade 28, 13089 Berlin, Germany

herewith declares that the Franking System

PostBase Mini.....
(Type or Model designation)which this declaration refers to, is in accordance with the conditions of
the Low Voltage Directive 2006/95/EC
and the EMC Directive 2004/108/EC.

This product is in conformity with following harmonized standards:

EN 60950-1: 2006 + A1: 2010

EN 55022: 12.2011, Class B

EN 55024: 09.2011

EN 61000-4-2: 12.2009

EN 61000-4-3: 04.2011

EN 61000-4-4: 04.2013

EN 61000-4-5: 06.2007

EN 61000-4-6: 12.2009

EN 61000-4-8: 11.2010

EN 61000-4-11: 02.2005

November 3, 2014
.....
.....
Hans Szymanski
Managing Director
.....
Uwe Hübler
Head of R&D Hardware

(Legally binding signatures for the company)

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

License

This is a copy of the current LICENSE file inside the CVS repository.

```

LICENSE ISSUES
=====

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of
the OpenSSL license and the original SSLeay license apply to the toolkit.
See below for the actual license texts. Actually both licenses are BSD-style
Open Source licenses. In case of any license issues related to OpenSSL
please contact openssl-core@openssl.org.

OpenSSL License
-----

/* =====
 * Copyright (c) 1998-2011 The OpenSSL Project. All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *
 * 1. Redistributions of source code must retain the above copyright
 * notice, this list of conditions and the following disclaimer.
 *
 * 2. Redistributions in binary form must reproduce the above copyright
 * notice, this list of conditions and the following disclaimer in
 * the documentation and/or other materials provided with the
 * distribution.
 *
 * 3. All advertising materials mentioning features or use of this
 * software must display the following acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
 *
 * 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to
 * endorse or promote products derived from this software without
 * prior written permission. For written permission, please contact
 * openssl-core@openssl.org.
 *
 * 5. Products derived from this software may not be called "OpenSSL"
 * nor may "OpenSSL" appear in their names without prior written
 * permission of the OpenSSL Project.
 *
 * 6. Redistributions of any form whatsoever must retain the following
 * acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit (http://www.openssl.org/)"
 *
 * THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY
 * EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
 * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
 * PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR
 * ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
 * SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT
 * NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
 * LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
 * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,
 * STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
 * ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED
 * OF THE POSSIBILITY OF SUCH DAMAGE.
 * =====
 *

```

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

```
* This product includes cryptographic software written by Eric Young
* (eay@cryptsoft.com). This product includes software written by Tim
* Hudson (tjh@cryptsoft.com).
```

```
*
```

```
*/
```

```
Original SSLeay License
```

```
-----
```

```
/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)
* All rights reserved.
*
* This package is an SSL implementation written
* by Eric Young (eay@cryptsoft.com).
* The implementation was written so as to conform with Netscapes SSL.
*
* This library is free for commercial and non-commercial use as long as
* the following conditions are aheared to. The following conditions
* apply to all code found in this distribution, be it the RC4, RSA,
* lhash, DES, etc., code; not just the SSL code. The SSL documentation
* included with this distribution is covered by the same copyright terms
* except that the holder is Tim Hudson (tjh@cryptsoft.com).
*
* Copyright remains Eric Young's, and as such any Copyright notices in
* the code are not to be removed.
* If this package is used in a product, Eric Young should be given attribution
* as the author of the parts of the library used.
* This can be in the form of a textual message at program startup or
* in documentation (online or textual) provided with the package.
*
* Redistribution and use in source and binary forms, with or without
* modification, are permitted provided that the following conditions
* are met:
* 1. Redistributions of source code must retain the copyright
* notice, this list of conditions and the following disclaimer.
* 2. Redistributions in binary form must reproduce the above copyright
* notice, this list of conditions and the following disclaimer in the
* documentation and/or other materials provided with the distribution.
* 3. All advertising materials mentioning features or use of this software
* must display the following acknowledgement:
* "This product includes cryptographic software written by
* Eric Young (eay@cryptsoft.com)"
* The word 'cryptographic' can be left out if the rouines from the library
* being used are not cryptographic related :-).
* 4. If you include any Windows specific code (or a derivative thereof) from
* the apps directory (application code) you must include an acknowledgement:
* "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"
*
* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND
* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
* SUCH DAMAGE.
*
* The licence and distribution terms for any publically available version or
* derivative of this code cannot be changed. i.e. this code cannot simply be
* copied and put under another distribution licence
* [including the GNU Public Licence.]
*/
```

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

Security Declaration for data usage

Product Description: PostBase Mini franking machine

The PostBase Mini franking machine is connected to the user's local network through an Ethernet interface to share data with the Francotyp-Postalia Data Centre using both the local network and a suitable available internet connection provided by the user.

Francotyp-Postalia guarantees that the PostBase Mini franking machine does not utilise, transmit, or sort any data from the user's network which is not relevant for the operation of this equipment.

United States Patents

US-Patent-Nr. 5.671.146, 6.579.019, 6.594.648, 6.615.196, 6.623.189, 6.692.166, 6.709.087, 6.771.179, 6.821.040, 7.043.631, 7.103.583, 7.322.764, 7.343.359, 7.606.264, 7.694.010, 7.724.905, 7.996.884, 8.131.959, 8.205.088

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

A

- Access control *10, 60*
 - disable *60*
 - enable *60*
- Account *25, 40*
 - change *32, 40*
 - current account *25*
 - display in the Home screen *25*
 - display information *51*
 - franking to an account *40*
 - set all accounts to zero *51*
 - set to zero *51*
- Account function *10*
 - switch off *50*
 - switch on *50*
- Adjustment menu *29*
 - input using the counter principle *30*
 - input via keypad *29*
 - list *29*
- Administration functions *25*
- Advert *9, 25, 37*
 - print separately *47*
 - See also Advertising imprint
- Advert Only *47*
- Advertising imprint *25, 32, 37*
 - graphical advert *37*
 - print advert / text only *47*
 - set *32, 37*
 - text message / SMS text *37*
- Assembling *12*
- Audible signals *53*
- Auto Off *55*
- Auto Postage Download *61*
 - change threshold *62*
 - disable *62*
 - enable *61*
- Available postage *44*

B

- Back *24*
- Basic settings *25*
- Battery *75*
 - order number *89*
 - permissible type *89*
 - replace *75*

- Battery compartment *8, 75*
- Button (ON / OFF) *8*
- Buttons *24*
 - symbols (overview) *85*

C

- Calibrate
 - ink cartridge *64*
 - touch screen *74*
- Cancel *24*
- Cartridge. See Ink cartridge
- Clean
 - contacts (print system) *65*
 - housing *64*
 - ink cartridge *71*
 - print system *71*
- clean & renew *65, 73*
- Commissioning *11*
- Confirm *24*
- Connection
 - external device (USB) *8*
 - external power supply unit *8, 14, 89*
 - LAN *8*
 - network *14*
 - PC *8, 14*
- Connection to data centre *56*
- Connection Type *57*
- Connectivity settings
 - change *56*
 - display *56*
- Contact information *59*
 - view *59*
- Continue *24*
- Correcting errors *77*
 - causes and remedies *77*
 - See also Errors
- Counter
 - Advert only / SMS text only *48*
 - piece counter (franking imprints) *42*
 - Print Numbers *49*
- Credit *44*
- Customer Support *59, 103*

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

D

- Data centre *56*
 - set up connection *56*
- Date *25, 32, 38*
 - franking without date *38*
 - in franking imprint *38*
 - reset to current date *38*
 - set *32, 38*
- Decimal Meter Mode *55*
- Declaration of conformity *91*
- Decommissioning *83*
- Descending *44*
- DHCP *57*
- Disconnecting from mains *22*
- Display *8, 23*
 - adjust brightness *52*
- Display field *29, 30*
- Download
 - data (rate table, ...) *63*
 - machine software *63*
 - postage *46, 61*
- Download postage *46, 61*
 - general notes *46*

E

- Error categories (symbols) *88*
- Error messages *77*
- Errors *77*
 - during installation *77*
 - general *81*
 - when franking *78*
 - when weighing *80*
 - with postage loading *80*
- Ethernet *57*
- Ethernet cable *11, 59*

F

- Filling level
 - ink cartridge *65*
- Firewall *59*
- Forward dating *38*
- FP Infrastructure *56, 63*
- FPI. See FP Infrastructure
- FrancoTyp-Postalia Infrastructure *56*

- Franking *9, 39*
 - label *41*
 - letter *41*
 - thick letters *41*
- Franking imprint *32*
 - example *32*
 - setting *32*

G

- Graphical advertisement *37*

H

- Home screen *25*
 - functions *25*
 - operation philosophy *25*
 - overview *25*
- http connection *59*
- https connection *59*

I

- Ink cartridge *11, 90*
 - align *69*
 - calibrate *64*
 - change *65, 66*
 - clean (automatic) *71*
 - clean (by hand) *72*
 - ink level *65*
 - insert *67*
 - remove *66*
- Ink level *65*
- Installation *11*
- Internet address
 - display *59*
- Item counter. See Piece counter

K

- Keypad *29*

L

- Label *41*
 - minimum size *90*
 - suitable labels *41*
 - types *90*

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

LAN 14
 LAN port 8
 Language 54
 change 54
 set 15
 Letter
 frank 41
 insert 41
 position 41
 Letter slot 8
 License 92
 List 28
 Load
 Auto Postage Download 61
 data (rate table, ...) 63
 machine software 63
 postage credit 46

M

Machine software
 display version 52
 update 63
 Mail piece specifications 90
 Mailing data 25
 deselecting 27
 display 26, 34
 display current setting 27
 selecting 26, 27, 34
 set 34
 Menu 28
 access 28
 example 28
 open 25, 32
 symbols 85
 Meter type 55

N

NavigatorBasic 10, 33, 37, 43
 NavigatorPlus 10
 Network connection 14, 87
 Network interface 8
 Numbers, print numbers only 48

O

ON / OFF 8
 Operating conditions 89
 Operation philosophy
 Home screen 25
 in general 23
 product calculation menu 26

P

Patents (USA) 94
 PC connection 8, 14
 PC control software 33, 37, 43
 PC Mode 43
 quit 43
 screen display 43
 Phone number
 Customer Support 59
 data centre 59
 display 59
 Piece counter 42
 display current value 42
 reset to zero 42
 See also Counter
 PIN 10, 60
 R-PIN 16
 set 60
 Place of posting, change 63
 Pop-up window 30
 Postage 25, 26
 download 46
 set 32, 33
 set manually 36
 set via shortcut 33
 Postage download 46
 Auto Postage Download 61
 disable 'Auto Postage Download' 62
 enable 'Auto Postage Download' 61
 Postage Download - Receipt 45
 display 46
 print 45
 Postage Used 44
 Postal Code, change 63
 Postal product. See Product
 Postal serial number 87

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

PostBase Mini 11
 assembling 12
 button 8
 controlling via PC 43
 disconnecting from mains 22
 install 11
 overview 8
 short description 8
 turning off 21
 turning on 21
 withdraw 83

Power cable 11

Power connection 8, 14, 89

Power supply 6

Power supply unit 6, 8, 11, 89

Price of the product 25

Print

Advert Only 47

numbers 48

registers 45

text message 47

Print Numbers 48

set direction of counting 49

set start number 49

Print quality

poor (gaps, blank spots) 79

poor (imprint is distorted) 79

poor (offset) 79

Print system

clean 71

clean contacts 65

display ink level 65

intensive cleaning 71

manually move to exchange position 74

test print function 73

transport fixture 13

Printing

See also Franking

Procedures 31

Product

set 32, 33

set via shortcut 33

Product calculation menu 26

calling up 26

cancelling 27

exit 27

operation philosophy 26

overview 26

quitting 27

Proxy authentication 58

Proxy server 58

PSU. See Power supply unit

R

Rate table

display version 52, 87

update 63

Re-authorization 63

Register 44

display 44

print 44

print report 45

Remote Services 9, 63

RemoteOne 10, 33, 37, 43

ReportOne 10

Repository-PIN 16

Reset Motor 74

Reset to zero

account 51

all accounts 51

piece counter 42

R-PIN 16

S

Safety tips 2, 6

Save 24

Scale 8, 10, 35

weighing area 89

Scrollbar 23, 26

Serial number plate 8

Shortcut 33

available shortcuts 33

edit / save 33

further shortcuts 25, 32

select 25, 32

selected shortcut 25, 33

set postal product 32

use 33

used 33

Slider 23

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

SMS text *9, 25, 37*
 enter / change *37*
 set *37*
 See also Text message
 Software version *87*
 show *52*
 Sound signals *53*
 Special features *25*
 Special functions *47*
 Standard buttons *24*
 Standby *22*
 Standby time *54*
 Stylus *8, 23*
 Symbols
 error categories (overview) *88*
 in the display (overview) *85*
 menu functions (overview) *85*
 standard buttons (overview) *85*
 used in this manual *2*
 System information *52*

T

Technical Data *89*
 franking machine *89*
 ink cartridge *90*
 mail piece specifications *90*
 scale *89*
 Tenths of cents *55*
 Test Imprint *73*
 Text message *25, 37*
 enter / change *37*
 print separately *47*
 set *37*
 Touch functionality *23*
 Touch screen *8, 23*
 adjust brightness *52*
 calibrate *74*
 handling *23*
 Transport fixture *13*
 remove *13*
 Troubleshooting *77*
 Turning off *21, 22*
 automatically (Auto Off) *55*
 Turning on *21*

U

Update *9, 63*
 USB *8*
 USB cable *11*
 USB connection *14*
 User *39*
 change *39*
 user profile *39*

W

Warranty *103*
 Weighing *10, 25, 35*
 Weighing platform *8, 11*
 mount *12*
 Weight *25, 26*
 set manually *36*
 set (weighing) *35*
 >2 kg / 5 lb *36*
 Withdraw machine *83*
 Wizards *31*

Z

ZIP code, change *63*

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,
download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,
download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

Customer Support

Every PostBase Mini is thoroughly checked before leaving the factory. Should any faults occur with your PostBase Mini in spite of our extensive quality control, please contact Francotyp-Postalia help line.

fp-francotyp.com

Warranty

For warranty information, refer to the country-specific addendum to the PostBase Mini Operator Manual (*if available in your country*).

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,

download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

51.0053.3810.00 Rev. 01
2015-06 / xxx / helbig berlin

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,



PostBase Mini



Addendum to the Operator Manual | USA |

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,
download.fp-usa.com/product_docs/PostBase/PostBase-mini/Manuals-documents/postbase-mini-operating-manual.pdf.

What you need to know

This addendum complements the PostBase Mini Operator Manual.

This document solely covers the country-specific particularities with handling the PostBase Mini postage meter. You will find information about

- the Home screen
- the meter imprint for carrying by the U.S. Postal Service
- special features and imprints, e.g. the zero test print
- the US customer service.

Further documents

The **Installation instructions** (flyer) and the First steps manual which were supplied with your PostBase Mini contain all relevant information on installing, commissioning and handling the postage meter.

The **PostBase Mini Operator Manual** (Reference Guide) contains a complete description of the PostBase Mini postage meter.


For basic information on handling the PC software for PostBase Mini, please read the **RemoteOne / Report-One User Manual**.

Please observe the instructions on intended use and the safety instructions in the PostBase Mini Operator Manual.

Contents


What you need to know	2
1 The Home screen	4
2 The USPS meter imprint	5
3 Special imprints and functions	6
3.1 Postage correction	6
3.2 Redate	8
3.3 Reply Mail metering	10
3.4 Setting the postage manually	11
3.5 Uploading product data	12
3.6 Authentication code for RemoteOne / ReportOne (<i>optional</i>)	13
4 Additional technical specification	14
4.1 Equipment	14
4.2 Postage Meter supplies	15
4.3 The Security Device	15
5 Glossary	16
6 Index	17
7 Service	19

1 The Home screen

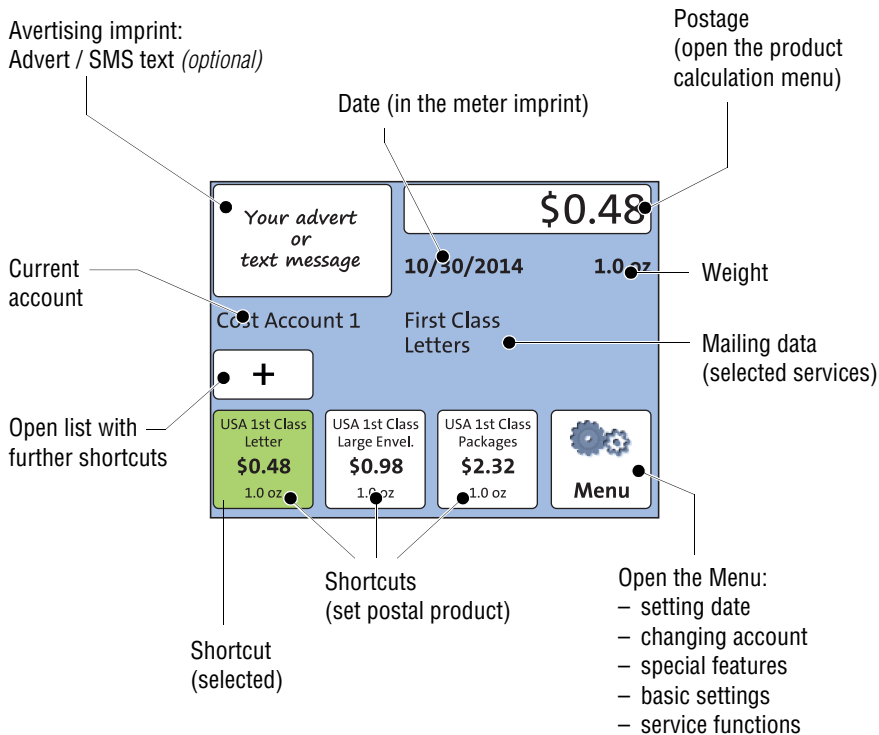

The Home screen appears after the PostBase Mini was turned on and the start routine has been successfully completed. Depending on the settings, you may have to select a user and enter the PIN.

2 The USPS meter imprint

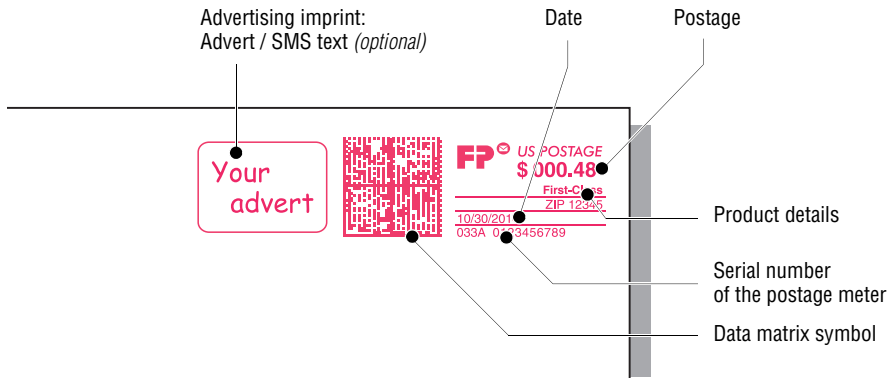

The illustration shows an example of a meter imprint for a First-Class letter with an advertising imprint (an SMS text/text message or a graphical advert/logo).

For details on how to set the meter imprint, please read the PostBase Mini Reference Guide.

Particularities for metering mail pieces for dispatch by the USPS, e.g. correction of incorrect meter imprints, are described in the following chapters.

To check the settings for metering and the imprint quality, select TEST PRINT PRODUCT in the Product calculation menu. The TEST PRINT PRODUCT option is shown at the end of the additional services list.


Test imprints always show the postage value '\$ 000.00' (zero imprint) and the data matrix code is overprinted with the indication 'VOID'.

3 Special imprints and functions

3.1 Postage correction


You can correct faulty meter imprints on an already metered letter. The correction print must always be printed on the non-address side of the mail piece.

If you have metered a postage value which is too low, print a correction with the missing amount on the non-address side of the mail piece.

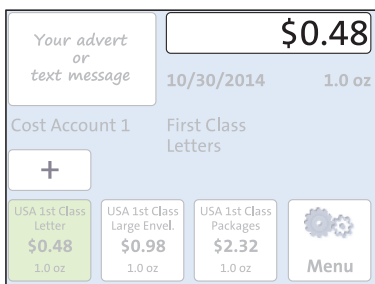


Setting the CORRECTION imprint

- In the Home screen, press the postage button.

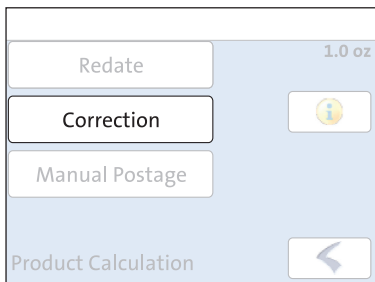



PostBase Mini opens the Product calculation menu.

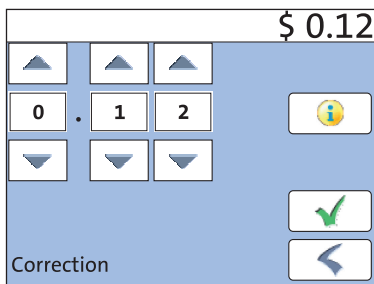- Select SPECIALS.
- Select CORRECTION.



- Set the amount to be imprinted on the mail piece in addition to the postage value already metered.


Use the arrow buttons to increase or decrease the figure in each digit until the desired amount is displayed in the top right text box.

- Confirm the displayed correction amount with .
- Press  to accept the displayed product setting and to return to the Home screen.

Print postage correction

The Home screen shows the current settings for the correction imprint. You can change the settings (e.g. date) in the same way as with a regular meter imprint.

- Position the mail piece the non-address side face up.

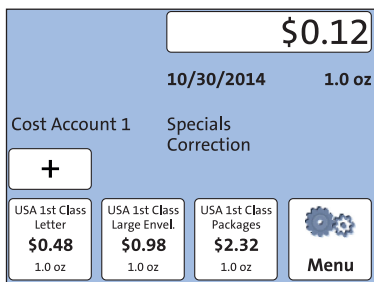



PostBase Mini prints the correction imprint.



When printing the postage correction, advertising imprints are not available.

3.2 Redate

If the meter imprint shows an incorrect date, you can print a correction with the correct date on the non-address side of the already metered mail piece.

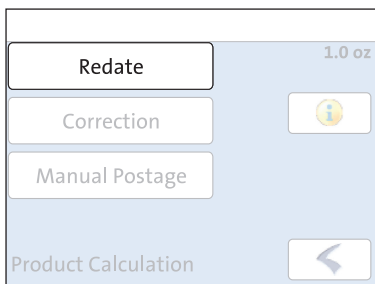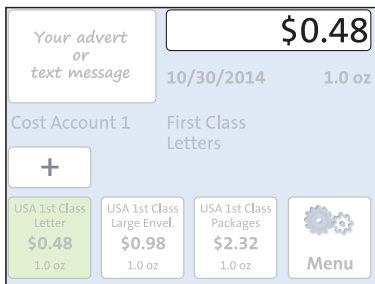

Setting the REDATE imprint

- In the Home screen, press the postage button.


PostBase Mini opens the Product calculation menu.

- Select SPECIALS.
- Select REDATE.
- Press ✓ to accept the displayed product setting and to return to the Home screen.

The Home screen shows the current settings for the redate imprint. You can change the settings in the same way as with a regular meter imprint.

Setting the date

- Open the MENU.
- Select CHANGE DATE.
- Type the date.
- Press ✓ to set the date.

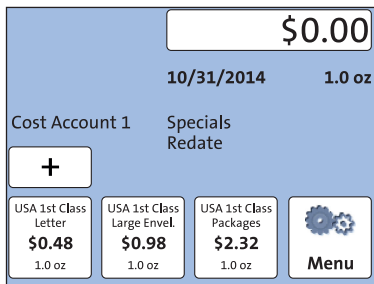

Print redate

When the Home screen shows the desired settings for the redate imprint:

- Position the mail piece the non-address side face up.




PostBase Mini prints the redate imprint.



When printing the redate imprint, advertising imprints are not available.

3.3 Reply Mail metering


You can meter reply mail. When metering reply mail, PostBase Mini prints a normal meter imprint without date in the clear text area.

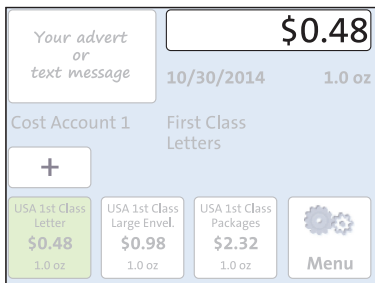


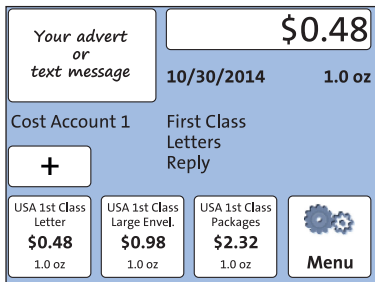
Setting the Reply Mail meter imprint

- In the Home screen, press the postage button.

PostBase Mini opens the Product calculation menu.

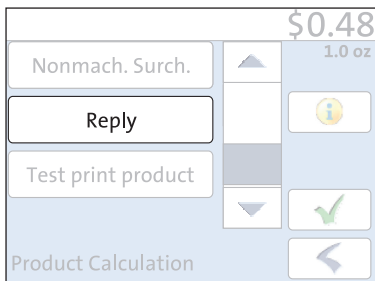

- Select the mailing data for the reply mail as usual.
- In the additional services list, select REPLY.
- When the desired product is set, press  to return to the Home screen.



Meter reply mail

The Home screen shows the current settings for the reply mail meter imprint. You can change the settings (e.g. advertising imprint) in the same way as with a regular meter imprint.

When the Home screen shows the desired settings for the reply mail meter imprint:


- Position the reply envelopes / cards as usual.

PostBase Mini prints the reply mail meter imprint.



3.4 Setting the postage manually

There may be particular cases where PostBase Mini does not offer the desired mailing data and thus cannot calculate the postage. In such a case, PostBase Mini offers the possibility to enter the postage value manually.

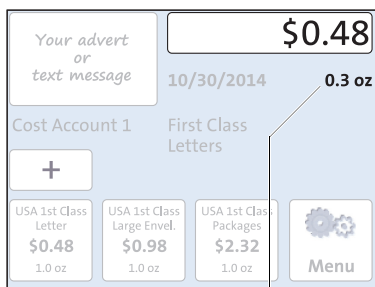


Manual postage only allowed when weight is below 1.0 oz or above 1 lb

- Weigh the mail piece.


Note: PostBase Mini does not allow manual postage entry in the weight range 1.0 oz to 1 lb.

- In the Home screen, press the postage button.

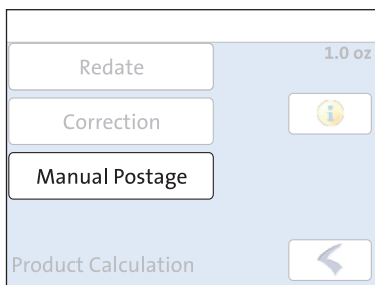




PostBase Mini opens the Product calculation menu.

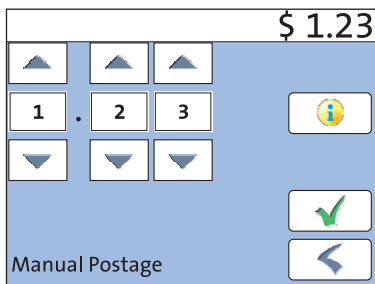- In the additional services list, select MANUAL POSTAGE.



PostBase Mini opens an adjustment menu where you can set the postage.

- Enter the desired postage and confirm with .
- Press the  button to accept the displayed product setting and to return to the Home screen.

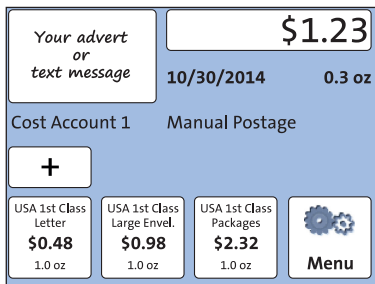

The Home screen shows the current settings. You can change the settings (e.g. date, advertising imprint) in the same way as with a regular meter imprint.

3.5 Uploading product data

Your PostBase Mini postage meter needs to upload product usage data regularly. If you keep your PostBase Mini switched on and connected to the internet, this will happen automatically each day at midnight.

PostBase Mini will remind you when it is time to upload the product usage data. If you fail to do so, the postage meter will lock down after a certain amount of time until you performed a data upload.

Upload data manually

- Open the MENU.
- Select DATA UPLOAD.



Please stand by. PostBase Mini establishes a connection with the data center and will then upload its product usage data.


A pop-up message is displayed when uploading data is completed.



Uploading product data is also done by postage downloading a value of \$ 0.


3.6 Authentication code for RemoteOne / ReportOne *(optional)*

When you connect your PostBase Mini to the RemoteOne / ReportOne software for the first time you will need to enter a PIN.

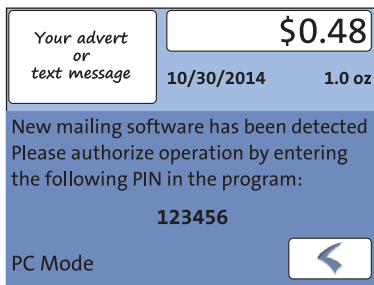

- Connect your PostBase Mini to the PC.
- Start the RemoteOne / ReportOne application.

PostBase Mini will generate and display the authentication code.

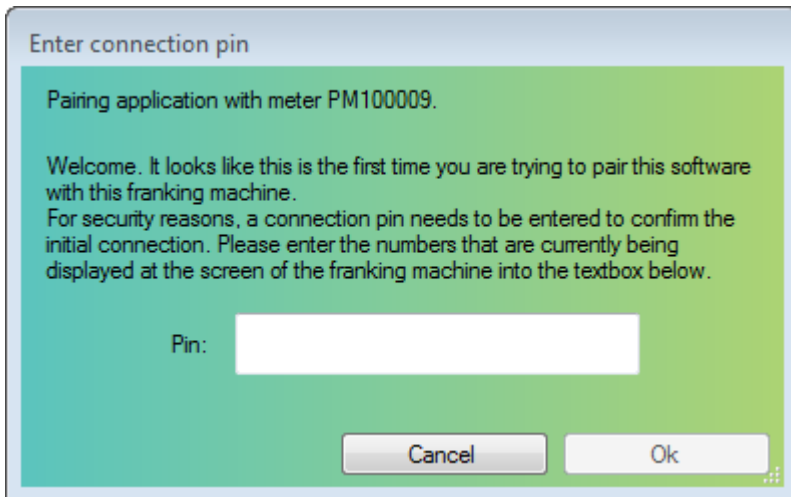

- Enter this PIN in the PC application.
- Press Ok.

Your PostBase Mini and this RemoteOne / ReportOne installation are now authorized to work together. You will not have to enter the PIN again.

4 Additional technical specification

The Technical Data for the PostBase Mini postage meter, information on the ink cartridge, as well as the mail piece specifications can be found in the Appendix of the PostBase Mini Operator Manual.

Information specifically relevant to the US country variant can be found in this chapter.

4.1 Equipment

Integrated Scale	Yes / 5 lb
Interfaces	USB, Ethernet/LAN
Rate table	Yes
Remote services (download postage, update rate table, software, ...)	Yes
Access control via PIN	Yes
Shortcuts for postal products	10
Accounts	3
Customizable meter advertisements	3
SMS-text messages, number (only with PC control software)	2
PC control software (RemoteOne)	Yes
PC control software & account management (ReportOne)	Optional
FP Portal access	Yes

Subject to short-term modification.

4.2 Postage Meter supplies

Suitable supplies, like ink cartridges and labels, for PostBase Mini are available via the **MyOneFP** Customer Portal.

Note: The full functioning of the PostBase Mini postage meter at the time of delivery can only be guaranteed when using original Francotyp-Postalia ink cartridges.

4.3 The Security Device

The Revenector Security Device (PSD) used in your PostBase Mini postage meter was authorized according to specifications of the United States Postal Service following an internationally valid practice. To commensurate to this standard the cryptographic keys used by the PSD have to be updated or exchanged after a specified period of time. Please, make sure that the postage meter contacts the Server at least once a year (e.g. by loading postage with the value of '\$0'), even if the system may not be in use. Otherwise the Security Device may disable itself and will have to be exchanged with costs for reconnecting the postage meter.

FCC Compliance Statement

This device complies with FCC Part 15, Subpart B, Class B.

5 Glossary

FP Portal	Via a PC or a laptop, you can access the essentials for your PostBase Mini postage meter, e.g. a complete overview of your data, updates, and the shop with accessories and consumables.
Meter imprint	<p>Metering mail for carrying by U.S. Postal Service.</p> <p>When metering, PostBase Mini prints among other things the indicia, the postage value, the date and the machine identification on the envelope. Details on the product (e.g. First-Class) appear below the postage.</p> <p>The meter imprint can also comprise an advert imprint (advert or text message).</p>
PIN	<p>Personal Identification Number.</p> <p>The PostBase Mini postage meter can be protected against unauthorized use via a PIN.</p>
RemoteOne	<p>RemoteOne is a user-friendly PC application enabling you to set up, maintain and use the PostBase Mini postage meter.</p> <p>RemoteOne enables you to perform your postage meter's basic functions directly on your computer. In addition to its ease of use, RemoteOne offers an extended functionality, e.g. entering / editing text messages and setting your frequently used postal products as shortcuts.</p>
ReportOne	<p>In addition to RemoteOne's entire functionality, ReportOne offers easy to handle administration and report features.</p>
Test print product (Zero imprint)	<p>Invalid meter imprint with the postage value \$00.00 and the indication 'VOID' printed over the data matrix. This feature enables you to check the settings for the meter imprint and the print quality.</p> <p>Test prints are not logged in the postage registers.</p>

6 Index

A

- Account 4
 - change 4
 - current account 4
- Advert 4, 5
- Advertising imprint 4

C

- Correction
 - imprint (example) 7
 - position a mail piece 7
 - print 7
 - set imprint 6

D

- Data matrix 5
- Data upload 12
- Date 5
 - in redate imprint 8
- Date (meter imprint) 4
 - set 4

E

- Equipment (standard / option) 14

H

- Home screen 4

I

- Ink cartridge 14, 15

M

- Mailing data 4
- Menu 4
 - open 4
- Meter imprint 16
 - USPS (example) 5

P

- PIN 16
- Postage 4, 5
 - correction 6
 - set manually 11
- Product calculation menu
 - open 4

R

- Redate 8
 - imprint (example) 9
 - position a mail piece 9
 - print 9
 - set date 8
 - set imprint 8
- RemoteOne 16
- Reply Mail 10
 - imprint (example) 10
 - meter 10
 - position reply envelopes / cards 10
 - set imprint 10
- ReportOne 16

S

- Security Device 15
- Serial number (postage meter) 5
- Service (contact) 19
- Shortcut
 - further shortcuts 4
 - select 4
 - selected 4
 - set postal product 4
- SMS text 4, 5
- Supplies 15

T

- Technical specification 14
- Test print product 5, 16

U

Usage data, upload *12*

V

VOID *5*

W

Weight *4*

Z

Zero imprint *5, 16*

7 Service



**FP Mailing Solutions
Francotyp-Postalia, Inc.
140 N. Mitchell Court, Suite 200
Addison, IL 60101-5629**

Customer Service (800) 341-6052

www.fp-usa.com

51.0053.3830.00 Rev. 01
2015-06 / xxx / helbig berlin

Works Cited:

FP. "Operator Manual." PostBase Mini Support, June 2015,