



2.2 PostBase Vision postage meter

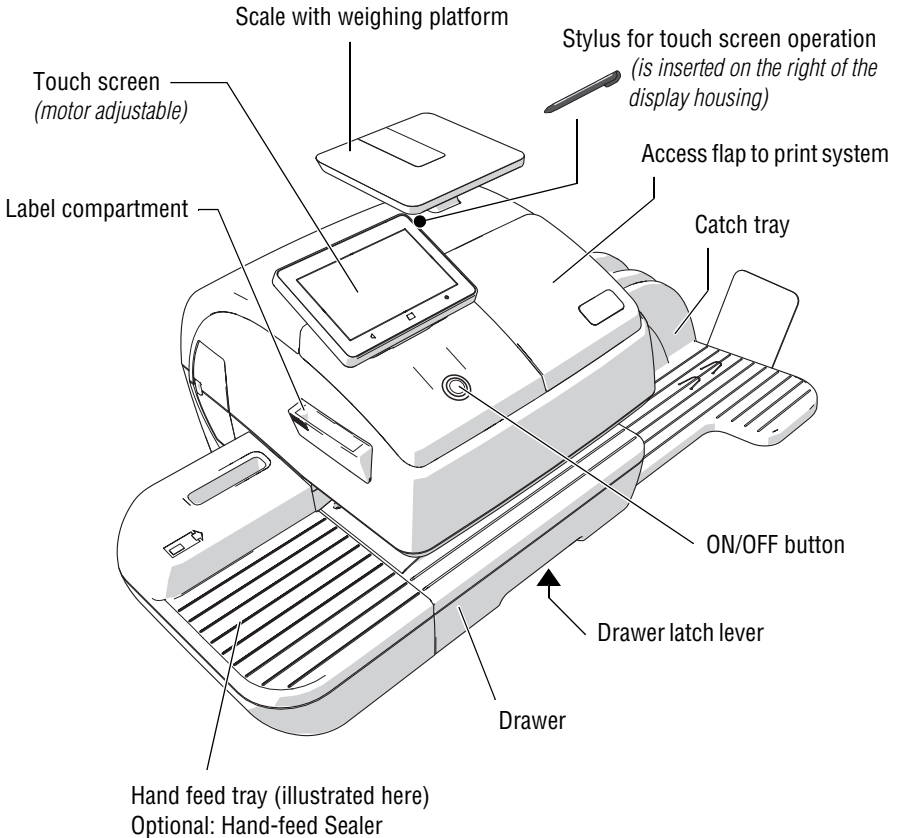

Works Cited:


“PostBase Vision User Manual (Full Reference Guide).” PostBase Vision Support Semi-Auto, Auto & Advanced, Apr. 2020. load.fp-usa.com/product_docs/PostBase/Vision/Technical/PostBase_Vision_Reference_Guide_USA_Rev02_2020042

Postage meter – rear view

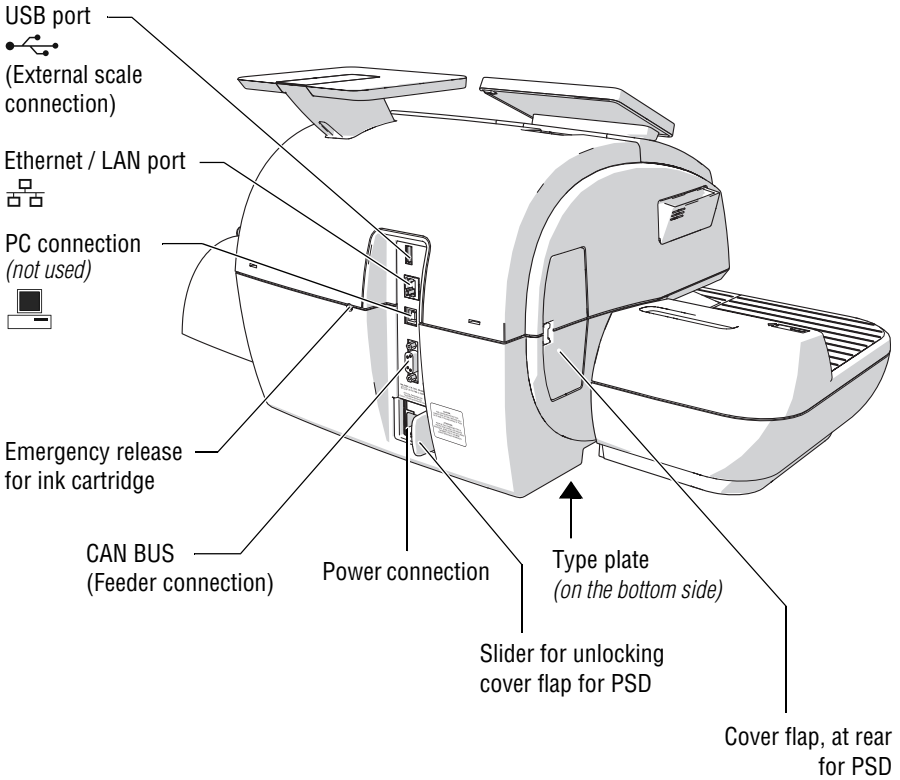

Works Cited:


2.3 PostBase Vision Feeder (optional)

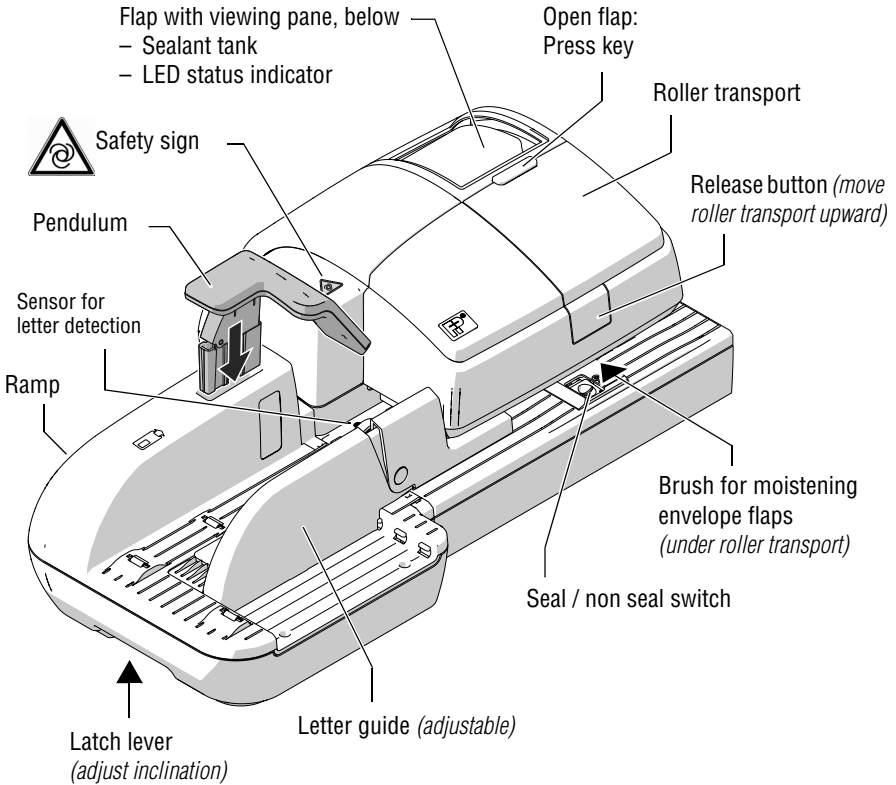

Works Cited:

“PostBase Vision User Manual (Full Reference Guide).” PostBase Vision Support Semi-Auto, Auto & Advanced, Apr. 2020. load.fp-usa.com/product_docs/PostBase/Vision/Technical/PostBase_Vision_Reference_Guide_USA_Rev02_20200423


Feeder – rear view

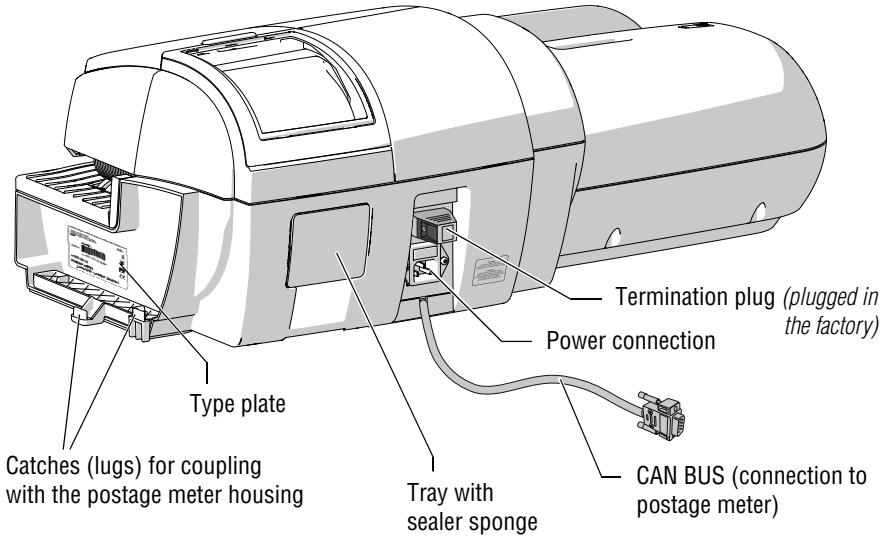

Works Cited:

"PostBase Vision User Manual (Full Reference Guide)." PostBase Vision Support Semi-Auto, Auto & Advanced, Apr. 2020. load.fp-usa.com/product_docs/PostBase/Vision/Technical/PostBase_Vision_Reference_Guide_USA_Rev02_20200420


2.4 PostBase Vision Feeder plus (optional)

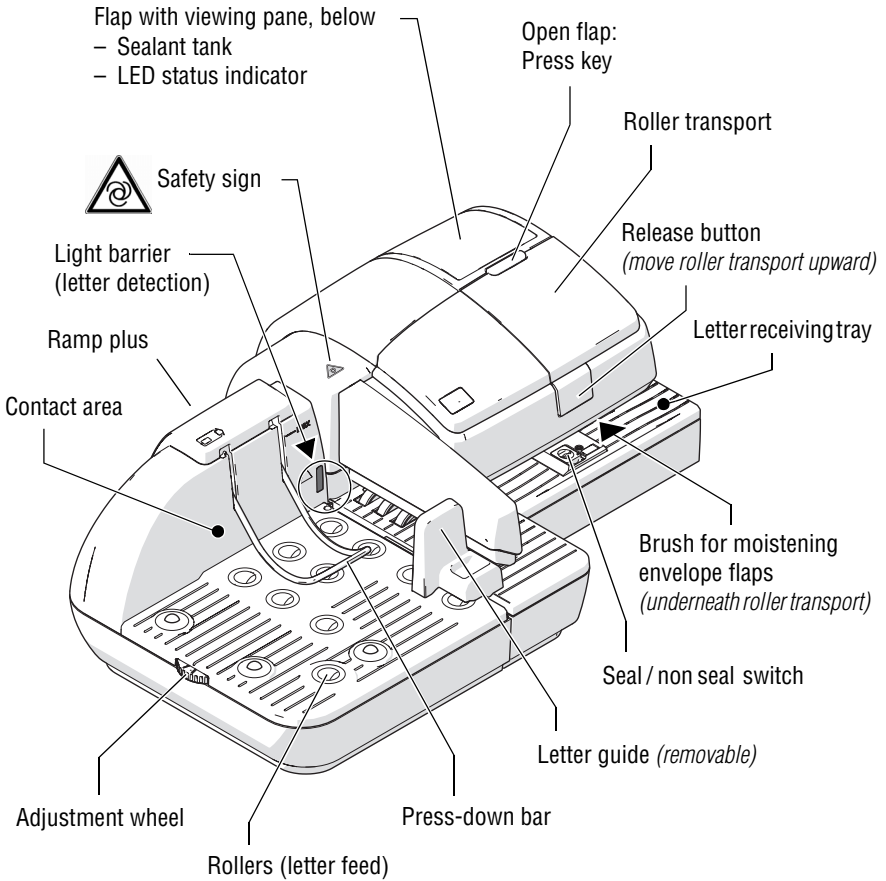

Works Cited:

“PostBase Vision User Manual (Full Reference Guide).” PostBase Vision Support Semi-Auto, Auto & Advanced, Apr. 2020. load.fp-usa.com/product_docs/PostBase/Vision/Technical/PostBase_Vision_Reference_Guide_USA_Rev02_20200423

Feeder plus – rear view

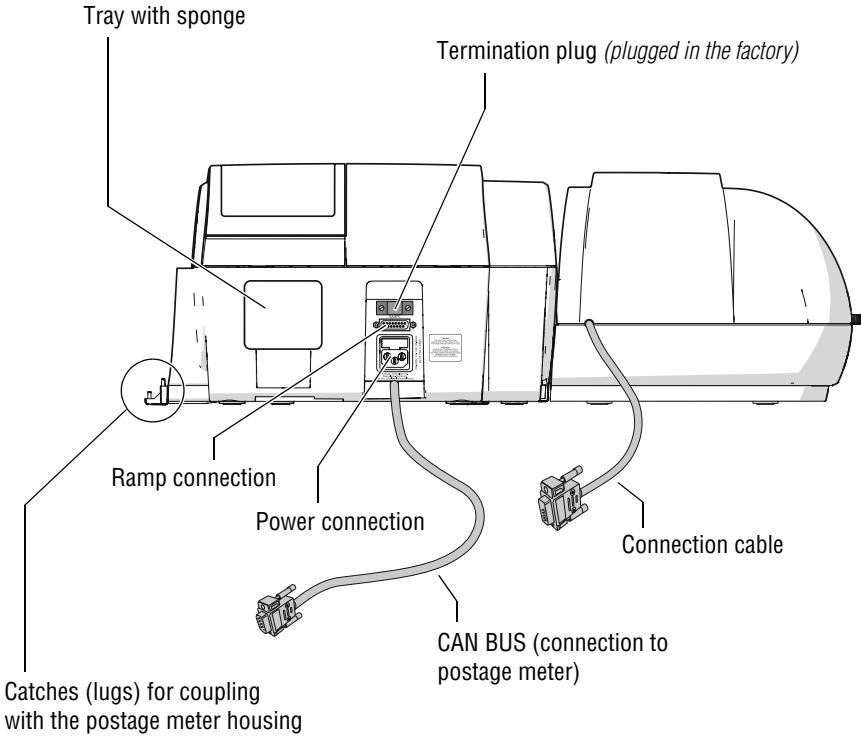

Works Cited: