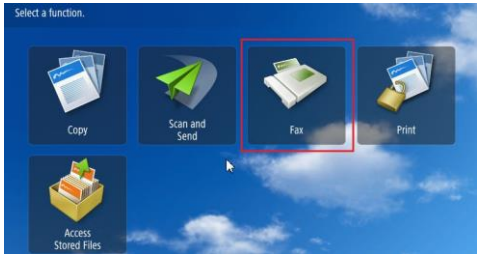
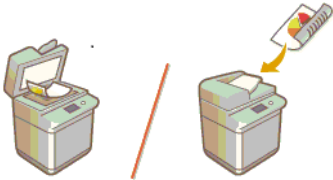
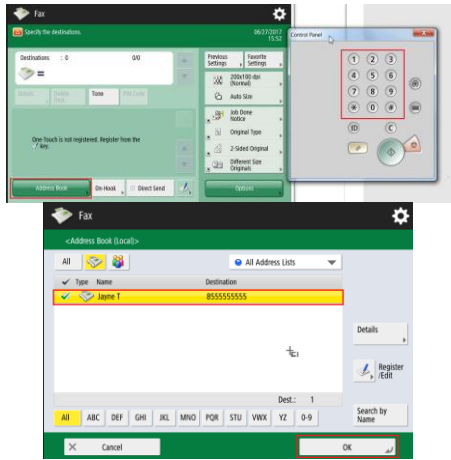



# Canon ImageRUNNER ADVANCE DX: Faxing

Using the Fax feature.

## Basic Faxing: From the Main Menu

<p>1. Select the Fax icon from the Main Menu screen</p>	
<p>2. Place your document face up in document feeder or on the glass platen.</p>	
<p>3. Enter a destination by one of two ways:</p> <ol style="list-style-type: none"> <li>Using the number using the keys on the number pad: If you access an outside line with a number, enter that number first. Example: 919529256801</li> <li>Using the Address Book: Select Address Book and choose from the registered fax numbers.</li> </ol>	
<p>4. Select additional options as needed: 2-sided original, mixed sizes, resolution, etc.</p> <ol style="list-style-type: none"> <li>For more advanced features such as job build, select the Options button.</li> </ol>	
<p>5. Press the green "START" button to begin faxing.</p>	