
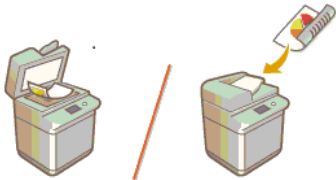

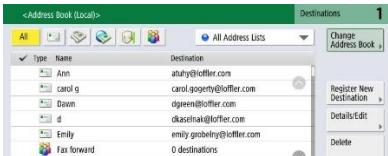
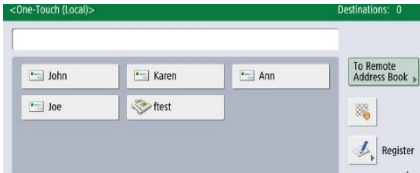


 


Canon ImageRUNNER ADVANCE DX: Scanning Basics

From the Main Menu Screen:

1. Select the Scan and Send button.		
2. Place the Originals to scan. <ul style="list-style-type: none">• In Document Feeder – Paper faces up.• On Glass – Paper faces down.		
3. Select a Destination . <ul style="list-style-type: none">• From Address Book: Select the Address Book icon, then select a pre-registered address.• From One-Touch: Select the One Touch icon, then select a pre-programmed button.• New Destination: Select the New Destination icon, pick a destination type (ex: email address), then type in the destination information.		
<div><h3>Address Book</h3></div>	<div><h3>One-Touch</h3></div>	<div><h3>New Destination</h3></div>
4. Select OK .		

5. Change additional settings as needed.

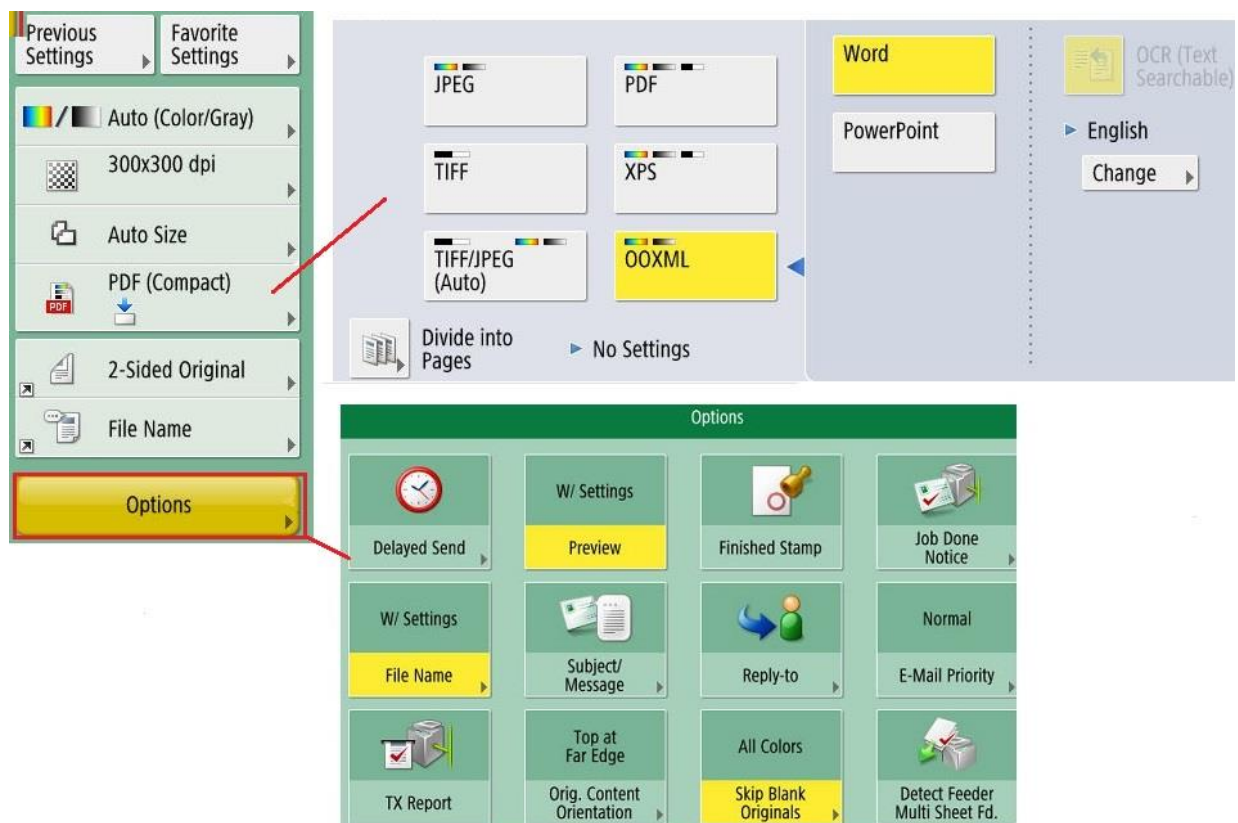

- **Color:** Select to scan in color or grayscale.
- **DPI:** Select the resolution, or “Dots Per Inch.” Max 600x600 DPI.
- **Document Size:** Sizing is defaulted to “Auto” detect, otherwise there is an option to type in custom dimensions for scan area on the glass.
- **File Type:** Icon will show as defaulted file type. Choose between **PDF, Compact PDF, TIFF, JPEG** or **OOXML** - shows format options such as Microsoft Word or PowerPoint. **OCR** uses Optical Character Recognition for searchable text. **Divide into pages**, splits the pages into separate scans.
- **2-Sided Original:** Documents scan 1-Sided by manufacturers default. Select icon to turn on 2-Sided and choose if the document is left-bound (flips “book” style), or top-bound (flips “calendar” style.) Skip blank pages icon is on second page in **Options**.
- **File Name:** Rename the file before sending.
- **Options:** Choose additional features, such as density, job build, or skip blank pages.

6. Select the **Start** button to begin sending.