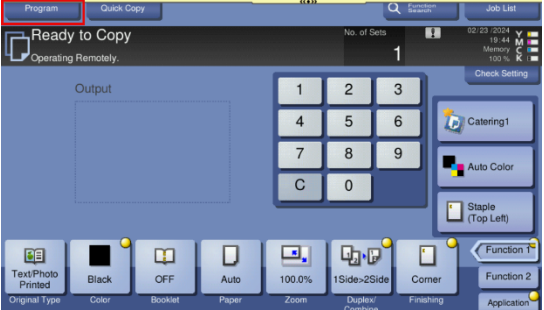

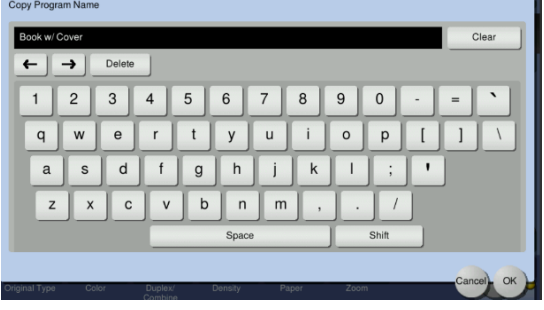


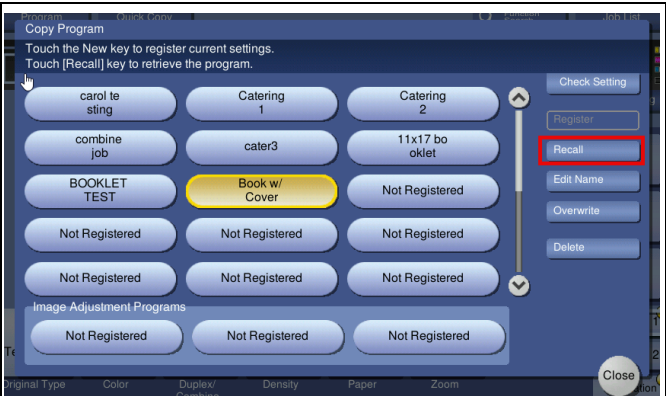
## Konica Minolta i-Series: Program Favorites - Registration & Use

*This guide will go over how to save and use favorites using the Program option.*

### Registering a program button:

<ol style="list-style-type: none"> <li>1. Select the Copy Screen or Scan Screen.</li> <li>2. Select settings for Copy or Scan job.             <ul style="list-style-type: none"> <li>• Ex: Copy – 2-Sided + Staple.</li> <li>• Ex: Scan – 600DPI + JPEG.</li> </ul> </li> <li>3. Select <b>Program</b> in the top-left corner of the screen.</li> </ol>	
<ol style="list-style-type: none"> <li>4. Select a button to register.</li> <li>5. Select <b>Register</b>.</li> </ol>	
<ol style="list-style-type: none"> <li>6. Name the program. When complete, select <b>OK</b>.</li> </ol>	

### Recalling a program button:

<ol style="list-style-type: none"> <li>1. Select the Copy Screen or Scan Screen.</li> <li>2. Select <b>Program</b> in the top-left corner of the screen.</li> <li>3. Select the programmed button.</li> <li>4. Select <b>Recall</b>. The settings will be applied to the job.</li> <li>5. Press <b>Start</b> to begin job.</li> </ol>	
---	--