



## Print to Envelopes

As a general media loading guideline, use only paper envelopes. Print envelopes 1-sided only. Use Tray 5 to print envelopes. Set Media Type to **Heavyweight 2**.

The following media can damage the printer:

- Envelopes with windows, metal clasps, side seams, or adhesives with release strips
- Padded envelopes

To print:

1. Load envelopes in the Bypass Tray. For **Media Type**, select **HeavyWeight 2** and **Custom Size**. For details refer to [Load Envelopes in Tray 5 \(Bypass Tray\)](#).
2. From the print driver, select a specific tray loaded with the envelopes.

### Next Steps

---

- › [Browse: Print,](#)
- › [Home](#)

***Did this page help?***

0 ratings ☆☆☆☆☆



**[Provide Feedback >](#)**