




## Canon ImageRUNNER Advance: Installing Windows Print Driver

- 1. Open www.usa.canon.com and select Drivers and Downloads.
- 2. Search for the model of the Canon device.

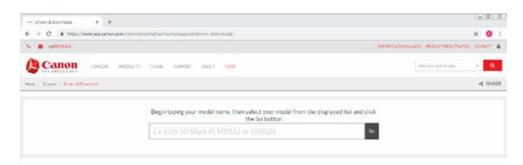


3. Select the recommended driver from Canon and download. Loffler recommends the Generic plus UFR II in most cases.

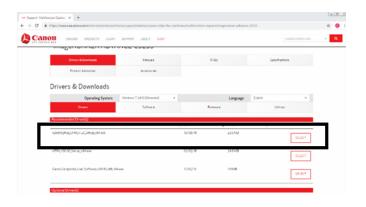

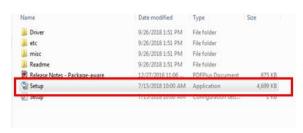



- 4. Open the downloaded file and extract.
- 5. Open file to run the setup wizard.
- **6.** Follow the steps in the wizard. Add machine by **Standard**.
- 7. If the machine automatically finds the IP address, finish the installation. If it does not, continue onto the next steps.
- **8.** Select Back until the **printer setup** window appears and select custom.
- 9. Press Next on the wizard.

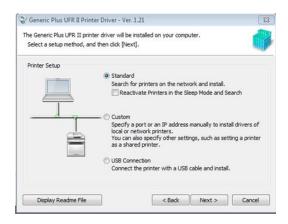



- 10. Select Add Port and select Standard TCP/IP Port. Press OK.
- 11. A new installation wizard will appear. Press Next.
- **12.** Enter the machine's **IP Address** and press Next.
  - To find IP Address at Device: Select Settings/Registration >> Preferences >> Network >> Output Report and the report will print with the IPv4 address.
- 13. Press Finish. The installation is complete.

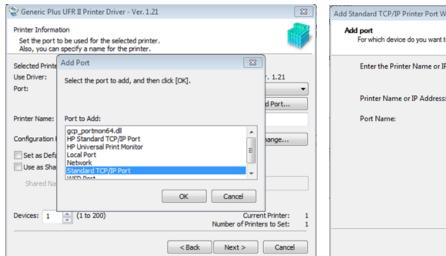

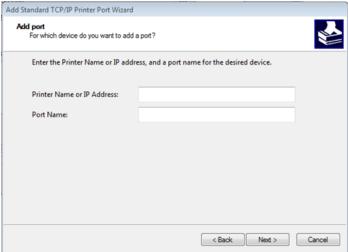

<sup>\*\*</sup>Note: Print drivers are set to 2-sided and color by default. For assistance changing default settings, please contact the Loffler service department. Contact information is located on the red sticker on the front of the device.