# LOFFLER

# Xerox AltaLink: Add/Edit or Delete Contacts

#### Add a New Contact at the copier

1.	Select the <b>Home</b> button on the front panel and select the <b>Email</b> icon.	
2.	Select <b>Manual Entry.</b> Note: If the <b>Manual Entry</b> icon doesn't appear, select the <b>Add Recipient</b> button, Add Recipient then <b>Manual Entry</b> .	Manual Entry
3.	Enter the contact's email information.	To: Jane.Doe@loffler.com
No	te: Use the bottom row of the keyboard to enter Help key to show how to access other language symbols Toggles between upper Toggles between upper Toggles between upper	er special characters and use shortcuts.
4.	Select the Address book icon.	To: Jane Doe@loffler.com
5.	Select Create New Contact.	Add to Device Address Book
6.	The email field should show. Select the people icon field to change the display name.	Create New Contact
7. 8.	Enter the name to display in address book. Select <b>OK</b> to save and close the <b>Edit</b> <b>Display Name</b> .	Edit Display Name     X       Iane D     Image: Control of the second s
9.	Select <b>OK</b> to save.	Create New Contact

# LOFFLER

### Add a New Contact using the Embedded Web Server

1.	At a computer, open a browser and enter the IP address of the AltaLink. Note: The IP address can be found in the top left corner of the home screen.	Login
2. 3.	Enter the <b>Username</b> and <b>Password</b> for the copier. Select <b>Login</b> .	Login User ID admin Password Login
4.	Select the <b>Address Book</b> icon.	Xerox®AltaLink® B8045
5.	Select the <b>Add</b> button to add a new contact.	Add
6.	Populate necessary fields, i.e. First and Last Name, Display Name [name that appears in contact list], email and/or fax. Note: If the entry is a favorite, select the appropriate favorite button at the right of the entry fields.	First Name       Last Name         Company       Image: Company         Display Name *       Image: Company         Image: Company       Image: Company </th
7.	Select the <b>Save</b> button	Save



#### Edit a Contact at the Copier

1. 2.	Select the <b>Home</b> button on the front panel to display the home screen. Select the <b>Email</b> icon.	
3.	Select Device Address Book.	
	Note: If the <b>Device Address Book</b> icon doesn't appear, select the <b>Add Recipient</b> button, Add Recipient then <b>Device Address Book</b> .	Device Address Book
4.	Select the <b>i</b> button next to the recipient name.	Favorites     Contacts       Jane Doe jane.doe@loffler.com     0K
5.	Select which field to edit.	Details
6.	Make the changes and select <b>OK</b> to save and close the window.	Edit Email Address
7.	Select <b>OK</b> to close the <b>Details</b> window and OK to close the Contacts window.	Details

#### Edit a Contact using the Embedded Web Server

1.	Select the contact from the list and press <b>Edit</b> .	Duck, Donald       G       Gogerty, Carol       Gregory       Gregory T       Grobelny, Emaly       J       JD	
2. 3.	Edit the fields as required. Select the <b>Save</b> button to save the changes.	First Name Last Name Donald Duck: Company Disney World Di	

#### ©2019 Loffler Companies

MN: Bloomington; Duluth; Mankato; Rochester; St Cloud; Willmar; Grand Rapids | WI: Eau Claire; Hudson; La Crosse; Green Bay IA: Sioux City; Spencer | NE: Norfolk | ND: Fargo; Grand Forks | SD: Aberdeen; Sioux Falls



#### Delete a contact using the Embedded Web Server

A contact cannot be deleted at the copier. Log into the remote user interface to delete a contact from the address book.

