 
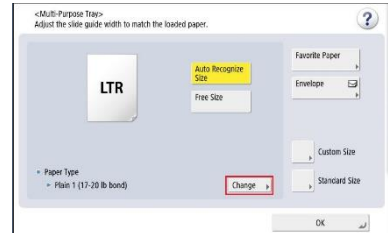 


## Canon ImageRUNNER Advance: Printing Labels

Caution: Only print labels through the multi-purpose tray. When going from the paper drawers, the labels have a much higher chance of peeling off and causing major complications to the machine.

 
### At the Copier

1. Insert the labels into the multipurpose tray to open the multipurpose tray's Custom Size display window.
2. Click **Change** to change the paper type.

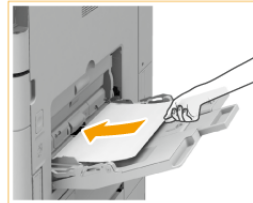


3. Select **Labels**

4. Click **OK**.

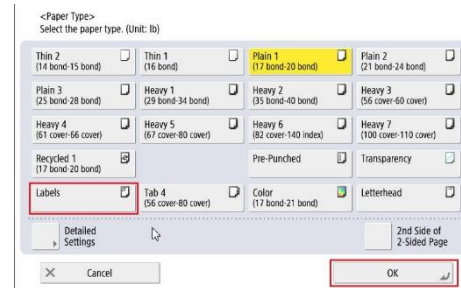


### From the computer, access the print driver:

 1. Open the labels document.
2. Select **File>Print**.
3. Select the **Canon** copier.

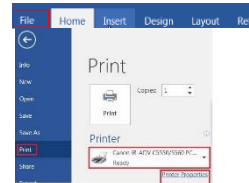

4. Select the **Paper Source** tab.
5. Select **Multipurpose tray**.
6. Select **Labels** from the Settings button.

 *Note: Labels can only print 1-sided.*

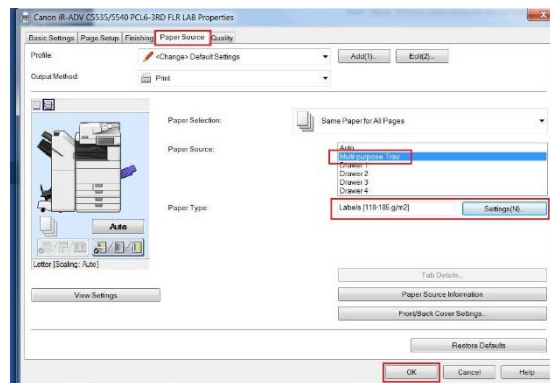

7. Click **OK**.
8. Click **Print** to print the labels.

