

Canon ImageRUNNER Advance: Printing on Tab Paper

Setting up Tabs at the Machine:

 
1. Load the tab paper in the paper drawer. *(If printing from multi-purpose tray, skip to step 6.)*



2. Press the **Setting and Registration** button on the control panel.
3. Log on if necessary.



4. Select **Preferences>Paper Settings>Paper Settings>**.

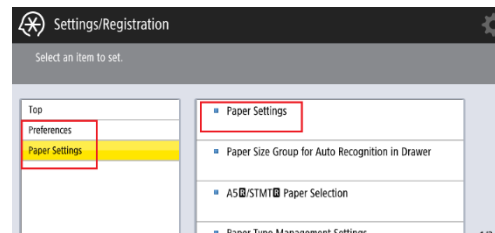

5. Select the drawer where the tab paper resides.
6. Click **Set** to open the paper registrations.



7. Select **Tab** paper button.



Note: If the tab paper button isn't among the listed paper types, click the **Details Setting** button.



 
QUICK GUIDE

LOFFLER

8. Scroll to and select the appropriate tab paper type.

Note: If the OK button is grayed out and unavailable, you will not be able to print tabs from this paper drawer.

9. Click the **No. of Tab** button to establish the number of tabs in the set and click **OK**.
10. Click **OK** and **Close** to exit the **Setting and Registration** windows.

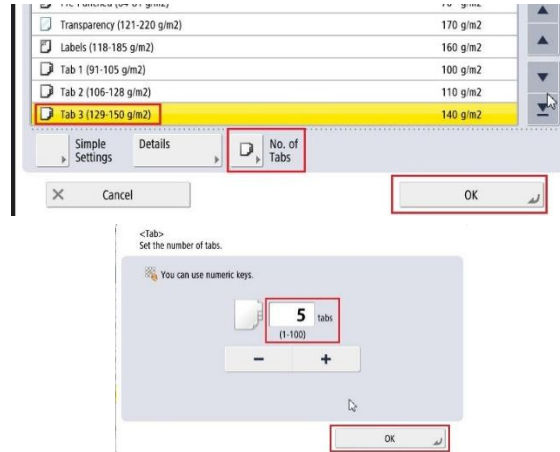

Printing onto Tab Paper from the Computer:

1. Open the tab template document you created for the tabs you want to print.
2. Click **File** from the windows menu.
3. Click **Print**.
4. Select the Canon printer.
5. Click **Printer Properties/Preferences**.
6. Click the **Paper Source** tab.
7. Leave the default for **Paper Selection, Same Paper for all Pages**.
8. From the **Paper Source** list, select the drawer where the tab paper resides.
9. Click the **Paper Type Settings (N)** button to select the paper type. (Tab 1 or Tab 2.)
10. Click **OK**.
11. Click the **Tab Details** button on the **Paper Source** tab window to adjust the offset tab position. This is the amount the image will be shifted on the tab.
12. Click **OK** to close the **Tab Details** window.
13. Click **OK** to close the print driver and proceed to the **Print** button to print.
14. Click **Print** to print tabs.

