

 
Canon ImageRUNNER Advance: Auto Gradation Adjustment

This function is a great first step to fixing color quality issues when copying/printing by adjusting the density of the toner laid onto the paper.


What is Auto Gradation Adjustment?

This is a function that adjusts toner density (darkness) on the paper when printing/copying. This will help with the color accuracy and image quality. One reason a gradation may need to take place is doing a print/copy job on heavy paper/media. (Different thickness or different paper may use toner differently.) The machine has options to adjust for multiple thicknesses.


1. On the panel of the copier, select the Settings/Registration button.
2. Log in if necessary.

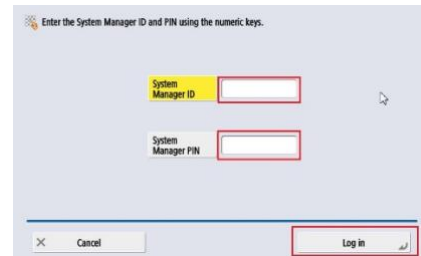

 3. Select the following path to access Auto Adjust Gradation.
Adjustment/Maintenance >> Adjust Image Quality >> Auto Adjust Gradation.

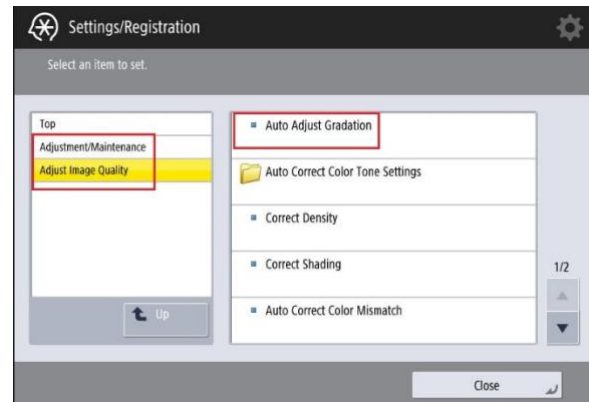

 4. Choose the thickness of paper to adjust for: Plain/Heavy 1 or Heavy 2-7.

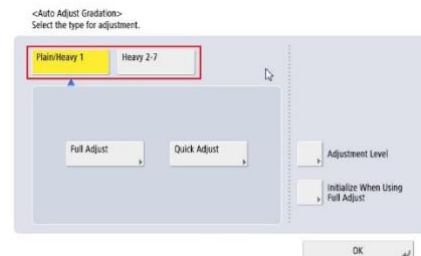

- 5. Recommend completing a Quick Adjust before completing a Full Adjust to align the color registration.
 - a. Full Adjust:
 - i. Best to use when color or image quality needs to be adjusted.
 - b. Quick Adjust:
 - i. Nice option for a short adjustment. Use when:
 - 1. Machine receives frequent calibrations as routine maintenance.
 - 2. Color specific job coming up.
 - 3. Machine linearization before Fiery/Controller calibration.

 


- 6. When the Quick Adjust is complete, perform a Full Adjust.

Full adjustment performs precise linearization by outputting and scanning test prints. The machine will print out 4 test pages, and have the end user scan them in to adjust.




- 7. Select the drawer that contains the paper type to adjust and select OK.

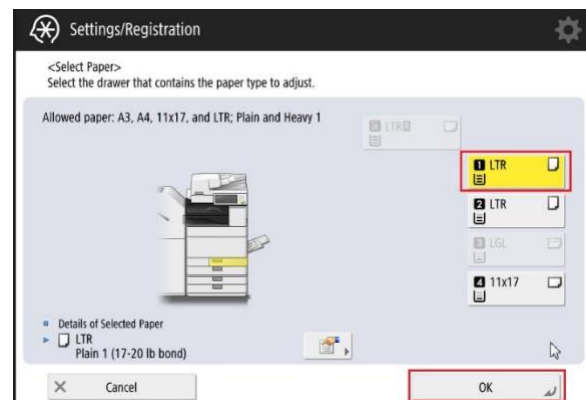


QUICK GUIDE

LOFFLER

 8. Select the “Start Printing” button to print the first of 4 test pages.

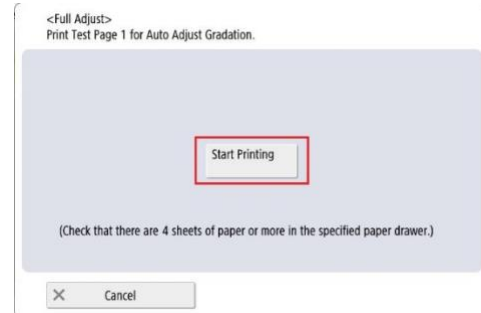


 9. Place printed test page on glass, then select the “Start Scanning” button.

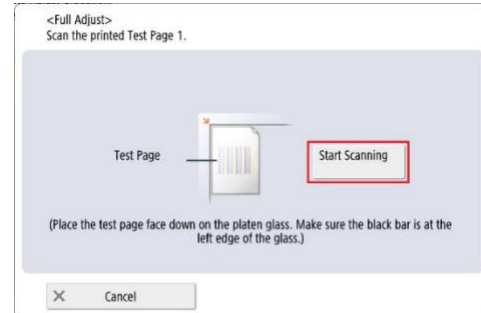

10. Repeat 3 more times until machine says <Full Adjust>... Adjustment is complete.

 Note: The adjustment may take a few minutes.

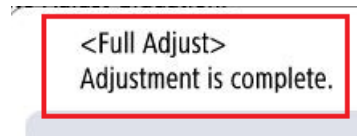

11. Close out of Settings and Registration once completed.

