 


Canon ImageRUNNER 1435iF: Basic Faxing

Sending Faxes on an imageRUNNER 1435iF

1. Place the document[s] either on the glass or in the document feeder.

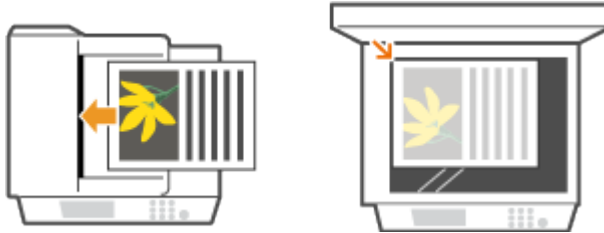

 
2. Press **FAX**.

3. Enter the destination using the numeric keys, and press **OK**.

If you enter the wrong characters, press **C**. (Press to delete each character one by one. Press and hold to delete all the input characters at once.)

To make it easier to specify destinations, use other methods such as the Address Book, One Touch or Coded Dial buttons to choose preprogrammed destinations.

4. Click **OK** to Apply

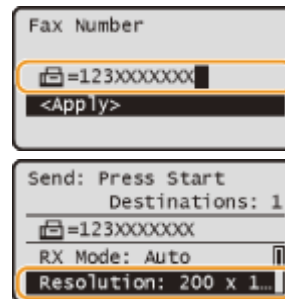

5. Specify the scanning settings as necessary.

Use ▲/▼ to select the settings as necessary,

6. Press **Start** to start sending, scanning starts.

If you want to cancel sending, press the Stop button **Stop** ► select Yes and **OK**.

When placing the documents in the document feeder in step 1, the fax is “sent” when the scanning is completed.

When placing documents on the platen glass in step 1, follow the procedure below.

1. Use ▲/▼ to select the document size, and press **OK**.
When there is only one page to be scanned, proceed to step 3.
2. Place the next document on the platen glass, and press **Start**. Repeat this step until you finish scanning all the pages.
3. Select <Start Sending> and press **OK**, the fax is sent.

