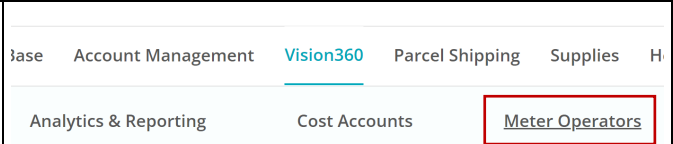
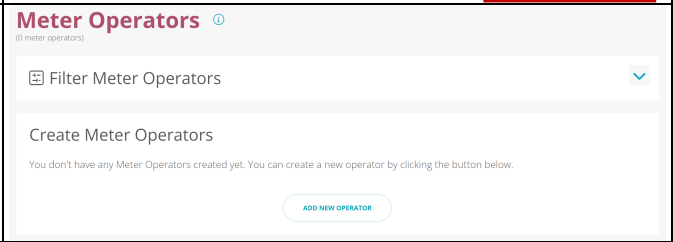
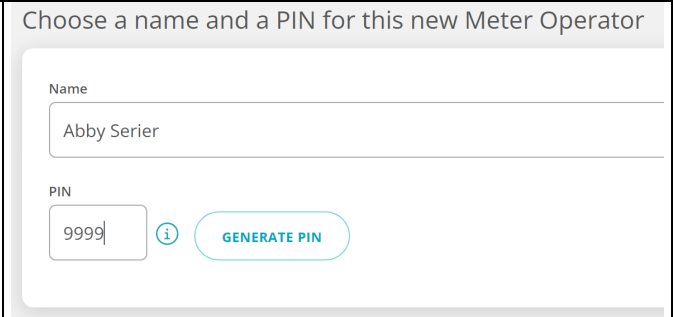
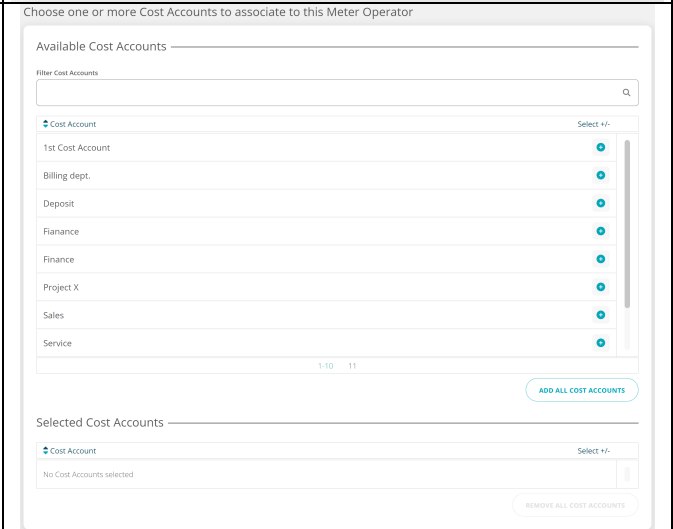
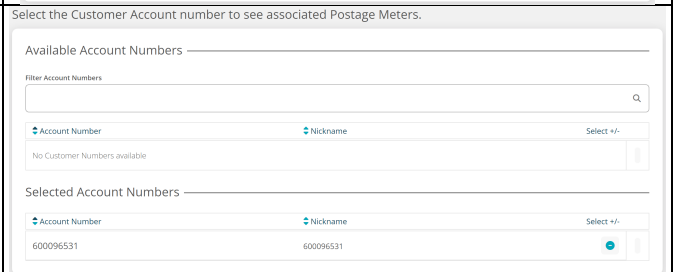
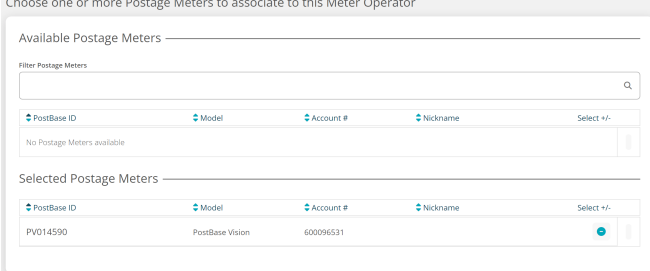
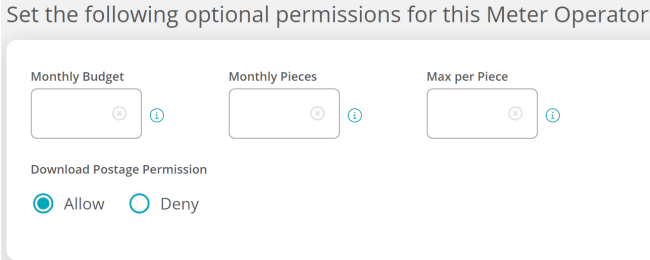
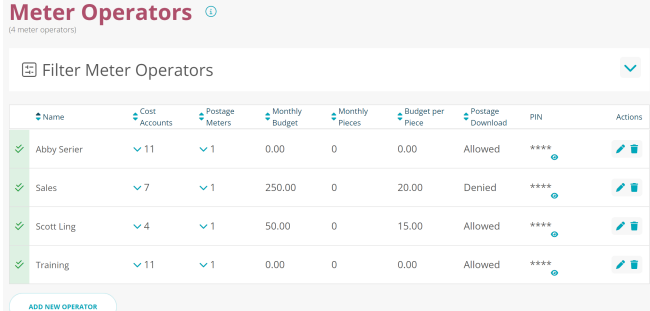


PostBase Vision: Creating & Activating Meter Operators


This guide will go over how to create and activate Meter Operators. They provide access control by creating profiles where name, pin, budgets, cost account(s) and download approval can be set.

At the Computer:

<ol style="list-style-type: none"> 1. Login to MyFP Customer Portal. 2. Hover over Vision 360 and select Meter Operators. 	
<ol style="list-style-type: none"> 3. Click Add New Operator. 	
<ol style="list-style-type: none"> 4. Give the operator a Name & Pin then click Next. 	
<ol style="list-style-type: none"> 5. Assign desired Cost Accounts to Meter Operator then click Next. 	
<ol style="list-style-type: none"> 6. Assign desired Customer Account Number then click Next. 	

<p>7. Choose desired Postage Meter(s) this Meter Operator will be associated with and click Next.</p>	<p>Choose one or more Postage Meters to associate to this Meter Operator</p> 
<p>8. Set a Budget if desired and choose if the Operator will be able to download postage, then click Create Meter Operator.</p>	<p>Set the following optional permissions for this Meter Operator</p> 
<p>9. Continue to Add New Operators until all have been added.</p>	<p>Meter Operators (4 meter operators)</p> 

At the Meter:

<p>1. Click Menu in the lower left-hand corner.</p> <p>2. Scroll to Manage Admin Pin and select.</p> <ul style="list-style-type: none"> • Enter a four-digit pin twice for verification, then click Save. • The Admin Pin will appear in the portal as well. 	
<p>3. To login to the meter, select an operator, enter assigned pin and confirm.</p> <p>4. To logout, briefly press the ON/OFF button.</p> <ul style="list-style-type: none"> • Holding the button will turn off the machine. 	