

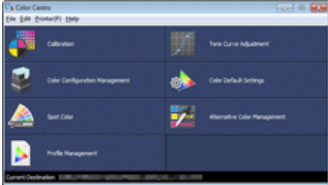


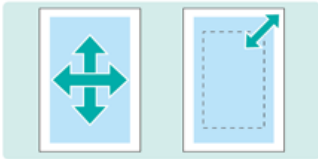

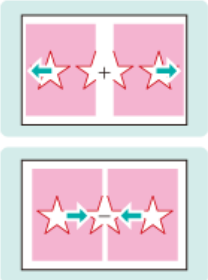


## Selecting the Item to be Adjusted

This machine offers many detailed adjustment functions.

Read the explanation for each item and execute the appropriate adjustment.

<p><a href="#">Image Quality</a></p>  <p>■ By using Color Centro, you can make various adjustments to the image quality. Use functions, such as calibration to maintain good image quality, spot color and alternative color registration, and color configuration for more efficient color output setting, according to the job.</p>	<p><a href="#">Both Sides Adjust</a></p>  <p>■ You can adjust the misalignment on the front and back sides of the print. Two methods are available: shifting the image to move the whole print range or changing the horizontal and/or vertical magnification.</p>
<p><a href="#">Book Spread Print</a></p>  <p>■ You can adjust the margin of the gutter of a book spread page.</p>	<p><a href="#">Staple</a></p>  <p>■ You can adjust the staple position for stapled booklets and adjust the misalignment of papers in a stacked paper set.</p>
<p><a href="#">Punch</a></p>  <p>■ You can adjust the misalignment or tilt of the punch hole positions.</p>	<p><a href="#">Booklet</a></p>  <p>■ You can adjust a booklet's folding position, staple pitch, and staple center position.</p>
<p><a href="#">Perfect binding</a></p>  <p>■ You can adjust the misalignment, curves, and sheet protrusions in perfect-bound books. Six adjustment methods are available.</p>	<p><a href="#">Fold</a></p>  <p>■ You can adjust the fold position for Z-folding, tri-fold-in, and gate folding. For gate folding, the positions of all three folds can be adjusted separately.</p>