


Overview of [COPY] Screen

The [COPY] screen is displayed when you make a copy. This screen allows you to select the desired copy conditions, print, and reserve jobs.

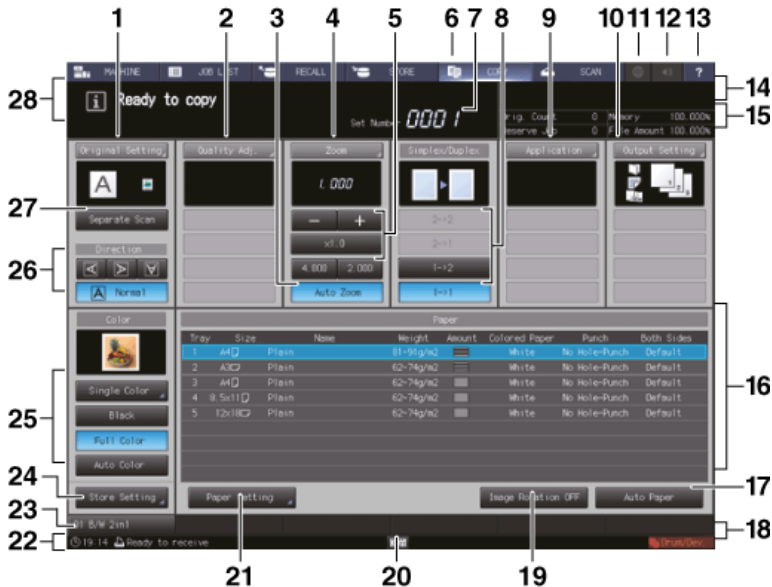

No.	Name	Description
1	[Original Setting]	Displays the [Original Setting] screen which allows you to set conditions of the original to be copied. [Direction] keys provided under the [Original Setting] screen can also be used to select the direction of the original. The following types of icons appear under [Original Setting]. <ul style="list-style-type: none"> •Displays an icon for the direction of the original specified in [Direction]. •Displays an icon for the function that is specified in [Type]. •Displays a text for the function that is specified in [Special]. •Displays an icon when [Thin] is selected in [Thickness]. •When you select [Custom] or [Tab Paper] in [Original Size], the selected size is displayed. •Sets the function to remove dust on the slit scan glass when the original, running through the ADF, is scanned on it. For details, contact your service representative.
2	[Quality Adj.]	Displays the [Quality Adjustment] screen to adjust the quality of output images. A maximum of 3 manually specified quality adjustment items are displayed under [Quality Adj.]. A maximum of 4 shortcut keys for frequently used quality adjustment functions are displayed under [Quality Adj.]. When a mode other than [Auto] is selected in [Screen Pattern], the selected screen is displayed. The density setting can also be displayed in addition to shortcut keys. For details, refer to Shortcut Key Register: Registering the Customized Operation .
3	[Auto Zoom]	Highlighted when [Auto Zoom] is on. And pressed when using the Auto Zoom function.
4	[Zoom]	Displays the [Zoom] screen for setting [x1.0], [Auto Zoom], [Vert./Horiz. Zoom], [Enlarge], [Reduce], and [Set Zoom Ratio]. Keys below [Zoom] on the [COPY] screen can be used for specifying [Set Zoom Ratio], [x1.0], and [Auto Zoom].
5	Zoom setting button	To set the [Vert./Horiz. Zoom] ratio, press [-][+]. To select the same magnification (100 %), press [x1.0]. To select [Set Zoom Ratio], press a button on which set zoom ratio is displayed.
6	[COPY] tab	Displays the [COPY] screen to perform copy operations.
7	Set Number indicator	Indicates the print quantity entered from the keypad on the control panel .
8	Simplex/Duplex	Selects the Simplex/Duplex copy mode. If the original is not positioned, the Duplex button may not be displayed.
9	[Application]	Displays the [Application] screen to select application functions. A maximum of 5 icons for set application functions are displayed under [Application]. Up to four specified application functions are displayed as shortcut keys.
10	[Output Setting]	Displays the [Output Setting] screen to select the [Bind Direction] and [Face/Order], and to set the [Output]. Set output settings are displayed as icons in the area under [Output Setting]. A maximum of 4 shortcut keys for frequently used output functions are displayed under [Output Setting].
11	Web Browser	Displays the screen that corresponds to the URL specified on the Web browser.
12	Alarm Sound/Sound	Selects whether or not to ring all alarm sounds/sounds.
13	Help	Displays the help message which provides information on the screen currently displayed. Depending on the screen, the help key may be dimmed and cannot be selected. Press in the [MACHINE] screen to display instructions about how to replace toners, replace waste toner

		boxes, load paper, add staples, dispose scraps of staples, punches, and trims, supply glue pellets, and supply water to the humidifier tank.
14	Output information indicator	The upper part shows the print quantity of the current print job and set quantity. The lower part shows the job number of the current print job and a user name (when a user name is entered for user authentication) or a section name (when a section name is entered for section authentication).
15	Machine management information indicator	Displays original print count and the number of reserved jobs (unit: number), and the remaining amount of memory and the file system (unit: %). The remaining amount of memory can also be displayed in GB.
16	Tray information indicator	Displays paper size, direction, paper name, paper weight, remaining amount of paper, paper color, punched/not punched, Both Sides Adjust set to Main Body Trays, Paper Feeder Unit PF-602m, Paper Feeder Unit PF-707, Paper Feed Unit PF-707m, Large Capacity Unit LU-202m, Large Capacity Unit LU-202XL, Multi Bypass Tray MB-506, Banner Tray Unit MK-740, or Output tray reinforcing unit for banner MK-740m.
17	[Auto Paper]	This key is highlighted when the [Auto Paper] function operates. And pressed when using the [Auto Paper] function.
18	Machine status indicator/right	Displays [Fuser (Env.)], [USB Drive], [Y-Toner], [M-Toner], [C-Toner], [K-Toner], [PM Call], [ADF Clean], [Consumable], [Un-Comp.], [Security], [Modem Err], [ORU-M], [Dark Tone]. Up to 4 indicators can be displayed in large size. When 5 or more indicators are displayed, small icons without texts will substitute for the indicators from the 4th and onward. The maximum number of items displayed is a total of 7, including 3 normal-sized icons and 4 small-sized icons.
19	[Image Rotation OFF]	Activates/Deactivates the Image Rotation function.
20	Soft-hard key icon	When using Real-time Remote Panel, hard keys of the control panel can be displayed on a computer screen and on the touch panel . Press any part of the black bar with this icon displayed. It does not function in other cases. When you move to another screen from the screen with hard keys displayed, the hard key display disappears. For details, refer to Remotely Controlling Machine (Remote Panel) .
21	[Paper Setting]	Configure the paper setting of the main body trays, Paper Feeder Unit PF-602m, Paper Feeder Unit PF-707, Paper Feed Unit PF-707m, Multi Bypass Tray MB-506, Large Capacity Unit LU-202m, Large Capacity Unit LU-202XL, the upper tray / lower tray of Post Inserter PI-502, upper tray / lower tray of Post Inserter mounted on Folding Unit FD-503, or the cover tray of Perfect Binder PB-503, the tray of Banner Tray Unit MK-740, or the tray of Output tray reinforcing unit for banner MK-740m.
22	Machine status indicator/left	Displays the current time or the status of the image controller.
23	Shortcut key	Display up to 6 Copy Mode Memory shortcut keys.
24	[Store Setting]	Holds jobs to be copied or saves them on the HDD.
25	Color setting keys	Selects one for color mode from [Single Color], [Black], [Full Color], or [Auto Color].
26	Direction keys	Selects the direction of the original placed on ADF or the original glass .
27	[Separate Scan]	Temporarily saves the scanned image information of originals to be copied in memory. This button is used for printing multiple originals that are scanned separately at one time.
28	Message area	Displays messages concerning the current status of the machine, prohibited matters at the time, or required operations.