





5 Loading the System

Document Orientation

The touch screen shows how to load documents and envelopes into the feeders. The table shows the meaning of the symbols:


	Address carrier face up and leading (top address)
	Address carrier face down and trailing (top address)
	Enclosure face up
	Enclosure face down

Document Feed Trays

Install the Document Feed Trays


Place the document feeder trays in position:

1. Hold the document feeder tray slightly inclined as shown in the figure.

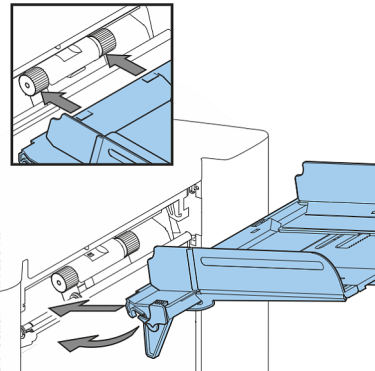

2. Place the front end of the document feeder tray underneath the two black rollers.

3. Move the document feeder tray upwards (lifting the black rollers), until it is possible to 'hook' the feeder tray into place.

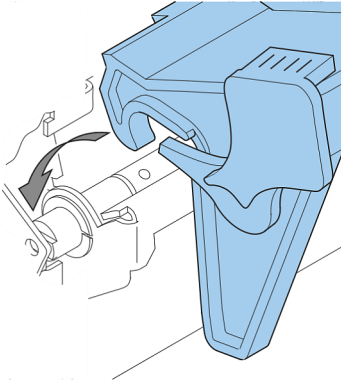


4. Move the document feeder tray towards the machine and move the hooks over the mounting points (on both sides).
5. Let the document feeder tray rest on the machine.

Adjust the Side Guides


To adjust the side guides it is best to remove the document feeder tray from the feeder as follows:

1. Push handle **A** downwards.

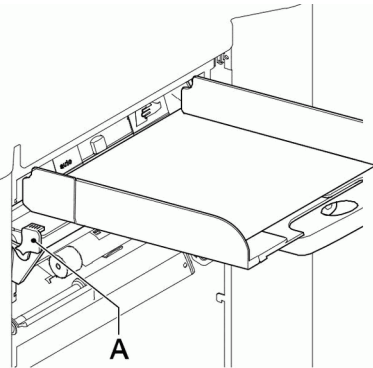

2. Lift the document feeder tray upwards to unhook it and then pull it out from the feeder.

- Loosen the knob **B** half a turn.

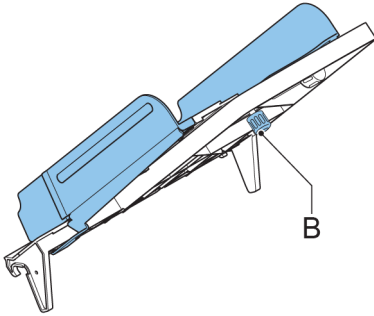


- Grab the side guides in the middle and push them apart as far as possible.
- Put a small stack of documents between the side guides.
- Grab the side guides in the middle and push them towards the documents. The space between the side guides and the documents should be such that the documents have just enough play to move freely.
- Re-tighten knob **B**.
- Remove the stack of documents.
- Replace the document feeder tray (see [Installing the Document Feeder Trays](#) on page 46).

Load Documents

Fill the document feeder tray as follows:

- Open the left-hand side guide **A** by turning it downwards. The feed rollers will automatically be lifted.

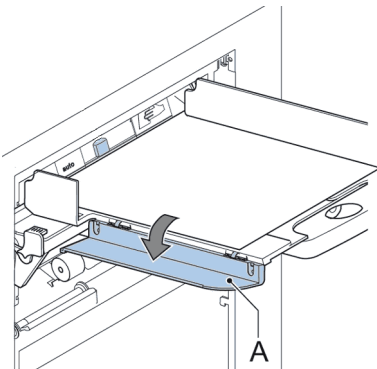

- Place a stack of documents between the side guides.

3. Turn the left side guide upwards again.

Document Separation

The term 'Document separation' refers to the adjustment required for separating the upper document from the rest of the documents in the stack. This prevents pulling too much documents from the stack at the same time.

The document separation for the automatic feeders is set automatically; there are no manual adjustments needed.

Feeders 3st can be special feeders. The document separation for special feeders must be adjusted manually. While special feeder trays fit in all positions, adjusting the separation is only possible when they are fitted on position 1 and 2.


To adjust the separation of special feeders follow the instructions as described in [Adjust the Separation of Special Feeders](#) on page 35.

maxiFeeder

Adjust the maxiFeeder Side Guides

Adjust the side guides:

1. Take a stack of documents/BREs and place them in the feeder tray. BREs with flap down and leading (top side pointing to system).

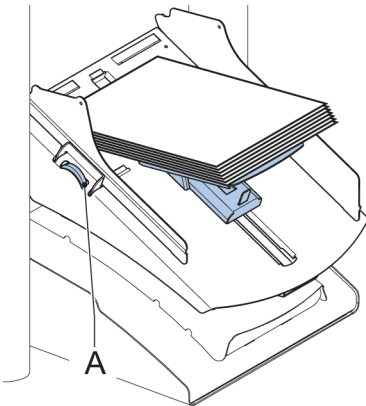


2. Adjust the side guides by turning the thumb wheel **A** such that the documents/BREs just fit and can move without resistance. Too much play causes skewing.

Adjust the maxiFeeder Document Separation

When the maxiFeeder is used at an automatic separation feeder, the separation is set automatically.

The maxiFeeder can also be used on a feeder position with a manually adjusted separation. To adjust, proceed as follows:

1. Remove the document feeder trays 2 and 3.

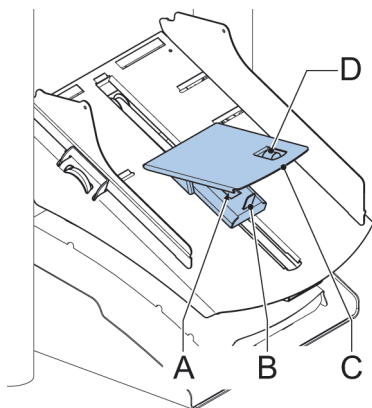

The lowest feeder is feeder 1.

2. Squeeze the two blue handles **A** and **B** and shift the feeding plate **C** as far as possible to the front.
 3. Push knob **D** forward until it clicks.
 4. Place a document/BRE on the feeder tray and slide it in the system till the leading edge is not visible anymore. Turn knob **D** counterclockwise if the separation is set to narrow.
 5. Push the document/BRE between the rollers.
 6. Turn knob **D** clockwise to get more resistance and counterclockwise if the separation is set to narrow.
The separation is adjusted correctly when a slight resistance is felt on the document/BRE.
 7. Pull knob **D** back when ready.
 8. Replace the document feeder trays 2 and 3.
-

Load Documents (maxiFeeder)




When loading the maxiFeeder, make sure that the document/BREs are positioned parallel in relation to the feeding plate assembly to ensure correct feeding.

The feeding plate assembly will be shifted up automatically (when the system starts processing) until documents/BREs are underneath the rubber paper pullers.




In case of long documents, use the feeding plate extension B to support the documents.

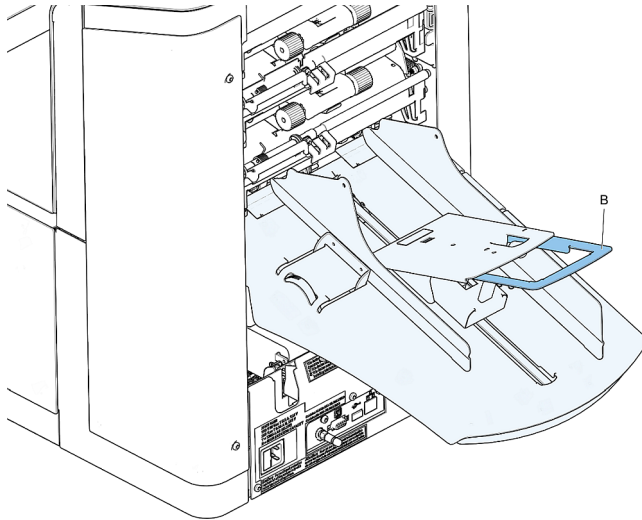

To load documents:

1. Squeeze the two blue handles **A** and **B**.

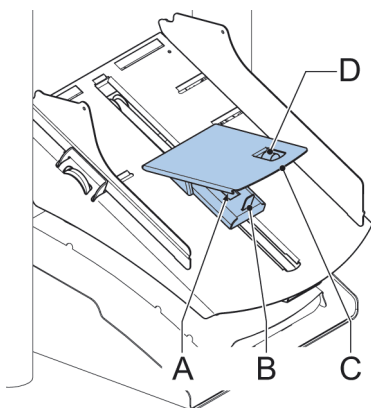


2. Shift the feeding plate assembly **C** to the rear position.
3. Loosen the stack of documents and place them in the feeder tray. BREs with flap down and leading (top side pointing to system).

Loading Envelopes


Before you load the envelopes, make sure the envelope separation and side guides are correctly set. Proceed as follows:

1. Rotate thumb wheel **D** to move the side guides **C** apart.

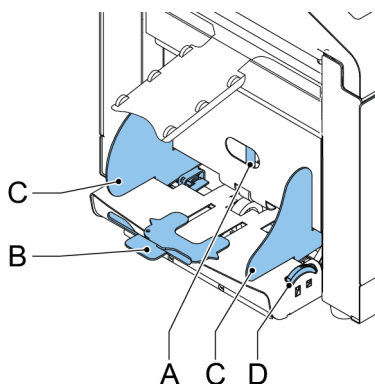


If the distance between the side guides is too large, the envelopes will twist sideways, when transported into the machine.

- Turn knob **A** counter-clockwise as far as possible.

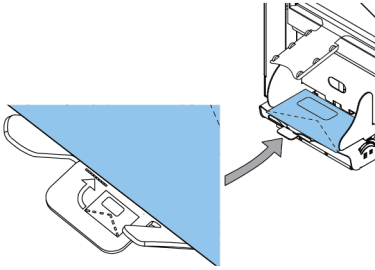


- Slide an envelope (with closed flap) between the rollers in the machine and turn knob **A** clockwise until a slight resistance is felt when moving the envelope in and out of the machine.
- When the resistance is too high, turn knob **A** counter-clockwise, until only a slight resistance is felt.
- Place the bottom envelope between the rollers (flap down and trailing - bottom side of the envelope pointing to the machine).

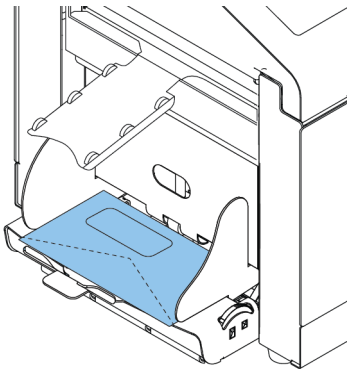

- Loosen the stack of envelopes, and place the stack on top of the bottom envelope.
- Shift envelope support **B** in or out, so that the flap side of the envelope is lifted approximately 20 mm (0.8").
- Turn envelope support **B** so the weight of the envelopes is evenly distributed on both sides.

Fill the Sealing Liquid Reservoir

1. Open the front cover **B**.

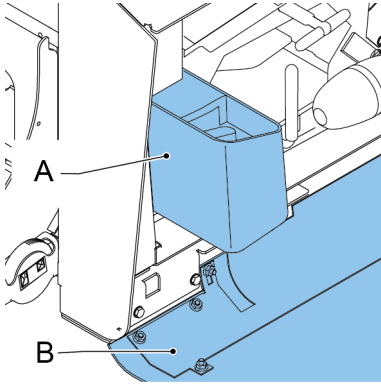

2. Fill the reservoir **A** to the "Max" lip with sealing liquid.
3. Close the front cover **B**.

Before starting the job, wait approximately 5 minutes for the brushes to moisten or use moistened brushes. For instructions on the installation of brushes, see the User Guide, section Clean and replace brushes.
